 


BAUHN®

Version 1.1

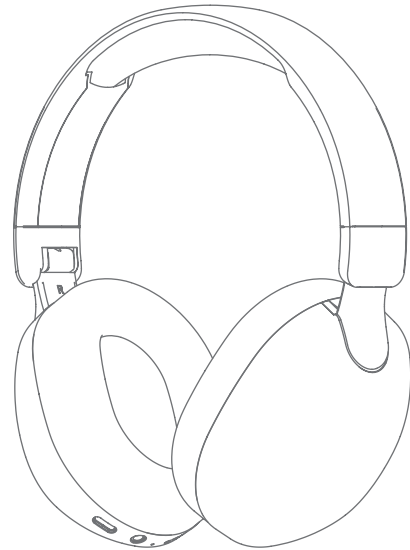

WIRELESS HEADPHONES

USER GUIDE

CE220735  
12/24

### SAFETY WARNINGS

- Headphones can deliver sounds at loud volumes and high-pitched tones. Exposure to such sounds can result in permanent hearing loss or damage. The volume level may vary based on conditions such as the phone you are using, its reception and volume settings and the environment. Please read the safety guidelines below prior to using these headphones.
- Prior to using this product follow these steps:
  - Before putting on the headphones, turn the volume control to its lowest level.
  - Put the headphones on.
  - Slowly adjust the volume control to a comfortable level.
- During the use of this product:
  - Keep the volume at the lowest level possible and avoid using the headphones in noisy environments where you may be inclined to turn up the volume.
  - If increased volume is necessary, adjust the volume control slowly.
  - If you experience discomfort or ringing in your ears, immediately discontinue using the headphones and consult a physician.
- With continued use at high volume, your ears may become accustomed to the sound level, which may result in permanent damage to your hearing without any noticeable discomfort.

### CAUTION

- Using the headphones while operating a motor vehicle, motorcycle, watercraft or bicycle may be dangerous, and is illegal in some jurisdictions. Check your local laws. Use caution while using your headphones when you are engaging in any activity that requires your full attention. While engaging in any such activity, removing the headphones from your ear area or turning off your headphones will keep you from being distracted, to avoid accident or injury.
- If you have a pacemaker or other electrical medical devices, you should consult your physician before using the product.
- This package contains small parts that may be hazardous to children. Always store the product out of reach of children. The bags themselves or the many small parts they contain may cause choking if ingested.
- Never try to dismantle the product yourself, or push objects of any kind into the product, as this may cause short circuits which could result in a fire or electric shock.
- None of the components can be replaced or repaired by users. Only authorized dealers or service centres may open the product. If any parts of your product require replacement for any reason, including normal wear and tear or breakage, contact your dealer.
- Avoid exposing your product to rain, moisture, or other liquids.
- If the product overheats, has been dropped or damaged or has been dropped in a liquid, discontinue use.
- Dispose of the product according to local standards and regulations.
- When you disconnect the power cord or any enhancement, grasp and pull the plug, not the cord. Never use a charger that is damaged.
- Attention should be drawn to the environmental aspects of battery disposal.
- The use of apparatus in moderate climates.
- This product shall not be connected to power supply source exceeding PS1. 5V d.c. 15W.

### CAUTION: Risk of explosion

- If the battery is replaced by an incorrect type.
- If the battery is subjected to high or low extreme temperatures that a battery can be subjected to during use, storage or transportation.
- If the battery is subjected to low air pressure at high altitude.
- Replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types).
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.

- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- Do not dispose of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Do not leave a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- Do not expose the battery to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.



No charging device is included with this radio equipment.



The power delivered by the required charger (not included) must be between min 2.5 Watt required by the radio equipment, and max 5.0 Watt in order to achieve the maximum charging speed.



- High sound pressure
- Hearing damage risk
- Do not listen at high volume levels for long periods

 
### IN THE BOX

- Wireless Bluetooth headphones
- USB-C charging cable
- User guide\*
- Warranty card\*


\*Not pictured



### FUNCTIONS

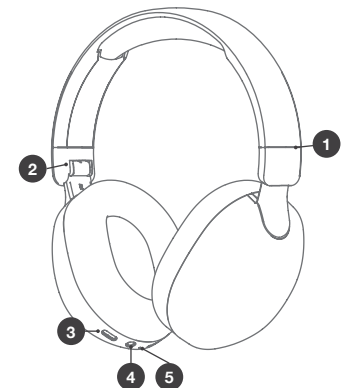

 - Adjustable slider
- Folding bracket
- Charging port
- 3.5mm AUX audio port
- LED light
- Volume + / Next
- Multi-function button
- Volume - / Previous
- Power button
- Micro SD port

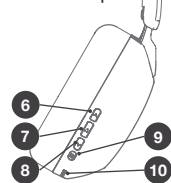

### CHARGING THE BATTERY

Before first use, it is recommended you charge your headphones for a minimum of 1 hour

 
- Insert the small end of the included USB-C cable into the USB-C connector on the headphone's right ear cup
- Connect the other end of the charging cable to a USB port on your PC, laptop, wall outlet adapter or other charging device
- The LED light will show a solid red colour to indicate charging is active
- The light will turn blue when fully charged

### NOTE:

- Charge only with 5V DC input
- Use only the original USB-C charging cable to avoid any damage
- When the LED flashes red, the battery is low, charge the headphones

### POWER ON/OFF

- Press and hold the power button for three seconds
- When powered on successfully the headphones will announce 'power on' and the power light will turn on
- To power off the headphones press and hold the power button for three seconds
- The headphones will announce 'power off' and the light will turn off

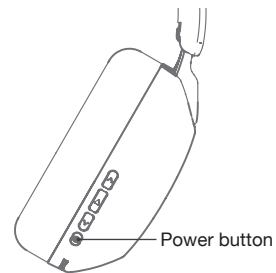


## PAIRING

1. With your headphones powered on the indicator light will flash red and blue and a voice will announce 'pairing' to indicate your headphones are in pairing mode. If you are already connected to a device turn your headphones off first then hold the multi-function button down for 4 seconds to turn on and enter pairing mode again
2. Enable Bluetooth on your device, search for and select CE220735 from the list to connect.
3. When the headphones are successfully paired with your device, your headphones will announce 'connected' and the LED will be solid blue to indicate your headphones are powered on and paired successfully.

**NOTE:** On first use the headphones should automatically enter pairing mode

## LED

 1. Connected: LED glows solid blue
2. Charging: LED glows solid red
3. Fully charged: LED glows solid blue
4. Low battery: LED flashes red

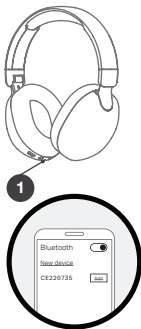

## LISTENING TO YOUR DEVICE

Once you have successfully paired to a device, you can play, pause, track forward, track backward and change the volume using the headphone controls/device controls

## CONTROLS

Power-on	Hold power button for 3 seconds
Power-off	Hold power button for 3 seconds
Answer/end call	Press multi-function button
Ignore call	Hold multi-function button for 1.5s
Previous track	Long press Volume - / Previous
Next track	Long press Volume +/Next
Volume up	Short press Volume +/Next
Volume down	Short press Volume - / Previous
Playback/Pause	Press multi-function button

## USING THE AUX PORT

The AUX port can be used to connect to a non-wireless device or for listening to music when the headphone batteries have been drained

1. Connect a 3.5mm audio cable to the aux-in jack located on the right earcup
2. Connect the other end of the audio cable to the audio jack

**NOTE:** When connected via audio cable, the Bluetooth function and controls are disabled. You cannot control playback using the headphone controls when connected via aux-in. The headphones will not be discoverable on Bluetooth

## BATTERY CARE

- Make sure that your headphones are switched OFF after use
- Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime
- Before storing the headphones for long periods of time, be sure to fully charge the battery
- When the battery is low and flashing red you must charge the headphones
- If the battery is completely discharged, the headphones cannot be turned on immediately when the charger is connected. Allow a depleted battery to charge for a few minutes before turning on the headphones
- Always try to keep the battery between 15°C and 30°C. A product with a hot or cold battery may not work temporarily, even when the battery is fully charged

## TECH SPECS

Driver Unit: 40mm  
Bluetooth Version: 5.3  
Transmission Range: Up to 10 metres  
Playback time: Up to 8 hours (50% Volume)  
Battery: 400mAh Lithium Battery  
Power Input: DC 5V, 1A  
Operation frequency band: 2402MHz-2480 MHz  
Maximum radio-frequency power transmitted: less than 20dBm

## AFTER SALES SUPPORT

If you experience any issues with this product or its performance is not what you had expected, please contact us at Balco Brands

It is likely that we can resolve any problems for you via phone or email

Phone: 0800 496 9698  
 1800 816994

Email: [UK-IRE@balcobrands.com](mailto:UK-IRE@balcobrands.com)

This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE). This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

Hereby, Balco Brands declares that the radio equipment Premium Wireless Earbuds is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://balcobrands.com/download/CE220735-ECDOC.PDF>