

## SAFETY WARNINGS

- Only use attachments/accessories specified by the manufacturer
- To avoid accidental ingestion, keep the earbuds away from children and pets
- The earbuds contain a lithium-ion battery, and may be hazardous if swallowed
- If ingested, seek immediate medical attention
- When not in use, store the earbuds in the charging case with the lid closed, and keep out of reach of children and pets
- Do NOT use the earbuds at a high volume for any extended period
- To avoid hearing damage, use your earbuds at a comfortable, moderate volume level
- Turn the volume down on your device before placing the earbuds in/on your ears, then turn the volume up gradually until you reach a comfortable listening level
- Use caution and follow applicable laws regarding mobile phone and headphone use if using the earbuds for phone calls while driving
- Some jurisdictions impose specific limitations, such as single earpiece configuration, on the use of such products while driving
- DON'T use the earbuds for any other purpose while driving
- Focus on your safety and that of others if you use the earbuds while engaging in any activity requiring your attention, e.g., while riding a bicycle or walking in or near traffic, a construction site or railroad and follow applicable laws regarding headphone use, etc.
- Remove the earbuds or adjust your volume to ensure you can hear surrounding sounds, including alarms and warning signals
- Do NOT allow children to use the earbuds. Contains small parts which may be a choking hazard
- Do NOT submerge or expose the earbuds for extended period to water, or wear while participating in water sports, e.g., swimming, water-skiing, surfing, etc
- To reduce the risk of injury, close supervision is necessary when the charging case is used near children
- Do not expose charging case to water, rain, liquids or snow
- Do not use the charging case in excess of its output rating
- Do not use a charging case that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury to persons
- Do not disassemble the charging case. Incorrect reassembly may result in risk of fire or injury to persons
- Do not open, crush, or expose a charging case to fire, or excessive temperature. Exposure to fire or temperature above 45°C may cause explosion
- Have servicing performed by a qualified repair person using only identical replacement parts
- Do NOT make unauthorized alterations to this product
- Use this product only with an agency approved power supply which meets local regulatory requirements (e.g., CE)
- Wipe off sweat from the earbuds and the charging case before charging
- This product contains magnetic material. Consult your physician on whether this might affect your implantable medical device
- Excessive sound pressure from earphones and headphone can cause hearing loss
- Attention should be drawn to the environmental aspects of battery disposal
- Use only with charger base provided with the earbuds
- Use of apparatus in moderate climates
- This product shall not be connected to power supply source exceeding PS1. 5V d.c. 15W.

### CAUTION: Risk of explosion:

- If the battery is replaced by an incorrect type.
- If the battery is subjected to high or low extreme temperatures that a battery can be subjected to during use, storage or transportation.
- If the battery is subjected to low air pressure at high altitude.
- Replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types).
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- Do not dispose of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Do not leave a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- Do not expose the battery to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.



- High sound pressure
- Hearing damage risk
- Do not listen at high volume levels for long periods



No charging device is included with this radio equipment.



The power delivered by the required charger (not included) must be between min 2.5 Watt required by the radio equipment, and max 5.0 Watt in order to achieve the maximum charging speed.

## IN THE BOX

 
1. Earbuds
2. Charging case
3. 3 pairs of silicone tips
4. USB-C charging cable
5. User guide\*
6. Warranty card\*

\*Not pictured

1



2

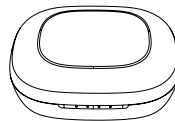

3




4




## FUNCTIONS

 - a. Touch control area
- b. LED indicator light
- c. Microphone (internal)\*  
*\*Not pictured*
- d. Charging case charging port
- e. Charging case indicator lights

Note: Product rating label is on the bottom of charging case



Front of case

 

Back of case

## WIRELESS SPORTS EARBUDS WITH CHARGING CASE

### USER GUIDE

## CHARGING

### Charging case

1. Connect the USB C end of the supplied USB C charging cable into the charging case charging port
2. Connect the USB end of the charging cable into PC or AC/DC wall adaptor (not provided)

While charging the charging case, 4 white LED lights will display the battery status of the charging case

- Battery is 100% charged, all 4 white lights will remain solid
- Battery is 75% charged, three LED lights will be white, and the fourth LED will flicker white
- Battery is 50% charged, two LED lights will be white, and the third LED will flicker white
- Battery is 25% charged, one LED light will be white, and the second LED will flicker white
- Battery is less than 25% charged, the first LED will flicker white

### Earbuds

The earbuds will start charging when put back into the charging case. A red LED will be displayed if the earbuds are charging, once fully charged this light will turn off.

## TURNING ON/OFF

### Turning on

The earbuds will automatically turn on when removed from the charging case. To manually power the earbuds on hold the touch surface for 5 seconds and you will receive a prompt

### Turning off

The earbuds will automatically turn off when placed in the charging case. To manually power the earbuds on hold the touch surface for 5 seconds and you will receive a prompt

## PAIRING

1. Place both earbuds into the charging case to activate the earbuds
2. Take both earbuds out from the charging case, they will power on and connect with each other automatically
3. The LED will flicker Red/Blue to indicate that the earbuds are now in pairing mode
4. Enable Bluetooth on your device and select “CE220799-E” from the list to connect
5. Your device will show if it is connected successfully

**NOTE:** The earbuds will automatically connect to your last previously connected device. To connect to a new device first disconnect the earbuds from the currently paired device.

## TOUCH CONTROL AREA

You can control a variety of different functions on your mobile device using the touch control area on your earbuds

Play/Pause Music	Short press either the left or right earbud
Next Track	Long press right earphone 2 seconds
Previous Track	Long press left earphone 2 seconds
Answer Call	With a call incoming short press either the left or right earbud
End Call	During a call short press either the left or right earbud
Reject Incoming Call	With a call incoming long press either the left or right earbud
Activate Voice Assistant	Double click either left earphone or right earphone to turn on voice assistant

## TECH SPECS

Driver Unit:	8mm
Impedance:	32Ω
Bluetooth Version:	5.4
Transmission Range:	Up to 10 metres
Playback Time:	Up to 5 hours
Charging Case Battery:	400mAh 3.7V 1.48Wh
Earbuds Battery:	40mAh 3.7V 0.148Wh
Power Input:	DC 5V 500mA
Earbuds Water Resistant: (Not including charging case)	IPX5
Operation frequency band:	2402MHz–2480 MHz
Maximum radio-frequency power transmitted:	Less than 20dBm
Operating ambient temperature:	0- 45°C
Storage and transportation ambient temperature:	0-45°C
Altitude not higher than 2000m (air pressure not less than 80kPa)	

## AFTER SALES SUPPORT

If you experience any issues with this product or its performance is not what you had expected, please contact us at Balco Brands

It is likely that we can resolve any problems for you via phone or email

Phone:  0800 496 9698  
 1800 816994

Email: [UK-IRE@balcobrands.com](mailto:UK-IRE@balcobrands.com)



This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE). This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.



Hereby, Balco Brands declares that the radio equipment Premium Wireless Earbuds is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://balcobrands.com/download/CE220799-E-ECDOC.PDF>