

3-IN-1 CAMERA GRIP POWERBANK

USER GUIDE

CE220800
04/2025

SAFETY WARNINGS

- Do not disassemble or throw into fire or water, to avoid damage
- Keep this product in a dry place. Never place or use the product in wet or dirty conditions
- Do not squeeze or puncture the Power Bank to avoid electrolyte leakage of lithium-ion battery
- Handle with care. Avoid dropping this device, especially on a hard surface. Do not crush, bend, deform, puncture, shred or submerge this device in liquid
- Do not use Power Bank in severely hot, humid or corrosive environments, to avoid circuit damage and leakage
- Do not place too close to magnetic strips or chip cards (ID card, credit cards, etc.) to avoid magnetic failure
- Please keep a distance of at least 30cm between implantable medical devices (pacemakers, implantable cochlear, etc.) and the Wireless Charger, to avoid potential interference with the medical device
- Ensure children do not play with the Power Bank & Wireless Charger. This is not a toy
- Do not use damaged power cords, plugs or loose electrical sockets
- Only use original cable and reputable third-party chargers
- Do not use a damaged cable or power charger to charge the Power Bank
- Use only an adaptor with output of 5.0-12.0V DC to charge the Power Bank. Incorrect voltage may cause damage to the product or associated accessories
- Do not clean the Power Bank with harmful chemicals or detergents
- Misuse, dropping or excessive force may cause damage to the charging pad
- Do not touch the device, power cords, plugs, or the electric socket with wet hands or other wet body parts
- Do not place other materials, like metal objects, magnets, and magnetic stripe cards, between the mobile device and the wireless charger pad
- This product may become warm after prolonged use. If you feel that the product's temperature is too warm, place it in a dry, cool area and let it rest until the grip temperature feels comfortable.
- The battery should be charged at least every three months to avoid shortening the battery life
- After charging your device, please remove the charging cable to avoid unnecessary consumption of the battery
- Do not charge this Power Bank whilst in use
- Never use the Power Bank if any part of it is damaged
- Attention should be drawn to the environmental aspects of battery disposal
- Use of apparatus in moderate climates
- CAUTION: Risk of explosion:
- If the battery is replaced by an incorrect type.
- If the battery is subjected to high or low extreme temperatures that a battery can be subjected to during use, storage or transportation.
- If the battery is subjected to low air pressure at high altitude.
- Replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types).
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

NOTE:

- Not all phones are wireless charging compatible, check your phone specifications to ensure your phone is compatible
- Some phone cases may not be compatible with wireless charging
- When the mobile device is not placed on the charging area accurately, your mobile device may not charge properly



BAUHN®

3-IN-1 CAMERA GRIP POWERBANK

Warranty Details

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/ TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

1300 663 907

customercare@balcobrands.com


MODEL: CE220800 PRODUCT CODE: 719482 04/2025

1
YEAR WARRANTY

IN THE BOX


- 3-in-1 camera grip powerbank
- Magnetic connection ring
- USB charging cable
- User guide*
- Warranty card*

*Not pictured

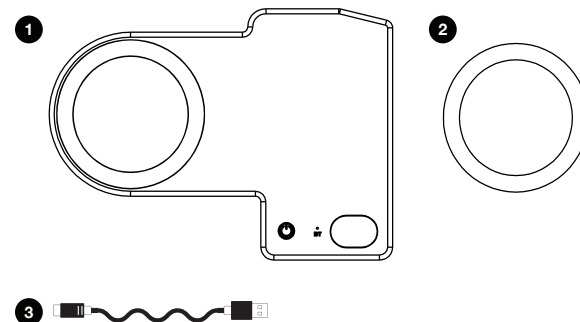

FUNCTIONS

- Magnetic wireless charging pad
- 10,000 mAh Powerbank
- Lanyard hole
- Tripod mount
- USB-A Out
- USB-C In/Out
- Power button
- BT light indicator
- LED display
- Shutter button (on top)

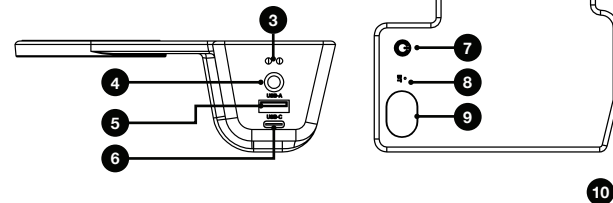

CHARGING THE POWERBANK

1. Plug the USB-C end of the supplied USB charging cable into the charging USB-C input port on the powerbank.
2. Plug the large connector into the USB port on a computer or a 5V to 12V DC USB adapter (not included) and plug into a wall socket.
3. As the powerbank charges, the digital display on the front will blink, displaying the current charge level of the powerbank.
4. Once the display on the powerbank reaches 100, it is fully charged.

NOTE:

- Charge only with 5V to 12V input
- Use only the original USB-C charging cable to avoid any damage
- Remember to turn off the power supply before removing the charging cable.

INSTALLING THE MAGNETIC CONNECTION RING

The magnetic connection ring can be attached directly to your phone or case, enabling magnetic connection with any device (not required for Mag-Safe devices). Magnetic connection may not work with non-magnetic cases if the ring is installed direct onto your phone.

1. Choose installation location
2. Clean the installation surface of the phone or case with a soft cloth and cleaning solution
3. Align the ring with your phones wireless charging area

NOTE: To locate the wireless charging area, place a wireless charging device on the back of your phone and gently move it around until charging begins. Adhere the ring to this spot for optimal functionality.

4. Peel off the adhesive backing from the magnetic connection ring and carefully press onto the cleaned surface
5. Apply firm pressure for 30 seconds
6. Allow the ring at least 30 minutes to set before use

CHARGING YOUR DEVICE

Wireless Charging

1. Connect the magnetic wireless charging pad on the 3-in-1 Camera Grip Powerbank to the back of a wireless charging compatible phone with magnetic connection

NOTE: If you phone does not have magnetic connection, install the included magnetic connection ring first

2. Power on the 3-in-1 Camera Grip Powerbank by pressing the power button
3. The phone will begin charging within 10 seconds and a green lightning bolt will illuminate on the display to indicate charging

USB Charging

1. Connect one end of a charging cable into the bottom of the 3-in-1 Camera Grip Powerbank and the other into the device you will be charging
2. The device will begin charging and a green lightning bolt will illuminate on the display to indicate charging

NOTE:

- Both USB-A and USB-C can be used as output

PHOTOGRAPHY MODE

1. Connect the magnetic connection pad on the 3-in-1 Camera Grip Powerbank to the back of a phone with magnetic connection

NOTE: If you phone does not have magnetic connection, install the included magnetic connection ring first

2. Press and hold the shutter button for 3 seconds to activate Bluetooth function.
3. The blue BT indicator light will flash to signify pairing mode

NOTE: If Bluetooth is not paired for 10 minutes, it will turn off and the Bluetooth indicator light will turn off

4. Enable Bluetooth on your device and select “CE220800” from the list to connect
5. After successful pairing, the blue light will remain on.
6. Click the shutter button to take a photo or begin recording when in the camera, and the blue light will flash once per click
7. When Bluetooth is connected but no camera or video action is taken, Bluetooth will automatically turn off and the blue light will turn off after 60 minutes
8. Press and hold the shutter button for 3 seconds to turn off the Bluetooth function, and the blue light will turn off

TECH SPECS

Battery:	10,000mAh
Bluetooth Version:	5.4
Wireless charging:	Up to 15W
USB-A Output:	Up to 22.5W
USB-C Output:	Up to 20W
Power Input:	5V ⚡ 3A, 9V ⚡ 2A, 12V ⚡ 1.5A (MAX 18W)

AFTER SALES SUPPORT

If you experience any issues with this product or its performance is not what you had expected, please contact us at Balco Brands

It is likely that we can resolve any problems for you via phone or email

We can be reached on:

Phone: 1300 663 907 (Mon - Fri; 8:30am - 6:00pm AEST)
Email: customercare@baltobrand.com
Web: www.baltobrand.com



3-IN-1 CAMERA GRIP POWERBANK

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:

Balco Brands Pty Ltd
PO Box 537 Bayswater Business Centre, Victoria, Australia
1300 663 907 - Hours: Mon-Fri 8:30am - 6:00pm AEST
customercare@baltobrand.com

AFTER SALES SUPPORT

1300 663 907

customercare@baltobrand.com

MODEL: CE220800 PRODUCT CODE: 719482 04/2025

