 


BAUHN®

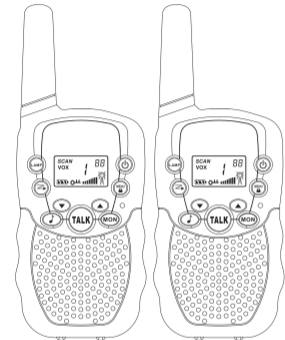

## KIDS WALKIE TALKIE PACK (2 UNITS)

### USER GUIDE

CE220854-WT  
12/2025

This pack includes two walkie-talkie units - communication devices operating on mobile radio frequencies. They feature 40 channels and a backlit LCD screen, enabling free communication over distances of up to 3 km in open areas.

**Note:** Talking distance may vary due to surrounding interference.

**IMPORTANT:** Please read these user instructions carefully before use and keep them for future reference.

#### SPECIFIC RECOMMENDATIONS

- This product is not to be dropped or subjected to impact. Children must use this product under the supervision of a parent or guardian.
- Do not stare at the light source.
- If you use any personal medical devices, consult your doctor before using this equipment.
- To avoid burns, do not use the device if the antenna is damaged in any way.
- Do not use the device in potentially explosive environments (e.g., near petrol pumps, on a boat's lower deck, or around fuel storage or chemicals).
- If travelling by car or bike, stop before using the device.
- Switch off the device when on an airplane or in a hospital.
- Avoid using the device near radios to prevent interference.
- Remove the batteries if the device will not be used for a long period.
- Keep the transmitter and antenna at least 5 cm from your face. Hold the antenna upright and speak normally.
- Clean the device with a damp cloth; avoid cleaning agents or solvents.
- Do not modify the device. If damaged, have it inspected by a qualified professional.
- This device cannot be used to contact emergency services.
- Do not dispose of batteries in household trash or incinerate.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of battery, that can result in an explosion.
- Even used batteries may cause severe injury or death.
- No parts are user serviceable. Do not disassemble any part of the product.
- Non-rechargeable batteries are not to be recharged.

- Do not force discharge, recharge, disassemble, heat above 50°C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Do not place or drop into water or other liquid.
- Do not use in rain or submerge in water. Keep the product dry.
- Make sure insert the batteries with the correct polarity.
- Never short-circuit the supply terminals of batteries.
- Replacement of a battery with an incorrect type that can defeat a safeguard.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; and a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.



BAUHN®

### KIDS WALKIE TALKIE PACK

### Warranty Details

REGISTER YOUR PURCHASE AT [www.aldi.com.au/en/about-aldi/product-registration/](http://www.aldi.com.au/en/about-aldi/product-registration/) TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT  
1300 663 907

customercare@balcobrands.com




MODEL: CE220854-WT PRODUCT CODE: 686213 12/2025



### KNOW YOUR DEVICE

- Scanning Indicator – Displayed when in scan mode
- VOX Indicator
- Lamp (LAMP) Button
- Battery Level Indicator
- Scan (⇌) Button
- Keypad Lock Indicator
- Down Button (▼) – Adjusts volume or settings
- Call Button (📞) – Sends a call tone
- Push-to-Talk (TALK) Button
- Loudspeaker
- Antenna
- Channel Indicator – Shows selected channel
- CTCSS/Menu Option Value – Displays sub-channel or menu setting
- Power Button (⏻) – Turns the device on/off
- RX Icon (📡) - Displayed when receiving a signal  
TX Icon (📡) - Displayed when transmitting a signal
- Menu Button – Access menu settings
- Microphone
- Volume Level Indicator
- Monitor (MON) – Enables continuous reception

- Up Button (▲) – Adjusts volume or settings
- 2.5mm Earphone Jack
- Lamp – Built-in light
- Belt Clip Release
- Belt Clip
- Batteries
- Battery Compartment

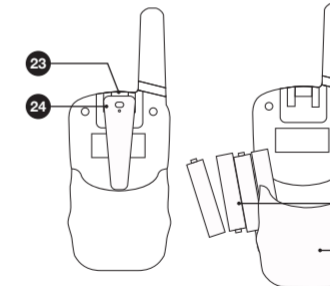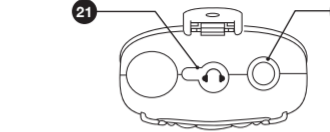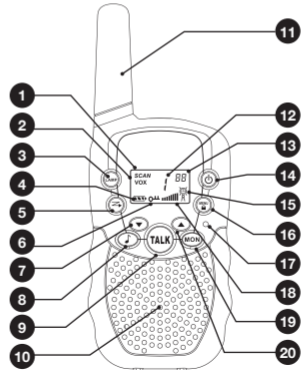

### BEFORE YOU BEGIN

To remove the belt attachment and insert batteries:

- Lift the Belt Clip Release (23) and slide the Belt Clip (24) upward.
- Open the Battery Compartment (26) by sliding down.
- Insert AAA Batteries (25) - ensuring correct polarity alignment.
- Close the Battery Compartment (26) securely.
- Reattach the Belt Clip (24) to the Walkie Talkie.

### USING YOUR WALKIE TALKIE

- Turning the Device On/Off**  
Hold the Power Button (14) for 3 seconds. A beep will sound to confirm power on or off.
- Adjusting the Volume**
  - Press Up Button (20) to increase the volume.
  - Press Down Button (7) to decrease the volume.

**NOTE:** The current volume level is shown on the display Volume Level Indicator (18).

### 3. Battery Level Indicator

The battery icon on the display shows the remaining power level:

- Full – Battery at full capacity
- Two-thirds – Approximately 66% power remaining
- One-third – Approximately 33% power remaining
- Empty – Battery nearly depleted

**Low Battery Warning:** When the battery is low, the icon will flash, and a warning beep will sound. Replace the batteries with new ones as needed.

### 4. Receiving/Transmitting Communication

- The device is in Reception Mode when idle and lit.
- Press Call Button **(8)** to switch to Transmission Mode.
- To send a voice message, press and hold the TALK Button **(9)** while speaking into the Microphone **(17)**.
  - a. Hold the microphone at least 5 cm from your mouth.

- a. Release the button when finished to end transmission.
- b. Release the button when finished to end transmission.
- c. A beep will sound on the other unit indicating readiness to reply.

**NOTE:** Both units must be on the same channel and CTCSS code.

### 5. Changing Channels

- Press Menu Button **(16)** once – the current channel flashes.
- Use Up Button **(20)** or Down Button **(7)** to change channels (1 – 40).
- Press TALK Button **(9)** to confirm.
- Auto Exit: After 15 seconds of inactivity, the device returns to standby mode.

### 6. CTCSS (Sub-Channels)

- To avoid interference from others using the same channel, you can set a CTCSS code:
- Press Menu Button **(16)** twice – the current CTCSS code flashes.
  - Use Up Button **(20)** or Down Button **(7)** to select a code (1 – 99).
  - Select “OF” to disable.
  - Confirm with TALK Button **(9)**.

### 7. Monitor Mode

- Press and hold MON Button **(19)** to check for weak signals.
- Release to stop.

**NOTE:** CTCSS filtering is disabled in this mode.

### 8. VOX (Voice Activation)

- Press Menu Button **(16)** three times – VOX icon flashes.
- Use Up Button **(20)** to select sensitivity (1–3, where 3 is most sensitive).
- Use Down Button **(7)** to select “OF” to disable VOX.
- Confirm with TALK Button **(9)**.

**NOTE:**

- Pressing the TALK button **(9)** manually will override VOX Mode.
- You can talk without pressing the TALK button in **(9)** VOX Mode; Other buttons won't work while VOX Mode is on.
- To turn off VOX mode, press and hold the TALK button **(9)** until you hear a beep, then press the MENU button **(16)** to make adjustments.

### 9. Channel Scanning

- Press SCAN Button **(5)** – the Scan Icon **(1)** appears.
- Channels 1 – 40 will be scanned.
- Press Down Button **(7)** to scan in reverse.
- Once an active channel is found, scanning pauses.
- Scanning resumes when no signal is detected.
- Press TALK Button **(9)** to lock on the found channel.

### 10. Call Tones

Setting Call Tone:

- Press Menu Button four times – “CA” and tone number flash.
- Use Up Button **(20)** or Down Button **(7)** to select one of 10 tones.
- Confirm with TALK Button **(9)**.

Sending Call Tone:

- Briefly press CALL Button **(8)** to transmit the tone.

### 11. Key Tone On/Off

- Press Menu Button **(16)** five times – “to” is displayed.
- Press Up Button **(20)** or Down Button **(7)** to toggle between “ON” and “OF”.
- Confirm with TALK Button **(9)**.

### 12. Roger Beep On/Off

After releasing the TALK Button **(9)**, the unit will emit a Roger beep to confirm that you have stopped talking.

Steps to set the Roger Beep:

- Press Menu Button **(16)** six times – “ro” is displayed.
- Press Up Button **(20)** or Down Button **(7)** to toggle between “ON” and “OF”.
- Confirm with TALK Button **(9)**.

### 13. Button Lock

- Hold Menu Button **(16)** for 2 - 3 seconds to enable lock icon displays.
- Hold again to disable.

**NOTE:** The following buttons still function:

TALK **(9)**, CALL **(8)**, MON **(19)**, Lamp **(3)**, and Power **(14)**.

### 14. LCD Backlight

- Press any button (except Power) to activate the backlight.
- Light stays on for 5 seconds.

### 15. Earpiece Use

- Insert the earpiece plug into the Earphone Jack **(21)**.
- The earpiece button acts as TALK **(9)**.
- Speak into the earpiece microphone.

### 16. Battery Saving Mode

After a few seconds of inactivity, power-saving mode activates automatically. Reception is not affected. Standard mode resumes upon signal detection.

### 17. Built-In Flashlight

The built-in flashlight can be used for illumination.

- Use Lamp Button **(3)** to turn on/off.

**⚠ WARNING:** Do not stare at the light source.

## TECHNICAL SPECIFICATIONS

Specification	Details
Channels	40 (Australia)
Frequency Range	476 MHz
Communication Range	<del>Up to 3 km (open field)</del>
Battery Type	4 × AAA batteries - replaceable

## AFTER SALES SUPPORT

If you experience any issues with this product or its performance is not what you had expected, please contact us at Balco Brands

It is likely that we can resolve any problems for you via phone or email

We can be reached on:

Phone: 1300 663 907 (Mon - Fri; 8:30am - 6:00pm AEST)  
Email: [customercare@balcobrands.com](mailto:customercare@balcobrands.com)  
Web: [www.balcobrands.com](http://www.balcobrands.com)



**BAUHN**

**KIDS WALKIE TALKIE PACK**

**Repair and Refurbished Goods or Parts Notice**

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

**We recommend you save this data elsewhere prior to sending the product for repair.**

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

**Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.**

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:

Balco Brands Pty Ltd  
PO Box 537 Bayswater Business Centre, Victoria, Australia  
1300 663 907 - Hours: Mon-Fri 8:30am - 6:00pm AEST  
[customercare@balcobrands.com](mailto:customercare@balcobrands.com)

**AFTER SALES SUPPORT**

1300 663 907

[customercare@balcobrands.com](mailto:customercare@balcobrands.com)

MODEL: CE220854-WT PRODUCT CODE: 686213 12/2025

