

BAUHN®



KIDS WIRELESS HEADPHONES

USER GUIDE

CE220854-WH
12/2025

SAFETY WARNINGS

- Headphones can deliver sounds at loud volumes and high-pitched tones. Exposure to such sounds can result in permanent hearing loss or damage. The volume level may vary based on conditions such as the phone you are using, its reception and volume settings and the environment. Please read the safety guidelines below prior to using these headphones.
- Prior to using this product follow these steps:
 - Before putting on the headphones, turn the volume control to its lowest level.
 - Put the headphones on.
 - Slowly adjust the volume control to a comfortable level.
- During the use of this product:
 - Keep the volume at the lowest level possible and avoid using the headphones in noisy environments where you may be inclined to turn up the volume.
 - If increased volume is necessary, adjust the volume control slowly.
 - If you experience discomfort or ringing in your ears, immediately discontinue using the headphones and consult a physician.
- With continued use at high volume, your ears may become accustomed to the sound level, which may result in permanent damage to your hearing without any noticeable discomfort.

CAUTION

- This product is not to be dropped or subjected to impact. Children must use this product under the supervision of a parent or guardian.
- If you have a pacemaker or other electrical medical devices, you should consult your physician before using the product.
- Never try to dismantle the product yourself, or push objects of any kind into the product, as this may cause short circuits which could result in a fire or electric shock.
- None of the components can be replaced or repaired by users. Only authorized dealers or service centres may open the product. If any parts of your product require replacement for any reason, including normal wear and tear or breakage, contact your dealer.
- Avoid exposing your product to rain, moisture, or other liquids.
- If the product overheats, has been dropped or damaged or has been dropped in a liquid, discontinue use.
- Dispose of the product according to local standards and regulations.
- When you disconnect the power cord or any enhancement, grasp and pull the plug, not the cord. Never use a charger that is damaged.
- Attention should be drawn to the environmental aspects of battery disposal.
- The use of apparatus in moderate climates.
- This product shall not be connected to power supply source exceeding PS1. 5V d.c. 15W.

CAUTION: Risk of explosion:

- If the battery is replaced by an incorrect type.
- If the battery is subjected to high or low extreme temperatures that a battery can be subjected to during use, storage or transportation.
- If the battery is subjected to low air pressure at high altitude.
- Replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types).
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.



BAUHN®

KIDS WIRELESS HEADPHONES

Warranty Details

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/ TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

1300 663 907

customercare@bakcobrands.com

MODEL: CE220854-WH PRODUCT CODE: 686213 12/2025



IN THE BOX


- Kids wireless Bluetooth headphones
- USB charging cable
- AUX cable
- User guide*
- Warranty card*

*Not pictured



FUNCTIONS

- Adjustable slider
- Folding bracket
- Volume - / Previous
- Multi-function button
- Volume + / Next
- Microphone
- 3.5mm AUX audio port
- LED light
- Charging port
- Micro SD port

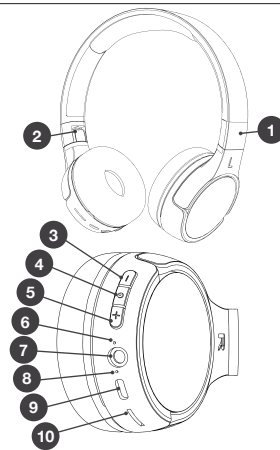

CHARGING THE BATTERY

Before first use, it is recommended you charge your headphones for a minimum of 1 hour


- Insert the small end of the included USB-C cable into the USB-C connector on the headphone's right ear cup.
- Connect the other end of the charging cable to a USB port on your PC, laptop, wall outlet adapter or other charging device.
- The LED light will show a solid red colour to indicate charging is active.
- The light will turn off when fully charged.

NOTE:

- Charge only with 5V DC input.
- Use only the original USB-C charging cable to avoid any damage.
- When the LED flashes red, the battery is low, charge the headphones.

POWER ON/OFF

- Press and hold the multi-functional button for three seconds.
- When powered on successfully, an audible prompt will be heard and the power light will turn on.
- To power off the headphones press and hold the power button for three seconds.
- The headphones will emit an alert sound and the light will turn off.

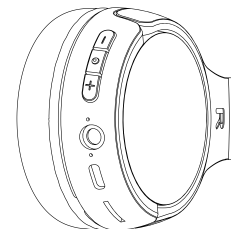

PAIRING

1. With your headphones powered on the indicator light will flash red and blue, and a chime will sound to indicate your headphones are in pairing mode. If you are already connected to a device turn your headphones off first then hold the multi-function button down for 4 seconds to turn on and enter pairing mode again.



2. Enable Bluetooth on your device, search for and select CE220854-WH from the list to connect.



3. When the headphones are successfully paired with your device, your headphones will chime again and the LED will be solid blue to indicate your headphones are powered on and paired successfully.

NOTE: On first use the headphones should automatically enter pairing mode.

LED

1. Connected: LED glows solid blue
2. Charging: LED glows solid red
3. Fully charged: LED light off
4. Low battery: LED flashes red

LISTENING TO YOUR DEVICE

Once you have successfully paired to a device, you can play, pause, skip to the next or previous track and change the volume using the headphone controls/device controls.

CONTROLS

Power-on	Hold power button for 3 seconds
Power-off	Hold power button for 3 seconds
Answer/end call	Press multi-function button
Ignore call	Hold multi-function button for 1.5s
Previous track	Short press
Next track	Short press
Volume up	Long press
Volume down	Long press
Play/Pause	Press multi-function button
Voice Assistant	Double press the multi-function button

USING THE AUX PORT

The AUX port can be used to connect to a non-wireless device or for listening to music when the headphone batteries have been drained

1. Connect a 3.5mm audio cable to the aux-in jack located on the right earcup.
2. Connect the other end of the audio cable to the audio jack.

NOTE: When connected via audio cable, the Bluetooth function and controls are disabled. You cannot control playback using the headphone controls when connected via aux-in. The headphones will not be discoverable on Bluetooth.

BATTERY CARE

- Make sure that your headphones are switched OFF after use.
- Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime.
- Before storing the headphones for long periods of time, be sure to fully charge the battery.
- When the battery is low and flashing red you must charge the headphones.
- If the battery is completely discharged, the headphones cannot be turned on immediately when the charger is connected. Allow a depleted battery to charge for a few minutes before turning on the headphones.
- Always try to keep the battery between 15°C and 30°C. A product with a hot or cold battery may not work temporarily, even when the battery is fully charged.

TECH SPECS

Driver Unit:	40mm
Bluetooth Version:	5.4
Transmission Range:	Up to 10 metres
Playback time:	Up to 10 hours (50% Volume)
Battery:	250mAh Lithium Battery
Power Input:	DC 5V, 1A

AFTER SALES SUPPORT

If you experience any issues with this product or its performance is not what you had expected, please contact us at Balco Brands.

It is likely that we can resolve any problems for you via phone or email.

We can be reached on:

Phone: 1300 663 907 (Mon - Fri; 8:30am - 6:00pm AEST)
Email: customercare@balcobrands.com
Web: www.balcobrands.com



BAUHN®

KIDS WIRELESS HEADPHONES

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:

Balco Brands Pty Ltd

PO Box 537 Bayswater Business Centre, Victoria, Australia

1300 663 907 - Hours: Mon-Fri 8:30am - 6:00pm AEST

customercare@balcobrands.com

AFTER SALES SUPPORT

1300 663 907

customercare@balcobrands.com

MODEL: CE220854-WH PRODUCT CODE: 686213 12/2025

