



WIRELESS HEADPHONES



BALCO™

AFTER SALES SUPPORT

854529



GB 0800 496 9698 IE 1800 816994



uk-ire@baltobrand.com

MODEL:
CE220818

11/2025

3

**YEAR
WARRANTY**

CONTENTS

1	Safety Warnings	3
2	Product Overview	5
3	Button Controls	6
4	Charging The Battery	6
5	Battery Care	6
6	Power On/Off	7
7	Pairing	7
8	Listening To Your Device	7
9	Using The AUX Port	7
10	Specifications	8
11	Warranty	9
11.1	Warranty conditions	9

1 SAFETY WARNINGS

Headphones can deliver sounds at loud volumes and high-pitched tones. Exposure to such sounds can result in permanent hearing loss or damage. The volume level may vary based on conditions such as the phone you are using, its reception and volume settings and the environment. Please read the safety guidelines below prior to using these headphones.

- Prior to using this product follow these steps:
 - a) Before putting on the headphones, turn the volume control to its lowest level.
 - b) Put the headphones on.
 - c) Slowly adjust the volume control to a comfortable level.
- During the use of this product:
 - a) Keep the volume at the lowest level possible and avoid using the headphones in noisy environments where you may be inclined to turn up the volume.
 - b) If increased volume is necessary, adjust the volume control slowly.
 - c) If you experience discomfort or ringing in your ears, immediately discontinue using the headphones and consult a physician.
- With continued use at high volume, your ears may become accustomed to the sound level, which may result in permanent damage to your hearing without any noticeable discomfort.

CAUTION

- Using the headphones while operating a motor vehicle, motorcycle, watercraft or bicycle may be dangerous, and is illegal in some jurisdictions. Check your local laws. Use caution while using your headphones when you are engaging in any activity that requires your full attention. While engaging in any such activity, removing the headphones from your ear area or turning off your headphones will keep you from being distracted, to avoid accident or injury.
- If you have a pacemaker or other electrical medical devices, you should consult your physician before using the product.
- Never try to dismantle the product yourself, or push objects of any kind into the product, as this may cause short circuits which could result in a fire or electric shock.
- None of the components can be replaced or repaired by users. Only authorized dealers or service centres may open the product. If any parts of your product require replacement for any reason, including normal wear and tear or breakage, contact your dealer.
- Avoid exposing your product to rain, moisture, or other liquids.
- If the product overheats, has been dropped or damaged or has been dropped in a liquid, discontinue use.
- Dispose of the product according to local standards and regulations.
- When you disconnect the power cord or any enhancement, grasp and pull the plug, not the cord. Never use a charger that is damaged.
- Attention should be drawn to the environmental aspects of battery disposal.
- The use of apparatus in moderate climates.
- The batteries of the earphones and the charging unit cannot be replaced by the user.
- **Warning:** Do not touch the leaking battery fluid, as it may be corrosive or toxic.
- **Handling Recommendation:** If battery leakage is detected, users are advised to wear protective gloves to avoid direct contact and dispose of the battery safely in accordance with local regulations.
- **Emergency Measures:** In case of contact with skin or eyes, rinse immediately with clean water and seek medical assistance.

CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.

DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

- Do not dispose of a battery into fire or a hot oven, or mechanically crush or cut a battery, that can result in an explosion;
- Do not leave a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas
- Do not expose the battery to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas



This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



This symbol on rechargeable batteries/batteries or their packaging indicates that the battery must not be disposed of with regular household waste. Always dispose of used rechargeable batteries/batteries in accordance with local environmental regulations. Contact your local municipal office for information on the specific disposal guidelines.



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.



Hereby, Balco Brands declares that the radio equipment Wireless Headphones -CE220818 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://balcobrands.com/download/CE220818-ECDOC-122025.PDF>



- High sound pressure
- Hearing damage risk
- Do not listen at high volume levels for long periods




No charging device is included with this radio equipment.




The power delivered by the required charger (not included) must be between min 2.5 Watt required by the radio equipment, and max 5.0 Watt in order to achieve the maximum charging speed.

2 PRODUCT OVERVIEW

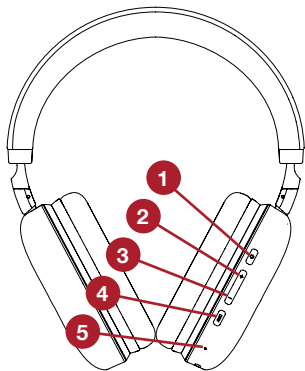



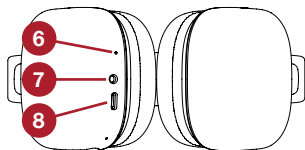









1. Power Button
2. Volume + / Next
3. Volume - / Previous
4. ANC / Bass Boost Button



5. LED Indicator Light
6. Microphone
7. 3.5mm AUX Audio Port
8. Charging Port

3 BUTTON CONTROLS

FUNCTION	ACTION
Power On	Hold  button for 3 seconds
Power Off	Hold  button for 3 seconds
Play/Pause Music	Tap  button to play or pause music during playback
Answer/End Call	Tap  button to answer or end incoming phone calls
Reject Call	Long press  button for 3 seconds to reject incoming calls
Redial the Last Call	Double tap  button to redial the last phone number
Voice Assistant	Triple tap  button to activate voice assistant (Google Assistant or Apple Siri)
Disconnect/Connect Bluetooth	Press  button four times to disconnect Bluetooth, press it four times again to reconnect.
Reset the Unit	When Bluetooth is disconnected, press  button five times to reset the unit
Volume Up	Long press the  button to increase the volume
Next Track	Tap the  button once to skip to the next song
Volume Down	Long press the  button to decrease the volume
Previous Track	Tap the  button once to skip to the previous song
ANC On/Off	Hold ANC button for 2 seconds to turn on or off Active Noise Cancellation
Bass Boost Mode	Double tap ANC button to turn on or off Bass Boost Mode

4 CHARGING THE BATTERY

Before first use, it is recommended you charge your headphones for a minimum of 2 hours

1. Insert the small end of the included USB-C cable into the USB-C connector on the headphone's right ear cup.
2. Connect the other end of the charging cable to a USB-A port on your PC, laptop, wall outlet adapter or other charging devices.
3. The LED light will show a solid red colour to indicate charging is active.
4. The light will turn off when fully charged.

NOTE:

- » Charge only with 5V DC Max 1A input
- » Use only the original USB-C charging cable to avoid any damage
- » When the LED flashes red, this indicates the headphones battery is low and requires charging

5 BATTERY CARE

- Make sure that your headphones are switched OFF after use
- Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime
- Before storing the headphones for long periods of time, be sure to fully charge the battery
- When the battery is low and flashing red you must charge the headphones
- If the battery is completely discharged, the headphones cannot be turned on immediately when the charger is connected. Allow a depleted battery to charge for a few minutes before turning on the headphones
- Always try to keep the battery between 0°C and 45°C. A product with a hot or cold battery may not work temporarily, even when the battery is fully charged

6 POWER ON/OFF

1. Press and hold the power button for three seconds
2. When powered on successfully the headphones a tone will be heard and the LED indicator lights will illuminate
3. To power off the headphones press and hold the power button for three seconds, a tone will be heard and the LED indicator light will turn off

NOTE:

- » If there is no operation within 5 minutes after powering on, the unit will turn off automatically. When idle or in standby mode, the fully charged product will enter low power mode automatically, consuming less than 0.3W.

7 PAIRING

1. With your headphones powered on, the indicator light will flash red and blue to indicate your headphones are in pairing mode.
2. Enable Bluetooth on your device, search for and select CE220818 from the list to connect.
3. Once the headphones are successfully paired with your device, you will hear a tone, and the LED light will turn off, indicating a successful connection.

NOTE:

- » On first use the headphones should automatically enter pairing mode

8 LISTENING TO YOUR DEVICE

Once you have successfully paired to a device, you can play, pause, skip tracks and adjust the volume. using the headphone controls/ device controls.

9 USING THE AUX PORT

The AUX port can be used to connect to a non-wireless device or for listening to music when the headphone batteries have been drained.

1. Connect a 3.5mm audio cable to the aux-in jack located on the right earcup
2. Connect the other end of the audio cable to the audio jack

NOTE:

- » When connected via audio cable, the Bluetooth function and controls are disabled. You cannot control playback using the headphone controls when connected via aux-in. The headphones will not be discoverable on Bluetooth.

10 SPECIFICATIONS

- Bluetooth Version: 5.4
- Bluetooth Distance: 10m
- Battery: 3.7V, 500mAh, 1.85Wh Li-ion Battery | Model: HB 702040
- Play Time:
 - ANC On: 30 hours with 50% volume
 - ANC Off: 60 hours with 50% volume
- ~~Standby Time: 300 hours~~
- Charging Time: 2.5 hours
- Power Input: DC 5V, 500mA
- Driver Size: Ø40mm
- Operation frequency band: 2402MHz – 2480MHz
- Maximum radio-frequency power transmitted: less than 20dBm

Battery information

Battery manufacturer: Shenzhen Hangbo Power Technology Co.,LTD

Address: Room 413, No. 19, Huayuan New Village, Longyuan Community, Longhua Street, Longhua District, Shenzhen, China.

11 WARRANTY

Please contact the store where you purchased the item for any warranty issues.

11.1 WARRANTY CONDITIONS

Dear Customer,

The **ALDI warranty** is a full warranty offering you the following benefits:

WARRANTY PERIOD

3 years from date of purchase.

The warranty does not cover damage caused by:

- Accident or unanticipated events (e.g. lightning, water, fire).
- Improper use or transport.
- Failure to follow the safety and maintenance instructions.
- Other improper treatment or modification of the product.

After the expiration of the warranty period, you may wish to have your product repaired at your own expense. You will be notified of the repair costs in advance.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state but this warranty is not intended to exceed statutory minimum requirements beyond what is included above.

This warranty does not limit the statutory obligation of the seller arising from any implied warranties. The period of warranty can only be extended in accordance with applicable law.

Neither the service company nor ALDI will assume any liability for data or settings stored on any returned product.



IMPORTER:
BALCO BRANDS LIMITED
PO BOX 12920
BISHOPS STORTFORD CM23 9NJ
UNITED KINGDOM

BALCO BRANDS LTD, 5 PEMBROKE ROW
DUBLIN 2,
IRELAND D02 FW6
WWW.BALCOBRANDS.COM

MADE IN CHINA

V1.0
11/2025