 




USER MANUAL

WIRELESS HEADPHONES

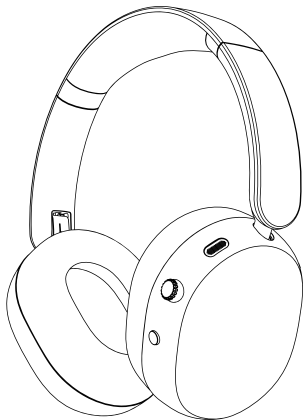

BAUHN®

AFTER SALES SUPPORT

W¹



AU

1300 663 907



customercare@balcobrand.com

MODEL: CE220862

SELLABLE ID: 766677

11/2026

1

**YEAR
WARRANTY**

CONTENTS

1	Safety Warnings	4
2	Product Overview	6
3	Charging Instructions	7
4	Bluetooth Pairing	8
5	Music & Voice Assistant Controls	9
6	Noise Cancellation Mode & Bass Mode	11
7	Design Features	12
8	Technical Specifications	13
9	Storage, Cleaning and Maintenance	13
10	After Sale Support	13

1 SAFETY WARNINGS

Headphones can deliver sounds at loud volumes and high-pitched tones. Exposure to such sounds can result in permanent hearing loss or damage. The volume level may vary based on conditions such as the phone you are using, its reception and volume settings and the environment. Please read the safety guidelines below prior to using these headphones.

- Prior to using this product follow these steps:
 - a) Before putting on the headphones, turn the volume control to its lowest level.
 - b) Put the headphones on.
 - c) Slowly adjust the volume control to a comfortable level.
- During the use of this product:
 - a) Keep the volume at the lowest level possible and avoid using the headphones in noisy environments where you may be inclined to turn up the volume.
 - b) If increased volume is necessary, adjust the volume control slowly.
 - c) If you experience discomfort or ringing in your ears, immediately discontinue using the headphones and consult a physician.
- With continued use at high volume, your ears may become accustomed to the sound level, which may result in permanent damage to your hearing without any noticeable discomfort.

CAUTION

- » Using the headphones while operating a motor vehicle, motorcycle, watercraft or bicycle may be dangerous, and is illegal in some jurisdictions. Check your local laws. Use caution while using your headphones when you are engaging in any activity that requires your full attention. While engaging in any such activity, removing the headphones from your ear area or turning off your headphones will keep you from being distracted, to avoid accident or injury.
- » If you have a pacemaker or other electrical medical devices, you should consult your physician before using the product.
- » Never try to dismantle the product yourself, or push objects of any kind into the product, as this may cause short circuits which could result in a fire or electric shock.
- » None of the components can be replaced or repaired by users. Only authorized dealers or service centres may open the product. If any parts of your product require replacement for any reason, including normal wear and tear or breakage, contact your dealer.

- » Avoid exposing your product to rain, moisture, or other liquids.
- » If the product overheats, has been dropped or damaged or has been dropped in a liquid, discontinue use.
- » Dispose of the product according to local standards and regulations.
- » When you disconnect the power cord or any enhancement, grasp and pull the plug, not the cord. Never use a charger that is damaged.
- » Attention should be drawn to the environmental aspects of battery disposal.
- » The use of apparatus in moderate climates.
- » The battery of the headphones cannot be replaced by the user.
- » **Warning:** Do not touch the leaking battery fluid, as it may be corrosive or toxic.
- » **Handling Recommendation:** If battery leakage is detected, users are advised to wear protective gloves to avoid direct contact and dispose of the battery safely in accordance with local regulations.
- » **Emergency Measures:** In case of contact with skin or eyes, rinse immediately with clean water and seek medical assistance.

 
CAUTION: RISK OF EXPLOSION

- » Do not dispose of a battery into fire or a hot oven, or mechanically crush or cut a battery, that can result in an explosion;
- » Do not leave a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas
- » Do not expose the battery to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas
- » Do not used in low air pressure at high altitude condition.
- » Do not used in low extreme temperatures.



- High sound pressure
- Hearing damage risk
- Do not listen at high volume levels for long periods

2 PRODUCT OVERVIEW

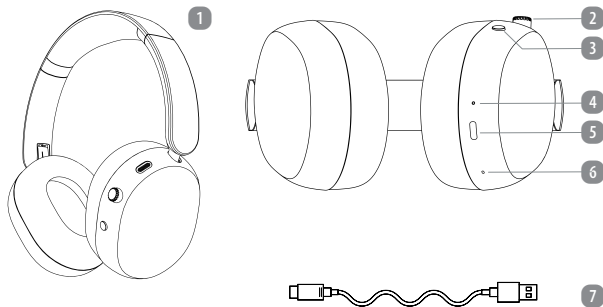

- 1 Wireless Headphones
- 2 Control Dial
- 3 ANC Button
- 4 Indicator Light

- 5 USB-C Charging Port
- 6 Call Microphone
- 7 USB-C Charging Cable
- 8 User Manual*

*Not pictured

3 CHARGING INSTRUCTIONS

Before first use, it is recommended you charge your headphones for a minimum of 2 hours.

1. Insert the small end of the included USB-C cable into the USB-C connector on the headphone's right ear pad.
2. Connect the other end of the charging cable to a USB port on your PC, laptop, wall outlet adapter or other charging device.
3. The LED light will show a solid white colour to indicate charging is active.
4. The light will turn off when fully charged.

NOTE

 
- » Charge only with 5V DC 500mA input.
- » The charger must be a Class II device and provide Safety Extra-Low Voltage (SELV) output. Only use chargers support an output rating of DC 5V/500mA.
- » Use only the original USB-C charging cable to avoid any damage.
- » When the battery is below 10%, the Indicator light flashes white. Please charge the headphones, or they will automatically power off when the battery runs out.

4 BLUETOOTH PAIRING



1. Press and hold the Control Dial for 3 seconds to power on.
2. After turning on, the headphones automatically enter pairing mode.
3. Select “CE220862” from the Bluetooth list on your device and connect.
4. The indicator light will turn solid blue for 2 seconds then switch off, this indicates you have paired successfully.



NOTE

- » If there is no operation within 5 minutes after powering on, the unit will turn off automatically.
- » When idle or in standby mode, the fully charged product will enter low power mode automatically, consuming less than 0.3W.
- » Turning on the headphones activates the Bluetooth connection. Turning off the headphones deactivates the Bluetooth connection.

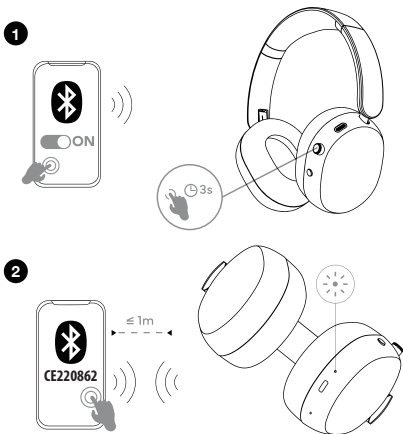

5 MUSIC & VOICE ASSISTANT CONTROLS

  FUNCTION	ACTION
 Power On/Off	Press and hold the Control Dial for 3 seconds to turn the headphones on. Press and hold the Control Dial for 5 seconds to turn the headphones off. <i>Note: If the headphones are not connected to any device for 5 minutes, they will turn off automatically.</i>
 Play/Pause	Press in the Control Dial once.
 Next Track	Double-click the Control Dial.
 Previous Track	Triple-click the Control Dial.
 Volume Up	Rotate the Control Dial clockwise.
 Volume Down	Rotate the Control Dial counterclockwise.

  FUNCTION	ACTION
 Activate Voice Assistant	Press and hold the Control Dial for 2 seconds.
 Deactivate Voice Assistant	Press the Control Dial once while active.
 Answer Call	Press the Control Dial when a call is incoming.
 End Call	Press the Control Dial while on a call.
 Reject Call	Double-click the Control Dial when a call is incoming.

 
6 NOISE CANCELLATION MODE & BASS MODE

Noise Cancellation Mode:

Press the ANC button to cycle between modes: Normal Mode → Noise Cancellation Mode.


Bass Mode:

Press and hold the ANC button for 3 seconds to activate or deactivate Bass Mode.

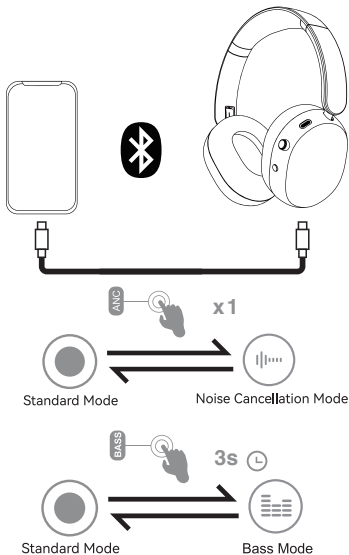

7 DESIGN FEATURES

 Earcups can be folded and rotated up to 90° for storage.

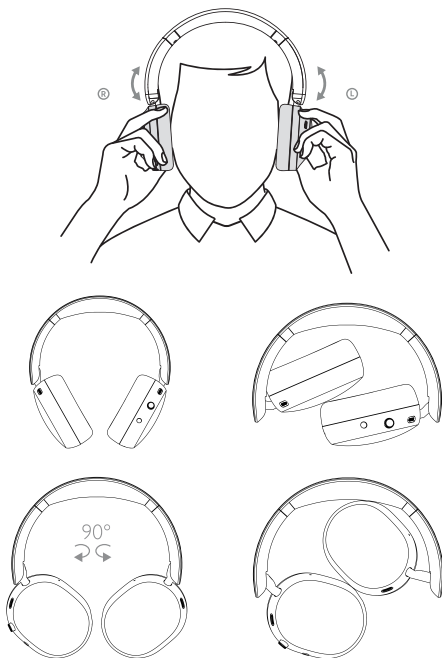

8 TECHNICAL SPECIFICATIONS

- Bluetooth Version: V 5.4
- Bluetooth Range: Up to 10 meters
- Play time: 60+ Hours Playtime, ANC off (at 50% volume)
40+ Hours Playtime, ANC on (at 50% volume)
- Charging Port: USB-C
- Driver Size: 40mm
- Power Input: DC 5V, 500mA
- Battery: 3.7V, 500mAh, 1.85 Wh Li-ion Polymer Battery
Model: 503035

9 STORAGE, CLEANING AND MAINTENANCE

Storage:

- Store the product in a cool, dry place away from direct sunlight and excessive heat.
- If the product will not be used for an extended period, recharge the product every 3–6 months to help maintain battery performance.

Cleaning:

- Wipe the exterior of the product with a soft, dry cloth.

Maintenance:

- No routine maintenance is required other than keeping the product clean. Do not disassemble or modify the product.

10 AFTER SALE SUPPORT

If you experience any issues with this product or its performance is not what you had expected, please contact us at Balco Brands.

It is likely that we can resolve any problems for you via phone or email.

We can be reached on:

- **Phone:** 1300 663 907 (Mon - Fri; 8:30am - 6:00pm AEST)
- **Email:** customercare@balcobrands.com
- **Web:** www.balcobrands.com



BAUHN®

WIRELESS HEADPHONES

Warranty Details

**REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/
TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION**

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

 **AU** 1300 663 907

 customercare@balcobrands.com

MODEL: CE220862 | SELLABLE ID: 766677 | 11/2026

1
YEAR
WARRANTY



BAUHN®

WIRELESS HEADPHONES

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:

Balco Brands Pty Ltd

PO Box 537 Bayswater Business Centre, Victoria, Australia

1300 663 907 - Hours: Mon-Fri 8:30am - 6:00pm AEST

customercare@balcobrands.com

AFTER SALES SUPPORT

1300 663 907

customercare@balcobrands.com

MODEL: CE220862 | SELLABLE ID: 766677 | 11/2026

1

**YEAR
WARRANTY**



ALDI guarantees that our products are developed to our stringent quality specifications. If you are not entirely satisfied with this product, please return it to your nearest ALDI store, within 60 days from the date of purchase, for a full refund or replacement, or take advantage of our after sales support by calling the supplier's Customer Service Hotline.

Bauhn® is a registered trademark of Hands (IP) Holdings Pty Ltd.

DISTRIBUTED BY

ALDI STORES

**1 SARGENTS ROAD,
MINCHINBURY NSW 2770**
WWW.ALDI.COM.AU

MADE IN CHINA

V1-0
11/2026