



BAUHN®

KIDS DRAWING PAD USER GUIDE

CE220854-DP
12/2026
762082(SAP)



This product complies with Australian regulatory requirements for electrical safety and EMC.



This product is powered by Safety Extra-Low Voltage (SELV) and does not contain hazardous voltage.



Refer to instruction manual

WARNING


- The instruction must be retained since it contains important information.
- This product is not to be dropped or subjected to impact. Children must use this product under the supervision of a parent or guardian.
- Never try to dismantle the product yourself, or push objects of any kind into the product, as this may cause short circuits which could result in a fire or electric shock.
- None of the components can be replaced or repaired by users. Only authorized dealers or service centres may open the product. If any parts of your product require replacement for any reason, including normal wear and tear or breakage, contact your dealer.
- Avoid exposing your product to rain, moisture, or other liquids.
- If the product overheats, has been dropped or damaged or has been dropped in a liquid, discontinue use.
- Dispose of the product according to local standards and regulations.
- When you disconnect the power cord or any enhancement, grasp and pull the plug, not the cord. Never use a charger that is damaged.
- Attention should be drawn to the environmental aspects of battery disposal.
- The use of apparatus in moderate climates.
- This product shall not be connected to power supply source exceeding PS1, 5V d.c. 15W.
- Parents need to make sure that children follow safety instructions when using this product.
- This toy contains batteries that are non-replaceable.
- This toy is only to be connected to Class II equipment bearing the following symbol
- The transformer, power supply or battery charger used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.
- The toy shall only be used with a transformer for toys or a power supply for toys.
- The transformer is not a toy.
- The charging port terminals are not to be short-circuited.
- Rechargeable battery is only to be charged under adult supervision.
- Do not use any cleaning agent, as this may damage the casing. Clean the device with a clean, dry cloth.

CAUTION: Risk of explosion:

- If the battery is replaced by an incorrect type.
- If the battery is subjected to high or low extreme temperatures that a battery can be subjected to during use, storage or transportation.
- If the battery is subjected to low air pressure at high altitude.
- Replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types).
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.



WARNING
Not suitable for children under 36 months.

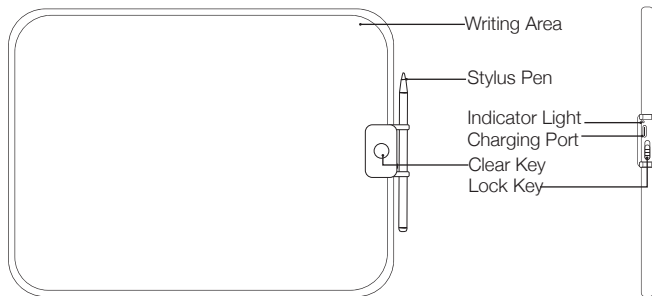

ALDI guarantees that our products are developed to our stringent quality specifications. If you are not entirely satisfied with this product, please return it to your nearest ALDI store within 60 days from the date of purchase for a full refund or replacement, or take advantage of our after sales support by calling the supplier's Customer Service Hotline.

ALDI STORES, 1 SARGENTS ROAD, MINCHINBURY NSW 2770
www.aldi.com.au

GETTING STARTED

- Gently write or draw directly on the screen using the stylus.
- Lighter pressure will result in thinner lines and firmer pressure will make thicker lines. Do not apply too much pressure for best result.

LOCK KEY

- Lock ON: Stops screen from being erased.
- Lock OFF: Allows you to clear the screen with the clear button.

CHARGING THE DEVICE

1. Insert the small end of the included USB-C cable into the USB-C charging port.
2. Connect the other end of the charging cable to a USB port on your PC, laptop, wall outlet adapter or other charging device.
3. The LED light will show a solid red colour to indicate charging is active.

IN THE BOX

- 1 x Drawing Pad
- 1 x Stylus Pen
- 1 x USB-C Charging Cable
- 1 x User Guide
- 1 x Warranty Certificate

PRODUCT SPECIFICATION

Input: 5V DC 500mA
Battery: 35 mAh rechargeable battery

MAINTENANCE AND CARE

1. This product contains electronic components and built-in batteries. For cleaning, use a soft, dry cloth to gently wipe away surface stains.
2. Store the product in a cool, dry place. Avoid using it in environments above 40°C, below 5°C, or in areas with excessive dust or high humidity.
3. Do not use the product under strong or ultraviolet light exposure.

AFTER SALES SUPPORT

If you experience any issues with this product or its performance is not what you had expected, please contact us at Balco Brands

It is likely that we can resolve any problems for you via phone or email
We can be reached on:

Phone: 1300 663 907 (Mon - Fri; 8:30am - 6:00pm AEST)

Email: customercare@balcobrands.com

Web: www.balcobrands.com



BAUHN®

KIDS DRAWING PAD

Warranty Details

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/ TO KEEP
UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

1300 663 907

customercare@balcobrands.com

MODEL: CE220854-DP SAP: 762082 12/2026

1

YEAR WARRANTY



BAUHN®

KIDS DRAWING PAD

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:

Balco Brands Pty Ltd

PO Box 537 Bayswater Business Centre, Victoria, Australia

1300 663 907 - Hours: Mon-Fri 8:30am - 6:00pm AEST

customercare@balcobrands.com

AFTER SALES SUPPORT

1300 663 907

customercare@balcobrands.com

MODEL: CE220854-DP SAP: 762082 12/2026

1

YEAR WARRANTY