


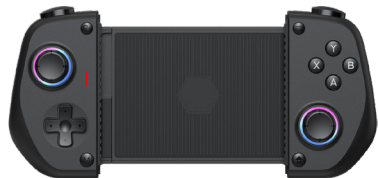

USER GUIDE

MOBILE GAMING CONTROLLER

BAUHN®



1
YEAR WARRANTY

1 SAFETY INSTRUCTIONS

- Read all instructions before using this product.
- Keep these instructions for future reference.
- This product contains a rechargeable Li-ion battery.
- Do not disassemble, modify, puncture, crush or attempt to repair this product.
- Do not expose the product or its battery to fire, excessive heat, direct sunlight or other high temperature environments.
- Do not immerse the product in water or any other liquid.
- Keep the product in a clean, dry place.
- Do not use or store it in damp, humid or dusty environments.
- Do not use the product if it has been dropped, damaged, deformed, swollen or shows signs of battery leakage.
- Charge the product only with a certified 5 V DC USB power source capable of supplying 1 A.
- Use the supplied USB charging cable or a high quality replacement cable together with a certified USB power adaptor.
- Do not use damaged charging cables, USB connectors or power adaptors.
- The product may be used while charging. If the product becomes unusually hot during charging or use, disconnect the charger immediately and allow the product to cool before further use.
- Disconnect the charging cable once charging is complete.
- Do not touch the charging connector, USB cable or power adaptor with wet hands.
- Avoid dropping, bending or applying excessive force to the product.
- Do not clean the product with solvents, harsh chemicals or abrasive cleaners. Clean only with a soft, dry cloth.
- Keep this product out of reach of young children. This product is not a toy.
- Recharge the battery at least once every three months during long term storage to maintain battery performance.
- Dispose of the product and its battery in accordance with local regulations. Do not dispose of the battery in fire or household waste.
- Altitude during operation: up to 2000 m
- Operating temperature: 0 °C to 30 °C.
- Storage temperature: 0 °C to 45 °C.
- Stop using the product immediately if it emits an unusual odour, becomes discoloured, deformed or excessively hot during charging or use.


1

CAUTION

» Risk of explosion or fire if the battery is improperly handled.

- The rechargeable battery is not user-replaceable. Do not attempt to replace, remove or service the battery yourself.
- Do not dispose of the battery in fire or a hot oven.
- Do not mechanically crush, cut or puncture the battery.
- Do not expose the battery to extremely high temperatures during use, storage or transportation.
- Do not expose the battery to extremely low air pressure, such as at high altitude, as this may result in an explosion or leakage of flammable liquid or gas.

2 IN THE BOX

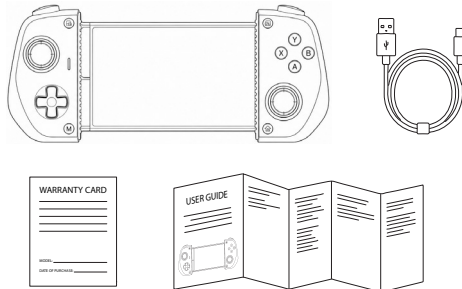


- 1x Phone Gaming Controller
- 1x USB Charging cable
- 1x User Guide
- 1x Warranty Card

2

3 PRODUCT OVERVIEW

This product is a wireless Phone Game Controller equipped with Hall-effect joysticks. It is compatible with Android and iOS devices, Console and Steam on PC.

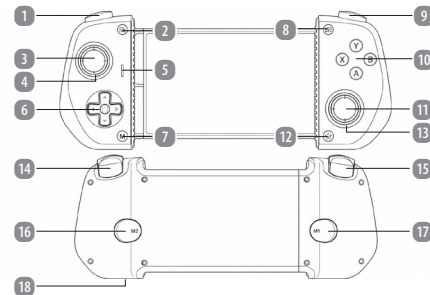

- | | |
|----------------------------|------------------------------|
| 1 LB Button | 10 ABXY Button |
| 2 View Button | 11 Right Joystick |
| 3 Left Joystick | 12 Home Button |
| 4 Left Joystick Light Ring | 13 Right Joystick Light Ring |
| 5 Indicator Light | 14 RT Button |
| 6 Directional Pad | 15 LT Button |
| 7 M Button | 16 M2 Button |
| 8 Menu Button | 17 M1 Button |
| 9 RB Button | 18 USB Type-C Port |

3

4 CHARGING

- When the controller is in sleep mode or disconnected, connect the USB-C end of the provided charging cable to the USB Type-C Port on the controller, then connect the USB-A end to a power source.
- The red LED flashes slowly during charging.
- The LED turns off when charging is complete.

NOTES:

- » When charging while the controller is in use, the operating-mode LED flashes slowly. The LED remains on when charging is complete.
- » When the battery is low, the left and right LEDs flash in the current operating-mode color. Please charge the controller as soon as possible.
- » Charge only with 5V DC Max 1A input.
- » The charger must be a Class II device and provide Safety Extra-Low Voltage (SELV) output. Only use chargers support an output rating of DC 5V/1A.

5 GETTING STARTED

1. Charge the controller using the supplied USB-C cable.
2. Press and hold the required button combination for your device until the indicator LED starts flashing rapidly (see below).
3. Open your device's Bluetooth settings and select the controller name shown.
4. The LED stops flashing once connected.

5.1 ANDROID

CONTROLLER MODE	BLUETOOTH NAME	BEST USED FOR	INDICATOR
HOME + X	Xbox Wireless Controller	Recommended for most Android games with controller support.	Green
HOME + B	Android Gamepad	Best for emulators and legacy Android games.	Yellow

4



ALDI guarantees that our exclusive brand products are developed to our stringent quality specifications. If you are not entirely satisfied with this product, please return it to the nearest ALDI store within 60 days from the date of purchase, for a full refund or replacement.

BAUHN® is a registered trademark of Hands (IP) Holdings Pty Ltd

DISTRIBUTED BY

ALDI STORES
1 SARGENTS ROAD,
MINCHINBURY NSW 2770
WWW.ALDI.COM.AU

MADE IN CHINA

V1-1
12/2026

5.2 iPhone / iPad

CONTROLLER MODE	BLUETOOTH NAME	BEST USED FOR	INDICATOR
HOME + Y	DUALSHOCK 4 Wireless Controller	Recommended for Apple Arcade and MFi-compatible games.	Purple
HOME + X	Xbox Wireless Controller	Use where Xbox controller support is available.	Green

5.3 Windows PC

CONTROLLER MODE	BLUETOOTH NAME	BEST USED FOR	INDICATOR
HOME + Y	Wireless Controller	Steam and Bluetooth controller gaming.	Purple

5.4 Mac

CONTROLLER MODE	BLUETOOTH NAME	BEST USED FOR	INDICATOR
HOME + Y	DUALSHOCK 4 Wireless Controller	Recommended for macOS and Apple Arcade.	Purple

6 TURBO (AUTOMATIC RAPID-FIRE)

- Hold M and press a supported button to enable Turbo.
- Repeat to enable Auto Turbo.
- Repeat again to cancel.
- Hold M + Left Stick Up/Down to adjust Turbo speed.

NOTE:
» Turbo assignments are not retained after the controller is switched off.

7 M1 / M2 BUTTON MAPPING

1. Hold M + M1 (or M + M2) for 2 seconds until the orange LED remains on.
2. Press the button you want to assign.
3. Press M1 (or M2) again. The orange LED flashes 3 times to confirm the mapping.

8 CALIBRATION

- Press and hold View + Menu for 2 seconds to enter calibration mode. The Indicator Light flashes blue slowly.
- Rotate each joystick through 3 full circles.
- Fully press each trigger 3 times.
- Press A to finish. The Indicator Light flashes 3 times and turns off when calibration is complete.

9 LIGHTING CONTROLS

FUNCTION	SHORTCUT	DETAILS
Change lighting mode	Hold M + press R3	Cycles through: 1. Rainbow gradient; 2. Steady white; 3. Steady blue; 4. Steady orange; 5. Off.
Adjust brightness	Hold M + move right joystick Up / Down	Adjusts the brightness of the light ring and LED effects.

10 RESET

Press and hold the M button for 5 seconds to clear all custom functions and restore the factory settings.

NOTICE

- » Turbo settings will be cleared.
- » M1 and M2 programmable back buttons will be reset to their default assignments.
- » The joystick LED will return to the default 7-color breathing/gradient mode.
- » The controller will not restart during this process.

11 QUICK TROUBLESHOOTING

ISSUE	SUGGESTED ACTION
Controller does not connect	Confirm the correct connection mode for your device, then repeat the pairing shortcut and reconnect via your device Bluetooth settings.
Buttons or joysticks respond inaccurately	Run joystick and trigger calibration (see Section 8).
Controller switches off	Charge the controller. It automatically switches off when battery voltage is below 3.3 V.
Turbo does not remain enabled after restart	This is normal. Turbo settings are not stored after power off.
M1 / M2 does not perform the expected action	Check whether the button is mapped or programmed; reprogram or clear the assignment as required.

12 TECH SPECS

- 800 mAh rechargeable battery
- Compatible with Apple + Android Smartphones and tablets up to 17.5cm wide.

13 AFTER SALES SUPPORT

If you experience any issues with this product or its performance is not what you had expected, please contact us at Balco Brands
It is likely that we can resolve any problems for you via phone or email
We can be reached on:
Phone: 1300 663 907 (Mon - Fri; 8:30am - 6:00pm AEST)
Email: customercare@balcobrands.com
Web: www.balcobrands.com



BAUHN®

MOBILE GAMING CONTROLLER

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:

Balco Brands Pty Ltd
PO Box 537 Bayswater Business Centre, Victoria, Australia
1300 663 907 - Hours: Mon-Fri 8:30am - 6:00pm AEST
customercare@balcobrands.com

AFTER SALES SUPPORT

☎ 1300 663 907

💻 customercare@balcobrands.com

MODEL: CE260016 SAP: 767796 12/2026



BAUHN®

MOBILE GAMING CONTROLLER

Warranty Details

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/ TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

☎ 1300 663 907

💻 customercare@balcobrands.com

MODEL: CE260016 SAP: 767796 12/2026

