



AUTO **Xs**®

BOAT ACCESSORIES



BOAT COVER

USER GUIDE





Boat Cover



Warranty Details

The product is guaranteed to be free from defects in workmanship and parts for a period of 36 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion.

The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

  1300 663 907

 customercare@winplus.com.au

MODEL: AU314022/AU314021 PRODUCT CODE: 45890/45889 08/2014






Contents

- 01 **Welcome**
- 02 **Safety Instructions**
- 03 **Features & Specifications**
- 04-06 **Instructions**
- 07 **FAQs**



After Sales Support

 1300 663 907

 customercare@winplus.com.au

Model Number AU314021/AU314022






Welcome Section

1

Congratulations on choosing to buy an AUTO-XS® product. All products brought to you by AUTO-XS® are manufactured to the highest standards of performance and safety, and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 3 Year Warranty. We hope that you will enjoy using your purchase for many years to come.

After Sales Support

 1300 663 907

 customercare@winplus.com.au

Model Number AU314021/AU314022



Safety Instructions

2

Read this manual thoroughly before first use, and keep it in a safe place for future reference. Follow all instructions and take notice of all warnings.

- Do not place the cover onto a wet boat.
- Do not fit a wet cover onto a boat.
- Do not dry cover directly in sun; if cover is wet, lay flat and dry in a shaded area.
- Do not iron.
- Do not allow children to play with this item. This is not a toy for children.
- Ensure cover is dry before folding and storing. Do not attempt to repair or alter any part of the Boat Cover. In the case of improper use or if you have altered or repaired the product yourself, all guarantees are void.
- The supplier does not accept responsibility for additional or consequential damage other than covered by legal product responsibility.
- The supplier is not responsible for the end use of this product including any improper use or when used for purposes that are not specified.

After Sales Support



1300 663 907



customercare@winplus.com.au

Model Number AU314021/AU314022



Features & Specifications

3

Features

- Heavy duty polyester, coated fabric
- Polyurethane backing
- Tie down nylon straps with side release buckles
- 100% UV Coated
- Mildew resistant
- Waterproof*
- Reinforced stitching
- Double fabric layer on heavy wear corners
- Carry bag with drawstring cord

*Fabric is not intended for prolonged high pressure water exposure. Wear and tear may affect the waterproof performance of the fabric and stitched areas.

Specifications

Size Small	(3m to 4m / Beam width 1.80m)
Size Medium	(4m to 5m / Beam width 2.05m)
Size Large	(5m to 6m / Beam width 2.40m)
Nylon Strap Length:	2m x 9 pieces

After Sales Support

 1300 663 907

 customercare@winplus.com.au

Model Number AU314021/AU314022


Instructions

4

How to Fit a Boat Cover

IMPORTANT: Check that obstacles on the boat are removed or stored before fitting cover. For example; fold away canopies, remove ski poles and wrap any sharp edges with a cloth to prevent cover from tearing. It is highly recommended to fit cover with two or more people.

1. Remove boat cover from carry bag and unroll on a clean, dry and flat surface
2. Ensure that the yellow BOW tag is lined up at the front end of the boat and the red STERN tag is at the rear. These tags are sewn on the underside of the cover.

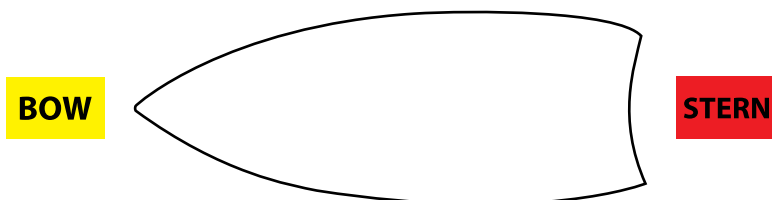

3. Ensure that the cover is positioned with the tags facing inside (out of the sun).

OUTSIDE



INSIDE



4. Attach the front of the cover to the bow of the boat. Stretch the cover over the boat, ensuring that the elastic is evenly stretched on the outer edges of the boat. Pull the reinforced corners over the back corners of the boat.

WARNING: If the cover is being stretched over sharp points this can cause wear and damage to the cover. Securely wrap with a soft material if they cannot be removed to protect the cover.

After Sales Support

1300 663 907



customercare@winplus.com.au

Model Number AU314021/AU314022

Instructions

5

5. With the cover in place, begin attaching the tie down straps. Loop the strap through the loop holes on the cover.



NOTE: It is recommended to fully extend the straps before looping around trailer frame.

6. Loop the straps under the trailer frame and clip together.




7. Tighten the straps to ensure cover is firm and tight.



WARNING: Take care that any loose ends from the nylon straps do not pose a risk of being caught in moving parts beneath the trailer, ensure they are safely tied up.



After Sales Support

 1300 663 907

 customer-care@winplus.com.au

Model Number AU314021/AU314022

Instructions

6

How to Remove and Store

1. Remove the straps by unclipping and gently pulling from the loop on the cover.
2. Carefully remove the cover, starting at the stern (back of boat).


NOTE: Ensure you take care as there can be tension on the elastic. If the cover is wet allow it to dry in a shaded area before storing.

3. Place dry cover on a clean, dry and flat surface. Roll up the cover by folding it to the width of the carry bag and then proceed to tightly roll. Tighten using the nylon strap with adjustable strap buckle (included).
4. Roll up the straps included and store inside the carry bag. Pull drawstring to close.

Maintenance and Cleaning

- It is important to keep the cover clean from any dirt or dust during use and especially when storing. Dirt and dust can simply be brushed off.
- The cover can be spot cleaned to remove dirt or marks; use a soft sponge and warm soapy water and wipe clean. Do not store cover if it is wet, ensure the cover is air dried before storing.
- Do not machine wash the cover.
- Do not use bleach or other harsh cleaning solutions.
- Do not tumble dry or iron.

After Sales Support

 1300 663 907

 customercare@winplus.com.au

Model Number AU314021/AU314022



FAQs

7


My cover does not fit properly

- Ensure that you have the cover orientated correctly, with the BOW label at the front of the boat and STERN at the rear.
- Ensure any canopies, ski poles or similar obstructions are collapsed or removed to ensure the cover can fit correctly.

The straps are flapping when driving at high speeds

- Ensure the straps are tight and ends are wrapped so they don't flap loosely.
- The straps will flap to some extent, this is normal when travelling at high speeds.

After Sales Support

 1300 663 907

 customercare@winplus.com.au

Model Number AU314021/AU314022



Boat Cover

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:

Winplus Australasia
PO BOX 537
Bayswater Business Centre
Bayswater, VIC 3153

Winplus Help Desk 1300 663 907
(Operating Hours: Mon-Fri 08:30AM to 6:00PM)

customercare@winplus.com.au
www.winplus.com.au

AFTER SALES SUPPORT

1300 663 907

customercare@winplus.com.au

MODEL: AU314022/AU314021 PRODUCT CODE: 45890/45889 08/2014





AUTO XS®

A graphic of a checkered flag, with the bottom right corner of the 'S' in 'XS' overlapping it.