



BAUHN[®]
EFFORTLESS TECHNOLOGY

accessories

FOOTSWITCH POWER POINT

Model Number: PS42309D



GETTING STARTED GUIDE

1

UNPACK

Unpack the Footswitch Power Point from the box.

2

PLUG IN YOUR APPLIANCE

Plug the power cord of the device you intend to control into the front of the Footswitch Power Point.



3

CONNECT TO POWER

Plug in the Footswitch Power Point to the wall outlet, and switch the outlet on.

Note: The red light on the front of the power point module indicates power is available through the wall outlet.



4

PLACE FOOTSWITCH

Place the Footswitch component in an accessible location for convenient use. Take care that placement does not create a tripping hazard. Turn power ON/OFF using Footswitch as required.

Note: The red light on the switch module indicates power is running to the connected appliance.

