



# 1.7L Kettle

Model Number KE2400

## INSTRUCTION MANUAL

**After Sales Support**

Telephone: 1300 663 907  
Email: [customercare@winplus.com.au](mailto:customercare@winplus.com.au)







# Contents

- 04 Warranty Page**
- 05 Welcome**
- 06 General Information and Safety Instructions**
- 09 Features & Technical Specifications**
- 10 Assembly and Parts List**
- 11 Getting Started**
- 15 FAQ**
- 16 Index**
- 18 Repair and Refurbished Goods or Parts Notice**

## **After Sales Support**

Telephone: 1300 663 907  
Email: [customercare@winplus.com.au](mailto:customercare@winplus.com.au)



# Warranty Details

## 1.7L Kettle

The product is guaranteed to be free from defects in workmanship and parts for a period of 36 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

**Supplier name:** Winplus Australasia  
**Supplier address:** PO Box 537  
Bayswater Business Centre VIC 3153  
**Supplier telephone:** 1300 663 907  
**Supplier email address:** [customercare@winplus.com.au](mailto:customercare@winplus.com.au)





# Welcome

Congratulations on choosing to buy a Kuchef® product.

All products brought to you by Kuchef® are manufactured to the highest standards of performance and safety, and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 3 Year Warranty.

We hope that you will enjoy using your purchase for many years to come.

## **After Sales Support**

Telephone: 1300 663 907  
Email: [customer-care@winplus.com.au](mailto:customer-care@winplus.com.au)



# General Information and Safety Instructions

## General Safety Instructions

- Do not use in dusty conditions
- Do not drop the kettle. Dropping or rough use of the unit will cause damage
- Do not place near strong magnets or strong electric currents
- If the Kettle is not to be used for long periods of time, turn off and unplug from any power source.
- Do not attempt to repair open or alter any components of the Kettle. In the case of improper usage or if you have opened, altered and repaired the product yourself, all guarantees are void.
- The supplier does not accept responsibility for additional or consequential damage other than covered by legal product responsibility.
- The supplier is not responsible for the end use of this product including any improper use or when used for purposes that are not specified.

## Warnings

1. Read all instructions before operating the Kettle for the first time.
2. This appliance is intended for household use only.
3. Do not use the appliance for other than intended or specified purposes.
4. Only use the kettle with a 220-240V AC household power socket.
5. To avoid electrical shock, do not place the cord, plug or base unit in water or other liquids.
6. Do not operate appliance with wet hands or operate in a wet working environment.
7. Do not let the power cord hang off the edge of the table or counter or come in contact with hot surfaces.
8. If the power cord is damaged, it must be replaced by the manufacturer or a qualified repairer. See page 18 for contact details.
9. Unplug appliance from outlet when not in use.
10. This appliance is not intended for use by persons with reduced abilities without supervision, or children.
11. Do not let children play with or operate the appliance under any circumstance.
12. Do not move the kettle while it is switched on.
13. Ensure the lid is properly closed or the kettle may not switch off once boiled.
14. Do not open the lid while the water is heating or boiling.
15. Take caution when pouring hot liquid. Pour slowly, do not over-tilt the kettle.
16. The kettle remains a scalding hazard long after the water has boiled.
17. Only use the kettle with the power base provided.
18. Only use the power base with the kettle provided.
19. Remove the kettle from the power base before pouring.
20. Wind excess cable beneath the power base.

### After Sales Support

Telephone: 1300 663 907  
Email: [customercare@winplus.com.au](mailto:customercare@winplus.com.au)



## Warnings Continued

- 20.** When cleaning ensure the appliance is unplugged from the power socket.
- 21.** Do not place the appliance on or near a hot surface.
- 22.** Always supervise the appliance while in use.
- 23.** Keep the kettle clean. Follow the cleaning instructions provided in this manual on (page 12).
- 24.** Avoid spillage on connector.





## Features

- 1.7L Capacity
- Cordless operation
- Transparent water gauge
- Boil dry protection
- Detachable filter
- Concealed heating plate
- High gloss and stainless steel finish

## Technical Specifications

**Model Number:** KE2400

**Capacity:** 1.7L

**Colour:** Red, White, Black

**Weight:** 1.1kg

**Voltage:** 220-240V AC 50HZ

**Warranty:** 3 years

**Power:** 1850W-2200W

### After Sales Support

Telephone: 1300 663 907  
Email: [customercare@winplus.com.au](mailto:customercare@winplus.com.au)

# Assembly and Parts List



1. Lid Button

2. Handle

3. Spout

4. Water Gauge

5. ON/OFF Switch

6. Base

**Note:** This appliance is designed for the boiling of drinking quality water only; never use it to heat or boil any other liquids or foodstuffs. The lid should always be firmly in place and locked closed before use.

# Getting Started

## Before First Use

Remove any packaging material and promotional labels before using your kettle for the first time.

It is recommended to clean the kettle before first use.

Fill the kettle to the maximum level with water, bring to the boil and then discard the water.

## Operation of your Kettle

1. Remove the kettle from the power base.



2. Open the lid by pressing the button on the handle of the kettle. The lid will lift upwards.



3. Fill with the desired amount of water. The amount of water must always be between the minimum and maximum indicators.

**Note:** DO NOT operate the Kettle dry – this will activate the boil-dry protection and cause the Kettle to turn “OFF”. DO NOT overfill the Kettle past the maximum mark as this may cause boiling water to splash out.

## After Sales Support

Telephone: 1300 663 907  
Email: [customercare@winplus.com.au](mailto:customercare@winplus.com.au)

4. Make sure the lid is closed by pushing down until it locks into place.

NOTE: The 360° base allows the kettle to rotate but DO NOT perform this action while the kettle is ON.



5. Place the Kettle onto the power base and plug the cord into a power socket and switch on.



6. Press the ON/OFF switch to the ON position. The ON/OFF switch will illuminate.

TIP: Wind excess cable beneath the base.

7. The Kettle will automatically switch OFF once the water is boiled. Lift the Kettle off the base and pour the water into your desired vessel.

**WARNING:** The water will be hot. Be sure to pour slowly especially if filled to the maximum level. Do not overfill the kettle, because boiling water may be ejected.

NOTE: To re-boil you may need to wait a few seconds for the control to reset.



## Boil Dry Protection

This kettle is fitted with a boil dry protection safety feature, which protects against overheating should the appliance be operated with insufficient water. The kettle will stop heating and automatically switch 'OFF'.

If this occurs, switch off at the power outlet and unplug. Allow kettle to cool before refilling. The safety boil dry protection will automatically reset.

## Cleaning and Storage

Always switch off and unplug the appliance from the power outlet before cleaning. Also make sure Kettle has cooled down if recently in use. Wipe down the exterior of the Kettle with a damp cloth.

**WARNING: DO NOT immerse the kettle base, switch area, power base or power supply cord in water or any other liquid.**

## Cleaning the filter

Slide the filter out from the spout for cleaning.

Take care when cleaning the filter as the mesh can be damaged, use a soft brush or sponge to clear the mineral deposits.

### After Sales Support

Telephone: 1300 663 907  
Email: [customercare@winplus.com.au](mailto:customercare@winplus.com.au)



## Descaling/Removing Mineral Deposits

Due to using tap water, your Kettle may appear discoloured inside from mineral deposits over time. This is not rust and can be easily managed by following the below instructions.

**WARNING:** To prevent damage to the appliance do not use alkaline cleaning agents when cleaning or metal scourers; use a soft cloth and mild detergents.

To remove the mineral deposits you can purchase kettle descaler products from most leading supermarkets, department stores and hardware stores. Be sure to read the instructions before use.

Alternatively you can use everyday household products to clean your Kettle as well.

1. Open the Kettle lid and fill with 3 cups of white vinegar and top up with water to maximum level. Allow to stand overnight. **DO NOT BOIL.**
2. Remove the solution, refill with fresh water and bring to the boil then discard the water. Repeat and this should remove any build ups.

## Storage

Ensure the kettle is turned off, unplugged, clean and dry before storing it. Stow the cord beneath the base unit and make sure the lid is closed and the kettle is correctly attached to the base. Do not store anything on top of the kettle.

# FAQ

Problem	Solution
<b><i>My kettle won't turn on</i></b>	<ul style="list-style-type: none"><li>• Check the power outlet is turned on.</li></ul>
<b><i>The ON button won't work</i></b>	<ul style="list-style-type: none"><li>• Check the power outlet is turned on.</li><li>• Check that the kettle is correctly placed on the base.</li><li>• Check there is enough water in the kettle. Refer to Page 12, Boil dry protection.</li></ul>
<b><i>The water is not flowing from the spout</i></b>	<ul style="list-style-type: none"><li>• Ensure kettle is turned off and unplug from power outlet. Check the filter by removing it and checking for any blockage or damage - take extra care if the water is hot or boiling.</li></ul>

## After Sales Support

Telephone: 1300 663 907  
Email: [customercare@winplus.com.au](mailto:customercare@winplus.com.au)



# Index

<b>Assembly and Parts List</b>	10
<b>Base</b>	7, 10, 11, 12, 13, 15
<b>Boil dry protection</b>	13, 15
<b>Contents</b>	3
<b>Descaling</b>	14
<b>FAQ</b>	15
<b>Features</b>	9
<b>Filter</b>	9, 13, 15
<b>General Safety</b>	6
<b>Getting Started</b>	11
<b>Lid</b>	7, 10, 11, 12, 14
<b>Storage</b>	14
<b>Technical Specifications</b>	9
<b>Warnings</b>	7-8
<b>Warranty Details</b>	4
<b>Water Gauge</b>	9, 10
<b>Welcome</b>	5







# Repair & Refurbished Goods or Parts Notice

## Kettle 1.7L

---

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:

**Supplier name:** Winplus Australasia  
**Supplier address:** PO Box 537  
Bayswater Business Centre VIC 3153  
**Supplier telephone:** 1300 663 907  
**Supplier email address:** [customercare@winplus.com.au](mailto:customercare@winplus.com.au)





**After Sales Support**

Telephone: 1300 663 907  
Email: [customercare@winplus.com.au](mailto:customercare@winplus.com.au)



