



2 Slice Toaster

Model Number TDC800

INSTRUCTION MANUAL

After Sales Support
Telephone: 1300 663 907
Email: customercare@winplus.com.au







Contents

- 04 Warranty Page**
- 05 Welcome**
- 06 General Information and Safety Instructions**
- 09 Features & Technical Specifications**
- 10 Assembly and Parts List**
- 11 Getting Started**
- 15 FAQ**
- 16 Index**
- 18 Repair and Refurbished Goods or Parts Notice**

After Sales Support

Telephone: 1300 663 907
Email: customercare@winplus.com.au



Warranty Details

2 Slice Toaster

The product is guaranteed to be free from defects in workmanship and parts for a period of 36 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Supplier name: Winplus Australasia
Supplier address: PO Box 537
Bayswater Business Centre VIC 3153
Supplier telephone: 1300 663 907
Supplier email address: customercare@winplus.com.au

After Sales Support

Telephone: 1300 663 907
Email: customercare@winplus.com.au





Welcome

Congratulations on choosing to buy a Kuchef® product.

All products brought to you by Kuchef® are manufactured to the highest standards of performance and safety, and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 3 Year Warranty.

We hope that you will enjoy using your purchase for many years to come.

After Sales Support

Telephone: 1300 663 907
Email: customercare@winplus.com.au



General Information and Safety Instructions

General Safety Instructions

- Do not use in dusty conditions
- Do not drop the toaster. Dropping or rough use of the unit will cause damage
- Do not place near strong magnets or strong electric currents
- If the toaster is not to be used for long periods of time, turn off and unplug from any power source.
- Do not attempt to repair, open or alter any components of the Toaster. In the case of improper usage or if you have opened, altered and repaired the product yourself, all guarantees are void.
- The supplier does not accept responsibility for additional or consequential damage other than covered by legal product responsibility.
- The supplier is not responsible for the end use of this product including any improper use or when used for purposes that are not specified.

After Sales Support

Telephone: 1300 663 907
Email: customercare@winplus.com.au

Warnings

1. Read all instructions before operating the Toaster for the first time.
2. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
3. Do not use the appliance for other than intended or specified purposes.
4. Only use the 2 slice toaster with Australian Standard 220-240V AC 50/60HZ 10A Rated power supply.
5. To avoid electrical shock, do not place the cord, plug or Toaster in water or other liquids.
6. Do not operate appliance with wet hands or operate in a wet working environment.
7. Do not let the power cord hang off the edge of the table or counter or come in contact with hot surfaces.
8. Do not place the toaster on or near a hot surface.
9. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
10. Unplug appliance from outlet when not in use.
11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
12. Children should be supervised to ensure that they do not play with the appliance.
13. Do not move the toaster while it is switched on.
14. Do not place any objects such as toast, bread or similar on top of your toaster when in use.
15. Operate the toaster on a flat level surface.

After Sales Support

Telephone: 1300 663 907
Email: customercare@winplus.com.au



Warnings Continued

16. The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
17. Do not leave your toaster unattended when in use.
18. Clean the crumb tray regularly.
19. Do not allow crumbs to accumulate in the crumb tray.
20. Do not toast dry items that may be flammable as they could catch on fire.
21. Never attempt to extract jammed toast, crumpets or muffins with a knife or any metal object, as contact with the live element may cause electrocution.
22. The temperature of accessible surfaces may be high when the appliance is operating.
23. Appliances are not intended to be operated by means of an external timer or separate remote-control system.

After Sales Support

Telephone: 1300 663 907
Email: customercare@winplus.com.au



Features

- Die Cast Aluminium Body
- Self-Centre Function
- 10mm Additional Lift
- Removable Crumb Tray
- Anti-Jam Function
- Automatic Power Cut-Off
- Anti-Slip Feet
- Defrost Setting
- Reheat Setting
- Bagel Setting
- Cancel
- Blue Backlit Buttons
- Electronic Browning Control

Technical Specifications

Model Number: TDC800

Capacity: 2 Slice

Colour: Red, White, Black

Weight: 2.5kg

Voltage: 220-240V AC 50HZ, Class 1

Warranty: 3 years


Power: 800W

After Sales Support

Telephone: 1300 663 907
Email: customercare@winplus.com.au



Assembly and Parts List

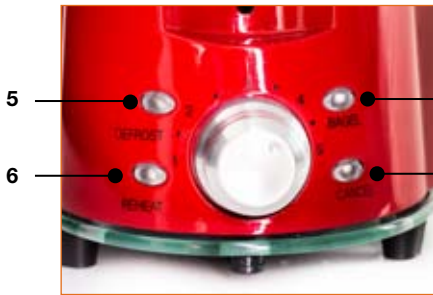

- | | | |
|--------------------------------|-------------------------|-------------------------|
| 1. Bread Slots | 5. Defrost | 6. Reheat |
| 2. Lever | 7. Bagel | 7. Bagel |
| 3. Electronic Browning Control | 8. Cancel | 8. Cancel |
| 4. Anti-slip Feet | 9. Removable Crumb Tray | 9. Removable Crumb Tray |
| 5. Defrost | | |

After Sales Support

Telephone: 1300 663 907
 Email: customer-care@winplus.com.au

Getting Started

Before First Use

Before using your toaster for the first time remove any packaging material and promotional labels. Position your toaster on a firm level table or bench, clear of curtains and other combustible materials.

Operation of your Toaster

1. Plug the toaster into a household power outlet and turn on the power.



2. Place up to 2 slices of bread, muffins or bagels into the bread slots.



3. Select the browning setting using the dial to the desired level. "1" being light and "5" being dark.

4. Once the browning setting has been selected, push the lever down gently until it clicks into place. This will commence the toasting cycle. At the end of the toasting cycle the toaster automatically raises the toast. Pressing the cancel button will stop the cycle and raise the bread at any point.

After Sales Support

Telephone: 1300 663 907
Email: customercare@winplus.com.au



High Lift function

To aid safe removal of toasted items, use the high lift function to safely remove the items. Simply lift the lever upwards slightly once the toasting cycle is complete.

NOTE: In the unlikely event that the bread or crumpet becomes jammed, switch the power off at the power outlet. Remove the power plug from the power outlet and then carefully ease the bread out of the toaster, ensuring that you do not damage the element.



Frozen Bread

When toasting frozen bread:

1. Place the bread in the bread slots.
2. Choose the browning setting, and lower the lever until it clicks in place. Press the "Defrost" setting. The light behind the 'defrost' button will illuminate.

Bagels/Crumpets

Selecting the bagel setting will activate only the central heating elements, cooking only one side of your toast, muffin, crumpet or bagel.

1. Insert 1 or 2 slices with the side to be toasted facing inwards in the bread slots.
2. Choose the browning setting, and lower the lever until it clicks in place.
3. Press the "Bagel" setting.
4. The light behind the "Bagel" button will illuminate.

After Sales Support

Telephone: 1300 663 907
Email: customercare@winplus.com.au



Reheating Toast

To reheat toast:

1. Place the bread in the bread slots.
2. Choose the browning setting '1.' Lower the lever until it clicks in place.
3. Press the 'Reheat' setting, the light behind the 'Reheat' button will illuminate.

NOTE: Only use plain 'unbuttered' toast.

Cleaning and Storage

Always switch off and unplug the appliance from the power outlet before cleaning. Make sure the toaster has cooled down if recently in use. Clean the exterior with a damp cloth.

WARNING: Do not immerse the appliance in water or any other liquid.

Removable Crumb Tray

It is important to clean out the crumb tray regularly. If crumbs accumulate they can be a fire hazard. To clean, slide out the crumb tray, dispose of the crumbs and wipe down the tray with a damp cloth. Ensure the tray is dry before reinserting it.

TIP: You can also clean the interior of the toaster by turning it upside down over the sink or bin and gently shaking to clear the crumbs.



After Sales Support

Telephone: 1300 663 907
Email: customercare@winplus.com.au



Storage

Ensure the toaster is turned off, unplugged, clean and dry before storing it. Do not store anything on top of the toaster.

After Sales Support

Telephone: 1300 663 907
Email: customercare@winplus.com.au

FAQ

Problem	Solution
<i>My toaster won't turn on</i>	<ul style="list-style-type: none">• Check the power outlet is turned on• Make sure you press the lever until it clicks into place
<i>My bread is stuck in the toaster</i>	<ul style="list-style-type: none">• Ensure you turn off power outlet and unplug cable and allow time for the toaster to cool. Once unplugged and cool attempt to remove the bread by using the 'high lift' function. If still stuck, turn toaster upside down over a sink and gently shake.
<i>My toast is burning</i>	<ul style="list-style-type: none">• Turn down the browning control. 1 is the lowest setting.
<i>There is a burning smell when I use my toaster</i>	<ul style="list-style-type: none">• Clean your toaster and crumb tray to remove any crumbs or bread, see page 13.

After Sales Support

Telephone: 1300 663 907
Email: customercare@winplus.com.au



Index

Assembly and Parts List	10
Bagel	9, 11, 12
Contents	3
FAQ	15
Features	9
Frozen Bread	12
General Safety	6
Getting Started	11
High Lift function	12, 15
Lever	10, 11, 12, 13, 15
Reheat	9, 11, 13
Removable Crumb Tray	9, 13
Storage	13, 14
Technical Specifications	9
Warnings	7-8
Warranty Details	4
Welcome	5

After Sales Support

Telephone: 1300 663 907
Email: customercare@winplus.com.au



Repair & Refurbished Goods or Parts Notice

2 Slice Toaster

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:

Supplier name: Winplus Australasia
Supplier address: PO Box 537
 Bayswater Business Centre VIC 3153
Supplier telephone: 1300 663 907
Supplier email address: customercare@winplus.com.au

After Sales Support
 Telephone: 1300 663 907
 Email: customercare@winplus.com.au





