

ViSAGE[®]



Men's Shaver

Model Number MCS003

INSTRUCTION MANUAL



Contents

- 03 Warranty Page**
- 04 Welcome**
- 05 General Information and Safety Instructions**
- 07 Features / Technical Specifications**
- 08 Assembly and Parts List**
- 09 Getting Started**
- 17 FAQ**
- 18 Index**
- 19 Repair & Refurbished Goods or Parts Notice**

After Sales Support



1300 663 907



customercare@winplus.com.au

Model Number MCS003

2



ViSAGE[®]

Men's Shaver



Warranty Details

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion.

The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

  1300 663 907

 customercare@winplus.com.au

MODEL: MCS003 PRODUCT CODE: 46695 08/2014





Welcome


Congratulations on choosing to buy a Visage® product.

All products brought to you by Visage® are manufactured to the highest standards of performance and safety, and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty.

We hope that you will enjoy using your purchase for many years to come.



After Sales Support

 1300 663 907

 customercare@winplus.com.au

Model Number MCS003

4






General Information and Safety Instructions

GENERAL INFORMATION & SAFETY INSTRUCTIONS

- Do not use in dusty conditions
- Do not drop the Men's Shaver. Dropping or rough use of the unit may cause damage.
- Do not place near strong magnets or strong electric currents.
- If the Men's Shaver is not in use, turn off and unplug from any power source.
- Do not attempt to repair, open or alter any components of the Men's Shaver. In the case of improper usage or if you have opened, altered and repaired the product yourself, all guarantees are void.
- The supplier does not accept responsibility for additional or consequential damage other than covered by legal product responsibility.
- The supplier is not responsible for the end use of this product including any improper use or when used for purposes that are not specified.

After Sales Support

 1300 663 907

 customercare@winplus.com.au

Model Number MCS003

5



Warnings

1. Read all instructions before operating the Men's Shaver for the first time.
2. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
3. Do not use the appliance for other than intended or specified purposes.
4. This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities. For safety, keep the device away from these persons. Always read all instructions before using the appliance.
5. Do not reach for the appliance if it is submerged in water. Unplug immediately.
6. Do not use in the shower or bath.
7. Do not place or store the appliance where it can fall or be pulled into a sink or bath.
8. Unless charging, always unplug this appliance from the power point immediately after use and after charging.
9. Unplug the appliance before cleaning.
10. To avoid electrical shock, do not place the cord, plug or shaver in water or other liquids.
11. Keep the Men's Shaver and power cable away from heat sources and hot surfaces.
12. Always protect the power cable from undue flexing and wearing – do not allow the cable to hang off edge of the counter or table.
13. If the supply cord is damaged, do not use the product. Contact customer service for repair or replacement.
14. Do not use this appliance with an external timer or separate remote-control system of any kind.
15. Charge, use and store the appliance between a temperature of 0°C and 35°C.
16. Do not operate with aerosol spray products or where oxygen is being administered.
17. Only for use on facial hair.
18. Do not use if there is any damage to the blades or tracks as it may cause injury.

After Sales Support



1300 663 907



customercare@winplus.com.au

Model Number MCS003

6



Features

- Triple rotary shaver with floating heads
- Ergonomic design
- 1 hour quick charge
- Up to 60 minutes run time
- Pop-up trimmer
- Worldwide voltage
- LED charge indicator

Technical Specifications


Model Specification: MCS003


Voltage: 100-240V 50/60Hz

Weight: 156g

Warranty: 1 Year

After Sales Support

 1300 663 907

 customer care@winplus.com.au

Model Number MCS003





Assembly and Parts List



- | | |
|---------------------------------|--------------------|
| 1. Protective Cap | 6. Trimmer |
| 2. Shaving Head | 7. Power Cord Slot |
| 3. Shaving Head Release Buttons | 8. Travel Pouch |
| 4. ON/OFF Button | 9. Power Cord |
| 5. Charging Light | 10. Cleaning Brush |

After Sales Support

 1300 663 907

 customercare@winplus.com.au

Model Number MCS003

Getting Started

Charging

Before first use of your Men's Shaver it is recommended to fully charge the unit. The shaver has an approximate charge time of 1 hour and running time of 1 hour. Remove any packaging material and promotional labels before using your shaver for the first time.



Charging Light	Status
Flashing red	Battery is low
Solid red	Charging
Flashing green	Battery is full charged
Solid green	Unit is ON

To Charge


1. Plug the power cord into a power point.
2. Insert the cord into the shaver and turn on power point.

NOTE: Ensure the shaver is safely located away from any water or any other liquids.

3. The charging light will turn red indicating the shaver is charging.
4. Once charging is complete the charging light will flash green.
5. Unplug the cord from the shaver and turn off at the power point.

NOTE: Unit may become warm during charging, this is normal.

After Sales Support

 1300 663 907

 customer care@winplus.com.au

Model Number MCS003

Shaving

Initial use of the Men's Shaver may involve an adjustment period for your face as it gets used to an electric shaver. If changing from manual shaving this may be more noticeable as the technique and cutting style is different. Allow 2-4 weeks to adjust to this method.

Shaving Tips

Read the following tips before use:

- Always shave with a dry face ideally prior to showering or bathing.
- Hold the shaver at a 90°C angle to your face to ensure the three heads have equal contact.
- Stretch the skin when shaving to provide a consistent surface to ensure the hairs enter the cutting tracks.
- Avoid pressing the shaver hard against your skin to prevent irritation and potential damage to rotary heads.
- Use a slow circular motion whilst shaving.
- You can use the shaver while it's plugged into a power outlet, however this is not recommended as it may affect the battery performance over time.


Operation

1. Remove the protective cap.
2. Turn the shaver on by pressing the ON/OFF button once.
3. The ON/OFF light will illuminate red.



NOTE: If the charging light is flashing red it is recommended to charge the shaver, follow instructions on page 9.

After Sales Support

 1300 663 907

 customer care@winplus.com.au

Model Number MCS003

10



4. With the shaver at a 90°C angle to your face, stretch the skin and using a circular motion proceed to shave desired area.

WARNING: Do not open head unit when unit is turned on as blades may fall out.

5. Press the ON/OFF button to turn the shaver off when finished.

Trimming

The shaver comes equipped with a handy beard trimmer to tackle difficult hairs or side burns.

To Trim


1. Remove the protective cap.
2. Turn the shaver on by pressing the ON/OFF button once.
3. The ON/OFF light will illuminate red.
4. Push the trimmer slide towards the head to pop up the trimmer.



NOTE: The three heads continue operating when the beard trimmer is engaged.

5. With the trimmer at a 90°C angle to your face stretch the skin and gently shave desired area.
6. Slide the trimmer back down when finished.
7. Press the ON/OFF button to turn the shaver off.

After Sales Support

 1300 663 907

 customer@winplus.com.au

Model Number MCS003



Cleaning and Storage

Regular cleaning of the Men's Shaver is very important to continue optimal performance of the appliance. Take care when cleaning the internal parts of the shaver, they have been precision made and any rough handling could easily result in damage and affect performance. Ensure before performing any cleaning the shaver is turned off and unplugged from any power point.

Daily Cleaning

Perform the following after every use.

1. Ensure the unit is turned off and is unplugged from any power point.
2. Press the shaving head release buttons.



3. Shake out any hairs. Use the included cleaning brush to remove any stubborn hairs.

NOTE: Be careful not to shake too vigorously. Do not bend the shaving head backwards as this may damage the hinge.

WARNING: Do not rinse shaver under water as the unit is not waterproof. Contact to water may cause the unit to stop working or cause injury.

After Sales Support

☎ 1300 663 907

💻 customercare@winplus.com.au

Model Number MCS003



Cleaning the Trimmer

1. Ensure the unit is switched off and is unplugged from any power point.
2. Push the trimmer slide towards the head to pop up the trimmer.
3. Use the included brush to remove any hairs from the blades.

Monthly Cleaning

Perform a more thorough cleaning of the shaving head components every month to ensure these delicate parts continue to operate as expected.

1. Ensure the unit is turned off and is unplugged from any power point.
2. Press the shaving head release buttons.
3. Shake out any hairs.

NOTE: Be careful not to shake too vigorously


4. Remove the blade covers by squeezing the tabs inwards and twisting clockwise to pull out. Remove all three.



5. Gently push out the blade head and blades from the front face. Separate the blades from the blade heads.



After Sales Support

 1300 663 907

 customercare@winplus.com.au

Model Number MCS003

13





WARNING: Take care when handling the sharp blades not to cut the skin.


6. Use the included brush to thoroughly clean the blade heads and blades.




7. Wash the blade covers, blade heads and blades with a small amount of soap and water then rinse.
8. Allow to dry before reassembling.

WARNING: Do not attempt to dry any parts with a towel or tissues as this may damage the delicate parts.

After Sales Support

 1300 663 907

 customercare@winplus.com.au

Model Number MCS003

14



9. With the shaving head still open place the blade heads back into the slots. Ensure the small tabs face towards to the centre and they are sitting flat.





NOTE: Do not force the parts back into place as the shaving head may snap backwards causing damage.

10. Insert the blades as shown, into the blade heads.



After Sales Support

 1300 663 907

 customer@winplus.com.au

Model Number MCS003

15





11. Squeezing the blade cover tabs inwards, line up with the slots and twist them anti-clockwise until in place.




12. Close the shaving head and replace the protective cap.



NOTE: If you have issues closing the shaving head, check that all parts are assembled correctly.

After Sales Support

 1300 663 907

 customercare@winplus.com.au

Model Number MCS003


16



FAQ

Problem	Solution
<i>My shaver won't turn on</i>	<ul style="list-style-type: none">• Ensure the battery is fully charged, follow instructions listed on page 9.• Press the ON/OFF button
<i>The shaver head won't close</i>	<ul style="list-style-type: none">• Check all parts are assembled correctly. Refer to cleaning instructions for details on page 13.
<i>The shaver isn't removing any hair</i>	<ul style="list-style-type: none">• The blades may be affected by hair or other particles, ensure you regularly clean the shaver according to the instructions listed on page 12-16.

After Sales Support

 1300 663 907


 customer care@winplus.com.au

Model Number MCS003

Index

Assembly and Parts List	8
Blade Cover	13, 14, 16
Blade Head	13, 14, 15
Blades	6, 11, 13, 14, 15, 17
Charging Light	8, 9, 10
Cleaning Brush	8, 12
FAQ	17
Features	7
General Information and Safety Instructions	5
Getting Started	9
On/Off Button	8, 10, 11, 17
Power Cord	8, 9
Power Cord Slot	8
Protective Cap	8, 10, 11, 16
Shaving Head	8, 12, 13, 15, 16
Shaving Head Release Buttons	8, 12, 13
Technical Specifications	7
Travel Pouch	8
Trimmer	7, 8, 11, 13
Warranty Page	3
Welcome	4

After Sales Support

 1300 663 907

 customercare@winplus.com.au

Model Number MCS003

18



ViSAGE[®]

Men's Shaver

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.



If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:

Winplus Australasia
PO BOX 537
Bayswater Business Centre
Bayswater, VIC 3153

Winplus Help Desk 1300 663 907
(Operating Hours: Mon-Fri 08:30AM to 6:00PM)

customercare@winplus.com.au
www.winplus.com.au

AFTER SALES SUPPORT

  1300 663 907

 customercare@winplus.com.au

MODEL: MCS003 PRODUCT CODE: 46695 08/2014





ViSAGE[®]

