

ViSAGE[®]

MEN'S SHAVER

WITH THREE ROTARY BLADES
INDIVIDUALLY SPRUNG TO
PROVIDE A CLOSE SHAVE



FEATURES



CONTOURS TO
YOUR FACE



EASY TO CLEAN



SHORT CHARGE TIME,
LONG RUN TIME



POP-UP TRIMMER

GETTING STARTED



- 1.** CHARGE THE SHAVER FOR 1 HOUR BEFORE FIRST USE. PLUG THE POWER CORD INTO A POWER POINT AND TURN ON



- 2.** WHEN THE CHARGING LIGHT FLASHES GREEN THE UNIT IS FULLY CHARGED. UNPLUG THE POWER CORD




- 3.** TO BEGIN SHAVING, REMOVE THE PROTECTIVE CAP & PRESS THE ON/OFF BUTTON



- 4.** WITH THE SHAVER AT A 90° C ANGLE TO YOUR FACE STRETCH THE SKIN AND USING A CIRCULAR MOTION PROCEED TO SHAVE DESIRED AREA. TURN OFF THE SHAVER WHEN FINISHED



- 5.** CLEAN AFTER EVERY USE; ENSURE THE SHAVER IS TURNED OFF & UNPLUGGED. PRESS THE SHAVING HEAD RELEASE BUTTONS

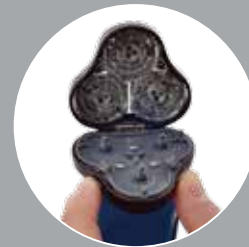

- 6.** GENTLY SHAKE OUT ANY HAIR & USE THE INCLUDED BRUSH TO CLEAN

MODEL SPECIFICATIONS	MCS003
VOLTAGE	100-240V 50/60Hz
ACCESSORIES	POWER CORD, TRAVEL POUCH & CLEANING BRUSH
WARRANTY	1 YEAR

FOR MORE INFORMATION
EMAIL CUSTOMERCARE@WINPLUS.COM.AU
OR CALL 1300 663 907

ViSAGE[®]