



# Swing Arm TV Bracket

**Model Number: HE314052T** 

**INSTRUCTION MANUAL** 











### **Swing Arm TV Bracket**

# **Warranty Details**

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

**AUS** 1300 663 907

customercare@winplus.com.au

MODEL: HE314052T PRODUCT CODE: 46432 08/2014







vvarranty	2
Contents	3
Welcome / General Safety Instructions	4
Product Features	5
Parts List	6
Installation Tips	7-12
Mounting Bracket to your Wall- Concrete Wall	7
Mounting Bracket to your Wall- Timber Wall	8
Attaching Bracket to your Screen	9
Attach TV on your Mount	11
Repair & Refurbished Notice	15





### Welcome

Congratulations on choosing to buy a BAUHN® product. By doing so you now have the assurance and peace of mind that comes with purchasing a product made by one of the leading manufacturers. All products brought to you by BAUHN® are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty. We hope you will enjoy using your purchase for many years to come.

### General Safety Instructions


Winplus Australasia is not responsible for any injuries or problems that may occur when installing your product. Please take proper safety precautions when installing and take note of all warnings contained within the manual. Improper use or installation may cause damage or serious injury.

Check carefully to ensure that you have all parts included in the product and there are no defective parts. Never use parts or products that are defective in some way. Should you have any questions about any of the pack contents, contact After Sales Support for assistance.





### Product Features

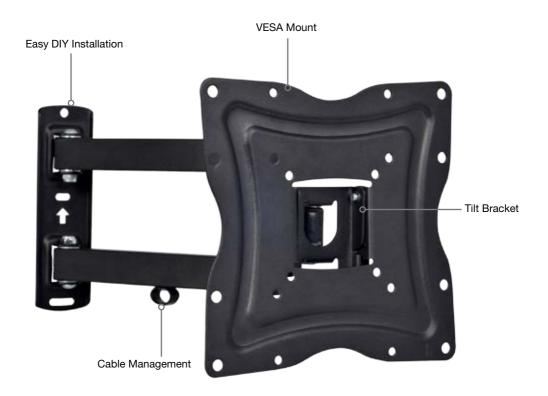

- 13" to 47" TVs
- 40kg load max
- 180 degree adjustment
- Tilt -5 to 15 degrees
- Extendable 59mm to 438mm

#### **After Sales Support**







### Parts List

- 4 x TV Arm Extension
- 1 x VESA TV Mount Plate
- 1 x Swing Arm Mount

#### **Hardware for Assembly**

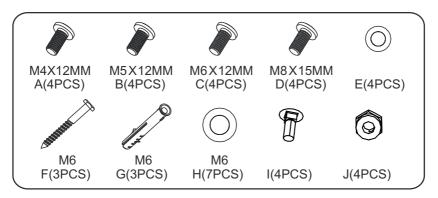

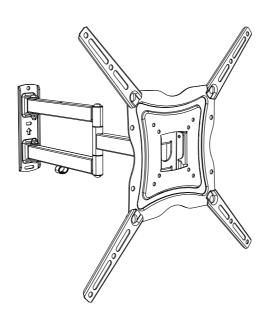












#### **IMPORTANT!**

- 1. This product must be mounted to solid brick, concrete or solid timber.
- 2. If mounting to timber studs consult a professional for advice.
- 3. This product is not designed to mount to plasterboard or other hollow walls.
- 4. Ensure the wall you are using for mounting is structurally sound and secure. It must be able to support the weight of the mount and TV.

### Mounting the Bracket to Your Wall-Concrete or Brick Mounting

- 1. Select the area you wish to mount your TV Bracket
- 2. Carefully measure and mark the area for your 3 x screw holes. Ensure the mount is straight before proceeding.
- 3. Drill pilot holes into the concrete using a 8mm masonry drill bit following the below and insert the plastic wall plug (G) as shown in the diagram below.

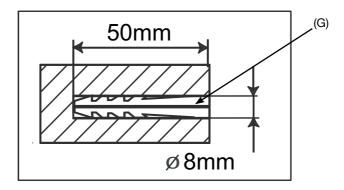



 














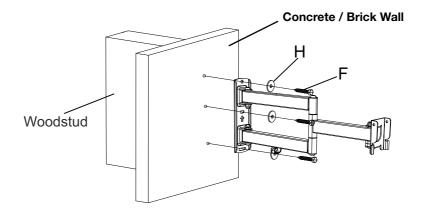

# Mounting the Bracket to Your Wall-Timber Stud Mounting


- 1. Select the area you wish to mount your TV Bracket
- 2. Carefully measure and mark the area for your 3 x screw holes. Ensure the mount is straight before proceeding.
- 3. Drill pilot holes into the timber using a timber drill bit following the below diagram.

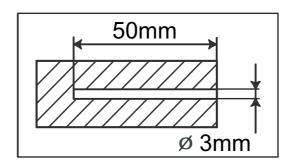


**After Sales Support** 





 

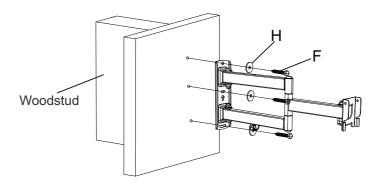







### Attaching Brackets to your TV Screen

There are two options available for mounting your TV to the bracket.

- 1. For TVs 10" to 36" use option A
- 2. For TVs 37" to 46" use option B

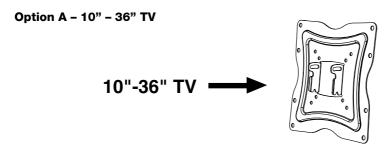

- 1. Use the supplied VESA mounting plate.
- 2. Align the holes on the rear of your TV to the mount face.
- 3. Use the supplied bolts (A-D) and washers (E) of the suitable size for your TV to attach the mount.

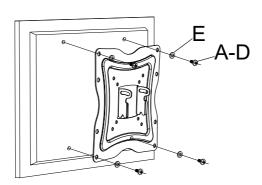







#### Option B - 37" to 46" TVs

1. Attach the mount extending arms to your bracket as shown below

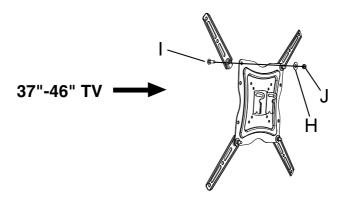

- 2. Align the holes on the rear of your TV to the mount face.
- 3. Use the supplied bolts (A-D) and washers of the suitable size for your TV to attach the mount.




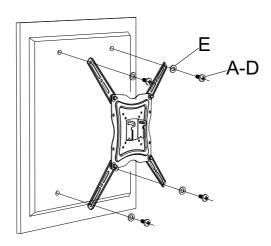




### Attach the TV on your Mount

1. Lift the TV onto the bracket arm as shown

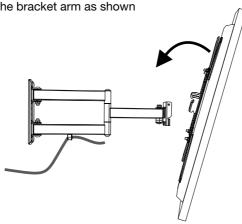

2. Fix the TV Mount to your TV using the supplied bolts and washers as shown.

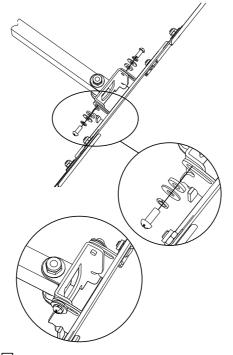


**After Sales Support** 





3. You can now adjust the mounting angle as required before tightening the screws.

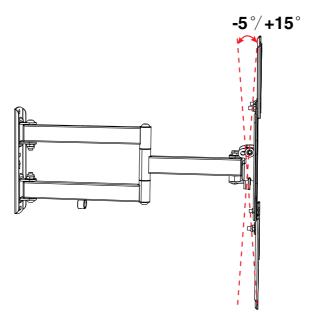




Notes:		







 





### **Swing Arm TV Bracket**

# Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:

Winplus Australasia PO BOX 537 Bayswater Business Centre Bayswater, VIC 3153

Winplus Help Desk 1300 663 907 (Operating Hours: Mon-Fri 08:30AM to 6:00PM)

customercare@winplus.com.au www.winplus.com.au

#### AFTER SALES SUPPORT

☎ <sup>AUS</sup> 1300 663 907

☐ customercare@winplus.com.au

MODEL: HE314052T PRODUCT CODE: 46432 08/2014











•



