

DELTA[®]

HOME SECURITY

MAGNETIC DOOR ALARM WITH KEYPAD

Model Number: IT414071C



GETTING STARTED GUIDE

1. Unpack

- Unpack the Delta Magnetic Door Alarm with Keypad.

2. Connect the batteries

- Open the battery panel from the back of the alarm.
- Remove the plastic tab to activate the batteries.

3. Set Your Personal Alarm Code

- Press the "Reset" button and wait for the red light on the front of the alarm to start flashing.
- Input your chosen 4 digit code while the red light is flashing.
- The light will change to green and flash 3 times to confirm the code has been validated.

4. Install the Alarm and Sensor

Note: Ensure the surface you are mounting to is clean and dry before attaching the unit or magnetic sensor

- Attach the mounting plate on to the back of the unit as shown.
- Find a suitable location for the alarm where the alarm and sensor are within 2cm of each other when the door or window is closed.


Note: The alarm should be attached to the door or window, the sensor should be attached to the frame

- Attach the alarm and sensor by peeling the backing off the adhesive tape.
- Press firmly and hold for 30 seconds to ensure a strong adhesion.

5. Switch Off when not in Use

- Once finished with the Magnetic Door Alarm with Keypad, ensure you turn the unit off by removing the batteries.

Note: If you will not be using the unit for an extended period, remove the batteries before storing.

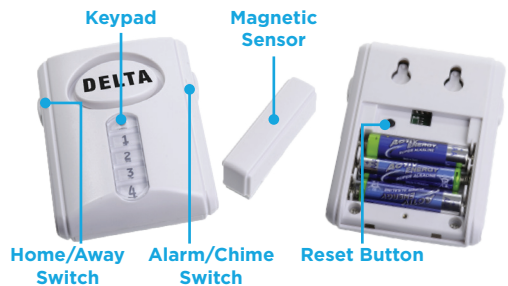

2a



3a



4a



4b



DELTA[®]

HOME SECURITY

MAGNETIC DOOR ALARM WITH KEYPAD

Model Number: IT414071C



OPERATING INSTRUCTIONS

Home & Away Modes

Home mode when Home Mode is active all door/window sensors will immediately sound the alarm when opened.

Away mode will arm 45 seconds after you set it and alarm 30 seconds after it is activated. This allows you time to exit or enter a room without sounding an alarm.

Alarm or Chime Mode

Alarm mode will set off a 120dB siren alarm sound when activated.

Chime mode will set off a chime sound when activated, ideal for small shops or offices.

Setting The Alarm

- Slide switch on the left side of the alarm to the "Alarm" or "Chime" position.
- Slide the switch on the right side of the unit to "Home" or "Away" mode.

Arming The Alarm

- Input your four digit code.
- The light will flash green to confirm the alarm has been set.
- If the wrong code is entered a high pitch tone will sound and the light will flash red 3 times.

Disarming The Alarm

- Input your four digit code.
- The light will flash green to confirm the alarm has been disarmed.

Note: *The alarm can be disarmed at any point after it has been activated*

Changing Your Personal Alarm Code

If you need to change your Personal Alarm Code, the steps are the same as setting it the first time:

- Press the "Reset" button and wait for the red light on the front of the alarm to start flashing.
- Input and 4 digit code while the red light is flashing.
- The light will change to green and flash 3 times to confirm the code has been validated.