

DELTA[®]

HOME SECURITY

DOOR & WINDOW ALARM 3 PACK

Model Number: IT414071A



GETTING STARTED GUIDE

1. Unpack

- Unpack the Delta Door & Window Alarms.

2. Connect the batteries

- Open the battery panel from the front of the alarm.
- Remove the plastic tab to activate the batteries.

3. Install the Alarms and Sensors

Note: Ensure the surface you are mounting to is clean and dry before attaching the unit or magnetic sensor

- Find a suitable location for the alarm where the alarm and sensor are within 2cm of each other when the door or window is closed.

Note: The alarm should be attached to the door or window, the sensor should be attached to the frame

- Attach the alarm and sensor by peeling the backing off the adhesive tape.
- Press firmly and hold for 30 seconds to ensure a strong adhesion.

4. Switch On

- Turn on the main power switch located inside the battery cover as shown in diagram 4.
- Close the battery cover.
- The Alarm will now sound when the sensor and alarm are more than 2cm apart.

5. Switch Off When Not in Use

- Once finished with the Door and Window Alarms, ensure the switches are turned to "Off" using the switch shown in diagram 4.

Note: If you will not be using the Door and Window Alarms for an extended period, remove the batteries before storing.

Battery Cover

Magnetic Sensor



On/Off Switch

