

# DELTA<sup>®</sup>

## HOME SECURITY

### REMOTE CONTROLLED MOTION DETECTOR WITH LIGHT Model Number: IT414071D



## GETTING STARTED GUIDE

### 1. Unpack

- Unpack the Delta Motion Detector with Light.

### 2. Connect the batteries

- Open the battery panel from the back of the alarm.
- Remove the plastic tab to activate the batteries.

### 3. Install Motion Detector with Light

- Find a suitable location for the alarm where the sensor is at least 1.2m from the ground and has a clear line of sight of the area you want monitored.
- Use the included mounting screws to secure the mounting plate to your wall.
- Click the mounting plate in place on the back of the motion detector unit, as pictured.

### 4. Switch On

- Press "Arm" on the remote control.
- A loud noise will sound to indicate the power is on.

### 5. Operating the PIR Sensor

There is a switch on the right hand side of the motion detector unit which will allow you to change between the two modes:

**Alarm + Light mode** will arm 25 seconds after "Arm" is pressed on the remote. The alarm will sound for 30 seconds after detecting motion, and immediately re-arm afterwards.

**Light mode** will illuminate the LED when motion is detected in low light/dark conditions. For example in a dark room movement will turn the light on.



At least 1.2m



# DELTA<sup>®</sup>

## HOME SECURITY

### REMOTE CONTROLLED MOTION DETECTOR WITH LIGHT

Model Number: IT414071D



## GETTING STARTED GUIDE

### 5a. Use - Alarm + Light

If the unit is switched to “Alarm + Light”, 25 seconds after it is turned on the alarm will be armed. This allows you time to arm and then leave a room. The alarm will activate and the red LED light on the front of the unit will flash for 30 seconds after detecting motion. The alarm can be turned off by pressing the “Disarm” button on the remote.

### 5b. Use - Light

If the unit is switched to “Light”, it will immediately light up when detecting motion in low light/dark conditions. In bright conditions the PIR Sensor light will not illuminate when motion is detected.

### 6. Switch Off when not in Use

- a. Once finished with the Motion Detector, ensure you turn the unit off using the switch on the side.

**Note:** If you will not be using the Motion Detector for an extended period, remove the batteries before storing.

5



**Switch on the Right  
Hand Side of the  
Motion Detector unit.**