

**ViSAGE**  
PRO STYLE



# Men's Foil Shaver

Model Number: AP415010

Product Number: 51730

## **INSTRUCTION MANUAL**

Version 5 - Issued 01/09/15



# Welcome

Congratulations on choosing to buy a Visage® product. All products brought to you by Visage® are manufactured to the highest standards of performance and safety, and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty.

We hope you will enjoy using your purchase for many years to come.

---

**AFTER SALES SUPPORT**

 **AUS** 1300 663 907

 [customercare@winplus.com.au](mailto:customercare@winplus.com.au)

MODEL: AP415010 PRODUCE CODE: 51730 12/2015



# Contents

<b>Welcome</b>	2
<b>Warranty Details</b>	4
<b>General Information &amp; Safety Instructions</b>	6
<b>Features</b>	8
<b>Technical Specifications</b>	8
<b>Assembly &amp; Parts List</b>	9
<b>Getting Started</b>	10
Charging	10
To Charge	10
<b>Instructions</b>	11
Shaving	11
Shaving Tips	11
Operation	11
Trimming	11
<b>Cleaning &amp; Storage</b>	12
Daily Cleaning	12
Cleaning the Trimmer	12
Monthly Cleaning	12
Storage	12
<b>FAQ</b>	13
<b>Disposal</b>	13
<b>Repair and Refurbished Goods or Parts Notice</b>	14
<b>Notes</b>	15





# VISAGE<sup>®</sup>

Men's Foil Shaver

## Warranty Details

---

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

---

#### AFTER SALES SUPPORT

 **AUS** 1300 663 907

 [customercare@winplus.com.au](mailto:customercare@winplus.com.au)

MODEL: AP415010 PRODUCT CODE: 51730 12/2015



## Warranty Note

**If you experience any issues with this product, or its performance is not what you had expected, please contact us at Winplus before returning the item to the store.**

**It is likely that we can resolve any problems for you via phone or email.**

**We can be reached on:**

**Phone: 1300 663 907 (Mon - Fri; 8:30am - 6:00pm EST)**

**Email: [customercare@winplus.com.au](mailto:customercare@winplus.com.au)**

**Web: [www.winplus.com.au](http://www.winplus.com.au)**

# General Information & Safety Instructions

Read this manual thoroughly before first use and keep it in a safe place for future reference, along with warranty card, purchase receipt and packaging. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

Follow all instructions and take notice of all warnings to reduce risk of fire or electric shock.

- Do not use in dusty conditions.
- Do not drop the Men's Shaver. Dropping or rough use of the unit may cause damage.
- Do not place near strong magnets or strong electric currents.
- If the Men's Shaver is not in use, turn off and unplug from any power source.
- Do not attempt to repair, open or alter any components of the Men's Shaver. In the case of improper usage or if you have opened, altered and repaired the product yourself, all guarantees are void.
- The supplier does not accept responsibility for additional or consequential damage other than covered by legal product responsibility.
- The supplier is not responsible for the end use of this product including any improper use or when used for purposes that are not specified.
- The external flexible cable or cord of this transformer cannot be replaced ; if the cord is damaged, the transformer shall be scrapped.
- **WARNING:** Detach the hand-held part from the supply cord before cleaning it in water.



Suitable for cleaning under an open water tap

This product complies with AS/NZS CISPR 14.1:2013, AS/NZS 60335.1 and AS/NZS 60335.2.8

---

#### AFTER SALES SUPPORT



 [customercare@winplus.com.au](mailto:customercare@winplus.com.au)

MODEL: AP415010 PRODUCE CODE: 51730 12/2015



## General Safety Warnings

1. Read all instructions before operating the Men's Shaver for the first time.
2. This appliance is intended for private domestic use only and is not suitable for commercial or trade purposes.
3. Do not use the appliance for other than intended or specified purposes.
4. This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities. For safety, keep the device away from these persons.
5. Always read all instructions before using the appliance.
6. Do not place or store the appliance where it can fall or be pulled into a sink or bath.
7. Unless charging, always unplug this appliance from the power point immediately after use and after charging.
8. Unplug the appliance before cleaning.
9. Keep the Men's Shaver and power cable away from heat sources and hot surfaces.
10. Always protect the power cable from undue flexing and wearing – do not allow the cable to hang off edge of the counter or table.
11. If the supply cord is damaged, do not use the product. Contact customer service for repair or replacement.
12. Do not use this appliance with an external timer or separate remote-control system of any kind.
13. Charge, use and store the appliance between a temperature of 0°C and 35°C.
14. Do not operate with aerosol spray products or where oxygen is being administered.
15. Only for use on facial hair.
16. Do not use if there is any damage to the blades or tracks/foil as it may cause injury.

---

### AFTER SALES SUPPORT



 [customercare@winplus.com.au](mailto:customercare@winplus.com.au)

MODEL: AP415010 PRODUCE CODE: 51730 12/2015



**1**

YEAR WARRANTY

# Features

- Stainless steel foil blades
- Multi-direction pivoting head
- Wet/Dry operation
- LED Display
- 60 min operating time
- Corded/Cordless function
- Pop-up trimmer
- Rubberised grips
- Worldwide voltage
- Accessories

# Technical Specifications

Model Specification:	AP415010
Warranty:	1 Year
Adaptor input rating:	100-240V~,50/60Hz,0.2A
Adaptor output rating:	5V  ,1000mA, IP20;
Shaver Input:	5V  7W
Shaver Weight:	191g
Battery Type:	Lithium Ion
Battery Capacity:	800mAh
Full Charge Time:	2 Hours
Cordless Shave Time:	Up to 60 Minutes
Water Resistance:	IPX7
Dimensions:	160 x 65 x 55 mm
Adaptor Weight:	70g

---

## AFTER SALES SUPPORT



 [customercare@winplus.com.au](mailto:customercare@winplus.com.au)

MODEL: AP415010 PRODUCE CODE: 51730 12/2015





# Assembly & Parts List



- |                         |                         |                         |
|-------------------------|-------------------------|-------------------------|
| 1. Protective Cap       | 6. Charging Base        | 11. Cleaning Brush      |
| 2. Shaving Head         | 7. Base Power Indicator | 12. Travel Pouch        |
| 3. Shaving Head Release | 8. Trimmer              | 13. Instruction Manual* |
| 4. ON/OFF Button        | 9. Power Cord Slot      | 14. Quick Start Guide*  |
| 5. Charge Display       | 10. Power Adaptor       | 15. Warranty Card*      |

\* Not pictured

## AFTER SALES SUPPORT

 **AUS** 1300 663 907

 [customercare@winplus.com.au](mailto:customercare@winplus.com.au)

MODEL: AP415010 PRODUCE CODE: 51730 12/2015



# Getting Started

## Charging

Before first use of your Men's Shaver it is recommended to fully charge the unit. The shaver has an approximate charge time of 2 hours and running time of 1 hour. Remove any packaging material and promotional labels before using your shaver for the first time.

Charge Display	Status
Number Flashing Blue	Battery Level Percentage
Charge Icon Solid Red	Charging
Charge Icon Flashing Red	Fully Charged



## To Charge

1. Insert the power adaptor into the charging base. Insert the other end into a power point and turn on. The red charge indicator on the base will turn on.

*Note: Alternatively you can plug the power adaptor directly into the shaver to charge.*

2. Place your shaver into the charging base, ensuring it clicks into the charging pins.

**WARNING:** Ensure the shaver is safely located away from any water or any other liquids when charging.

3. The charge icon on the shaver will turn red indicating the shaver is charging.

4. Once charging is complete the charging light will flash red.

5. Turn off the power point.

**NOTE:** Unit may become warm during charging, this is normal.

## AFTER SALES SUPPORT



 [customercare@winplus.com.au](mailto:customercare@winplus.com.au)

MODEL: AP415010 PRODUCE CODE: 51730 12/2015



# Instructions

## Shaving

Initial use of the Men's Shaver may involve an adjustment period for your face as it gets used to an electric shaver. If changing from manual shaving this may be more noticeable as the technique and cutting style is different. Allow 2-4 weeks to adjust to this method.

## Shaving Tips

Read the following tips before use:

- Hold the shaver at a 90° angle to your face to ensure the foils have equal contact.
- Stretch the skin when shaving to provide a consistent surface to ensure the hairs enter the cutting tracks.
- Avoid pressing the shaver hard against your skin to prevent irritation and potential damage to foil heads.
- When dry shaving, you can use the shaver while it's plugged into a power outlet, however this is not recommended as it may affect the battery performance over time.
- The shaver can be used in the shower, however not whilst charging.
- Using shaving foam is not recommended when using the shaver as it can clog the foils and lower performance.
- If dry shaving, ensure your skin is dry and free from oils.

## Operation

1. Remove the protective cap.
2. Turn the shaver on by pressing the ON/OFF button once.
3. The charge display will illuminate, indicating the percentage of charge remaining.

*NOTE: If your shaver does not turn on, the battery may be discharged. Follow instructions on page 10.*

4. With the shaver at a 90° angle to your face, stretch the skin and shave the desired area

*WARNING: Do not open shaving head when unit is turned on.*

5. Press the ON/OFF button to turn the shaver off when finished.

## Trimming

The shaver comes equipped with a handy beard trimmer to tackle difficult hairs or side burns.

### To Trim

1. Remove the protective cap.
2. Turn the shaver on by pressing the ON/OFF button once.
3. The charge display will illuminate.
4. Push the trimmer slide located on the back of the shaver towards the head to pop up the trimmer.

*NOTE: The head will continue operating when the beard trimmer is engaged.*

5. With the trimmer at a 90° angle to your face stretch the skin and gently shave desired area.
6. Slide the trimmer back down when finished.
7. Press the ON/OFF button to turn the shaver off.



---

### AFTER SALES SUPPORT



[customercare@winplus.com.au](mailto:customercare@winplus.com.au)

MODEL: AP415010 PRODUCE CODE: 51730 12/2015



# Cleaning & Storage

Regular cleaning of the Men's Shaver is very important to continue optimal performance of the appliance. Take care when cleaning the internal parts of the shaver. They have been precision made and any rough handling could easily result in damage and affect performance. Ensure before performing any cleaning the shaver is turned off and unplugged from any power point.

## Daily Cleaning

Perform the following after every use:

1. Ensure the unit is turned off and is unplugged from any power point.
2. Press the shaving head release buttons.
3. Shake out any hairs. Use the included cleaning brush to remove any stubborn hairs.
  - a. Dispose of any hairs with normal household rubbish.
4. Lightly rinse the shaver head under running water.
5. Allow to air dry as using a towel may damage the blades.
6. Replace the shaving head when dry.

*NOTE: Be careful not to shake too vigorously.*

## Cleaning the Trimmer

1. Ensure the unit is switched off and is unplugged from any power point.
2. Push the trimmer slide towards the head to pop up the trimmer.
3. Use the included brush to remove any hairs from the blades.

## Monthly Cleaning

Perform a more thorough cleaning of the shaving head and components every month to ensure these parts continue to operate at optimum performance.

1. Perform step 1-4 of 'Daily Cleaning'.
2. Place a drop of liquid soap on both of the cutters.
3. Brush the soap using the supplied cleaning brush, ensuring that the soap is worked into the dirty cutters and any locations of hair build up.
4. Add a small amount of water to the cutters.
4. Clip the shaving head to back onto the shaver.
6. Turn the shaver on for approximately 30 seconds, then rinse the shaver head under running water while the shaver is still running.
7. Turn off the shaver, then release the shaving head using the release buttons.
8. Rinse the cutters and shaving head components thoroughly under running water.
9. Shake off any excess water that has remained.
10. Clip the shaving head to back onto the shaver.
11. Allow the shaver to completely dry before next use.

## Storage

If storing your shaver for an extended period of time (>1 week), it is recommended to ensure the shaver is charged to approximately 40%. Follow the steps in 'Charging' and keep the shaver in a cool, dry place.

---

### AFTER SALES SUPPORT



 [customercare@winplus.com.au](mailto:customercare@winplus.com.au)

MODEL: AP415010 PRODUCE CODE: 51730 12/2015

1

YEAR WARRANTY

# FAQ

Problem	Solution
Why isn't my shaver turning on?	<ul style="list-style-type: none"><li>• Ensure the battery is fully charged, follow instructions listed on page 10.</li><li>• Press the ON/OFF button.</li></ul>
The shaver head won't close.	<ul style="list-style-type: none"><li>• Please check that all parts are assembled correctly. Refer to cleaning instructions for details on page 12.</li></ul>
The shaver isn't removing any hair.	<ul style="list-style-type: none"><li>• The blades may be affected by hair or other particles. Ensure you regularly clean the shaver according to the instructions listed on page 12.</li></ul>
Can I shave with the power adaptor plugged directly into the shaver?	<ul style="list-style-type: none"><li>• If performing a dry shave only, this shaver can be used whilst powered directly by the adaptor. Do not perform a wet shave with the shaver powered directly by the adaptor.</li></ul>

# Disposal

At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.

If you require another copy of this instruction manual, please contact [customer care@winplus.com.au](mailto:customer care@winplus.com.au) to obtain an electronic copy.

---

#### AFTER SALES SUPPORT

 **AUS** 1300 663 907

 [customer care@winplus.com.au](mailto:customer care@winplus.com.au)

MODEL: AP415010 PRODUCE CODE: 51730 12/2015





# VISAGE®

## Men's Foil Shaver

# Repair and Refurbished Goods or Parts Notice

---

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

**We recommend you save this data elsewhere prior to sending the product for repair.**

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

**Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.**

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:

Winplus Australasia  
PO BOX 537  
Bayswater Business Centre  
Bayswater, VIC 3153

Winplus Help Desk 1300 663 907  
(Operating Hours: Mon-Fri 08:30AM to 6:00PM)

customer@winplus.com.au  
www.winplus.com.au

---

AFTER SALES SUPPORT

 (AUS) 1300 663 907

 customer@winplus.com.au

MODEL: AP415010 PRODUCT CODE: 51730 12/2015





ViSAGE<sup>®</sup>