

STIRLING[®]

Designer Collection

Diecast Stand Mixer



Version 1



Starting Up:

1.



Unpack

Place the stand mixer on a level, stable surface. Ensure that the speed control dial is in the OFF position. Plug the power cord into a mains outlet and switch on.

2.



Lift The Mixer Head

Rotate the tilt head release lever clockwise and tilt the mixer head upwards until it clicks securely into place.

3.



Lock The Bowl

Place the mixing bowl into the base of the mixer and turn it clockwise until it is correctly locked in place.

4.



Attach Mixing Tool

Attach the required mixing tool by inserting it onto the shaft on the mixer head.

5.



Add Ingredients

Place ingredients into the bowl in accordance with your recipe.

6.



Lower Mixer Head

Rotate the tilt head release lever clockwise and lower the mixer head into the bowl. Push firmly until it locks securely into place.

7.



Attach Splash Guard

Attach the splash guard and easy pour attachment if required.


8.



Start Mixing

To start mixing, turn the speed control dial clockwise to the appropriate speed level.

9.

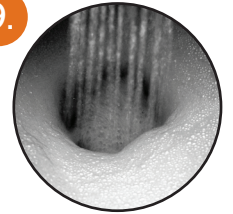

Cleaning

When mixing is complete, turn the speed control dial to the OFF position and unplug the unit. Ensure all parts are cleaned after use.

STIRLING[®]
DesignerCollection

For more information
please visit stirlingappliances.com.au
or call 1300 663 907

Model Specifications	AP170342
Colour	Charcoal
Voltage	220-240V AC 50/60Hz
Power	700W
Capacity	4L
Weight	6kg
Warranty	3 years