




GETTING STARTED

ADDING A DEVICE BY CODE

1 Open the back battery cover and insert the AA batteries included.



2 Using the code book, find the first code of the device and manufacturer you are searching for.

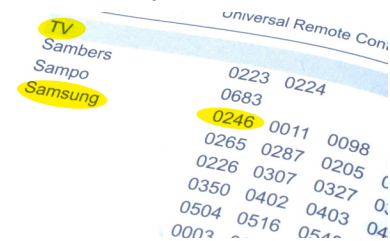

3 Press and hold the “Set” button for 3 seconds until “CODE SETUP” appears on the LCD screen, then release and press “OK”
SET > CODE SETUP > OK

4 Press the down button until “CODE SET” appears, then press “OK”

5 Press the source button you would like to program (TV, DVD, etc.) the press “OK”.



6 Enter in the number found in the code book and press “OK”. If you have entered in a valid code “SUCCESS” will briefly appear. If you have entered an invalid code “NOT FOUND” will appear. Try the number again.

7 Press the “EXIT” button twice to return to the main display.

If the remote does not correctly operate your device after programming, find the next code in the code library and repeat the steps above.

NOTE: If your manufacturer does not appear in code book or none of your manufacturer codes do not work, see the Learning Function section on Page 13 to manually add your code with the existing remote.



GETTING STARTED

ADDING A DEVICE BY BRAND

- 1** Open the back battery cover and insert the AA batteries included.



- 2** Press the source button you would like to program (TV, DVD, etc.) then press "OK".



- 3** Press and hold the "Set" button for 3 seconds until "CODE SETUP" appears on the LCD screen, then release and press "OK"
SET > CODE SETUP > OK

- 4** "BRAND SRCH" will appear, press "OK"

- 5** Press the UP and DOWN arrows on the keypad to find your manufacturer.

- 6** Press the left and right arrows to switch between manufacturer codes and press "OK".

- 7** Press the "EXIT" button twice to return to the main display.

NOTE: If the remote does not correctly operate your device after programming, choose a different code in step 5 above.



GETTING STARTED

ADDING A DEVICE AUTOMATICALLY

1 Open the back battery cover and insert the AA batteries included.



2 Turn on the device you want to program.

3 Press the source button you would like to program (TV, DVD, etc.) then press "OK".



4 Press and hold the "Set" button for 3 seconds until "CODE SETUP" appears on the LCD screen, then release and press "OK"
SET > CODE SETUP > OK

5 Press the down arrow until "AUTO SRCH" appears, press "OK"

6 Press "OK" again to begin the auto search.

7 When the device you are programming turns OFF press "OK" to save the code.
"SUCCESS" will briefly appear.

8 Press the "EXIT" button twice to return to the main display.

NOTE: If all features do not operate correctly, use the auto search again but hold your hand over the front of the remote until it counts past the last code you tried. If you have the original remote control see the LEARNING NEW REMOTE CODES getting started guide to manually program your remote.

BAUHN[®]
EFFORTLESS TECHNOLOGY

accessories

UNIVERSAL REMOTE CONTROL

CONTROL UP TO 10 DEVICES



GETTING STARTED

LEARNING NEW REMOTE CODES



1 Open the back battery cover and insert the AA batteries included. Ensure the other device remote control also has working batteries installed.

2 Turn on the device you want to program.

3 Press the source button you would like to program (TV, DVD, etc.) then press "OK".



4 Press and hold the "Set" button for 3 seconds. When "CODE SETUP" appears on the LCD screen press down until you see "LEARNING" and then press "OK"
SET > LEARNING > OK

5 "LEARN KEY" will appear, press "OK"
LEARN KEY > OK

6 "SELECT KEY" appears. Now press the button you would like to program on your Bauhn Universal Remote. "WAITING" appears.

7 While pointing both remotes at each other from 0.5cm to 5cm away, press and hold the button you want to send on the original device remote control.



8 "SUCCESS" will briefly appear on the Bauhn remote before returning to "SELECT KEY"

9 Repeats steps 6 to 8 until all the functions you require have been programmed.

10 Once you have finished programming all buttons, press the "EXIT" button three times to return to the main display.