

Version 1.1

Starting Up:

Warnings:

- Only use tap water in the water tank, do not use rain water, bottled water, detergents, descaling agents or any other chemicals. Do not touch the iron soleplate at any time during use, to avoid risk of burns. .
- . .
 - Before storing, ensure the Steam Station Iron has completely cooled down. This may take up to 2 hours.
- Never leave iron face down on any surface. Always place iron back on the main unit or stand the iron vertically in between . ironing strokes.

Position the Steam Station Iron on a firm level table, bench or ironing board.



Remove the water tank and fill with normal tap water, ensuring the water does not exceed the MAX fill line.



Select the desired steam setting by pressing either the right or left arrows. The corresponding light will flash to indicate the boiler is heating to the selected setting.



Press the iron release button and rotate the iron clockwise to release from the locking mechanism.



Plug the unit into a household power point and turn power point on.



Select the desired soleplate heat setting by rotating the iron temperature dial.



To iron with steam, press the steam button and release as desired.



Press the ON/OFF button, the unit will beep once. The iron thermostat light will turn on.



Once the selected steam setting light has stopped flashing and the iron thermostat light is off, the unit is ready for use.



Once you have finished ironing turn the unit off by pressing and holding the ON/OFF button and removing the plug from the power point.

NOTES

- The unit may make a pumping noise for a few seconds, this is normal.
- Always refer to garment manufacturer recommendations for the correct temperature setting.

Model Specifications STS2406 2000-2400W Power Tank Capacity 1.7L Warranty 3 years