

ViSAGE®



Cordless Hair Clippers

Model Number: AP180320

Product Number: 10714

INSTRUCTION MANUAL

Version 1.1 - Issued 11/04/19



Welcome

Congratulations on purchasing a Visage® product. All products brought to you by Visage® are manufactured to the highest standards of performance and safety, as part of our philosophy of customer service and satisfaction. We offer a comprehensive 1 Year Warranty.


We hope you will enjoy using your Cordless Hair Clippers for many years to come.

Contents

Welcome	2
Warranty Details	4
General Safety Instructions	6
Product Overview	8
Features	8
Technical Specifications	8
Assembly & Parts List	9
Getting Started	10
Before Cutting Hair	10
Charging the Battery	10
Optimising the Lifetime of the Rechargeable Batteries	10
Changing the Combs	10
Lubricating the Blades	10
Cutting Guide	11
Taper Control	11
Tips for Cutting Hair:	11
Outlining	12
Storage	12
Disposal	13
Cleaning & Maintenance	13
Repair and Refurbished Goods or Parts Notice	14

AFTER SALES SUPPORT



 
 customercare@winplus.com.au

MODEL: AP180320 PRODUCT CODE: 10714 08/2019

1

YEAR WARRANTY

AFTER SALES SUPPORT



 customercare@winplus.com.au

MODEL: AP180320 PRODUCT CODE: 10714 08/2019

1

YEAR WARRANTY



ViSAGE®

CORDLESS HAIR CLIPPERS

Warranty Details

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/ TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Warranty Note

If you experience any issues with this product, or its performance is not what you had expected, please contact us at Winplus

It is likely that we can resolve any problems for you via phone or email.



We can be reached on:

Phone: 1300 663 907 (Mon - Fri; 8:30am - 6:00pm EST)

Email: customercare@winplus.com.au

Web: www.winplus.com.au

AFTER SALES SUPPORT

  1300 663 907

 customercare@winplus.com.au

MODEL: AP180320 PRODUCT CODE: 10714 08/2019



General Safety Instructions

Before using the appliance for the first time, you must read and understand the operation manual completely

General Safety Warnings

 
1. Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.
2. Keep away from water
3. WARNING: Keep the Hair Clipper and Adaptor dry
4. Do not place or store the appliance where it can fall or be pulled into a sink or bath.
5. Do not reach for an appliance that has fallen into water. Unplug it immediately.
6. Do not use while bathing or in the shower.
7. Do not place or drop into water or other liquid
8. Do not use in dusty conditions
9. Do not drop the Hair Clipper. Dropping or rough use of the unit may cause damage
10. Do not place near strong magnets or strong electric currents
11. If the Hair Clipper is not in use, turn off and unplug from any power source
12. Do not attempt to repair, open or alter any components of the Hair Clipper. In the case of improper usage or if you have opened, altered and repaired the product yourself, all guarantees are void
13. If the supply cord is damaged, do not use the product. Contact customer service for repair or replacement.
14. The supplier does not accept responsibility for additional or consequential damage other than covered by legal product responsibility
15. The supplier is not responsible for the end use of this product including any improper use or when used for purposes that are not specified
16. The Adaptor contains a transformer. Do not cut off the Adaptor to replace it with another plug, as this causes a hazardous situation.
17. Only use the Adaptor supplied to charge the appliance.
18. If the Adaptor is damaged, always have it replaced with one of the original type in order to avoid a hazard.
19. If the appliance is subjected to a major change in temperature, pressure or humidity, let the appliance acclimatise for 30 minutes before you use it.
20. Always check the appliance before you use it. Do not use the appliance if the blades, hair clipping comb or hair thinning comb is damaged or broken, as this may cause injury.



21. This appliance is not intended for use by children or persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge. For safety, keep the device away from these persons.
22. Children should be supervised to ensure that they do not play with the appliance and accessories.
23. Use, charge and store the appliance at a temperature between 15°C and 35°C.
24. Unplug the appliance before cleaning.
25. Keep the Hair Clipper and power cable away from heat sources and hot surfaces.
26. Always protect the power cable from undue flexing and wearing – do not allow the cable to hang off edge of the counter or table.
27. Do not wrap the cord around the Hair Clipper
28. Do not leave the appliance unattended when it is plugged in
29. Store the Hair Clipper in a moisture-free area.
30. Always make sure blades are aligned properly
31. To disconnect, turn all controls to OFF, then remove the cord from the electrical outlet
32. Do not use an extension cord or a voltage converter with the Hair Clipper
33. Do not use this appliance with an external timer or separate remote-control system of any kind.
34. Do not operate with aerosol spray products or where oxygen is being administered.
35. Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
36. The product must only be supplied at safety extra low voltage corresponding to the marking on the appliance.

The product has been tested to AS/NZS 60335.1 and AS/NZS 660335.2.8

AFTER SALES SUPPORT




customercare@winplus.com.au

MODEL: AP180320 PRODUCT CODE: 10714 08/2019

1

YEAR WARRANTY

 AFTER SALES SUPPORT



customercare@winplus.com.au

MODEL: AP180320 PRODUCT CODE: 10714 08/2019

1

YEAR WARRANTY

Product Overview

Features

- 8 cutting guide combs: (3-6-10-13-16-19-22-25mm)
- 3-4 hour cordless operation per charge
- Adjustable blade length
- 22 piece barber kit
- Stainless steel blades

Technical Specifications

Model Specification:	AP180320
Warranty:	1 Year
Battery:	2000mAh
Indicators:	LED charging indicator
Power system:	Cordless (rechargeable)
Power Supply Unit:	Input: 100-240V ~, 50/60Hz, 0.2A max ; Output:5VDC, 1000mA
Power Supply Unit Model:	KH6-050100AU

The following symbol indicates that a specific detachable power supply unit is required for connecting the electrical appliance to the supply mains. The type reference of power supply unit is marked near the symbol.



Product Overview

Assembly & Parts List



- | | | |
|---------------------------------|-------------------------------|----------------------------|
| 1. Hair Clippers | 7. 8 X cutting guide combs | 14. Mirror |
| 2. Taper lever | 8. Cleaning brush | 15. Storage pouch |
| 3. ON/OFF switch | 9. Scissors | 16. Barber's cape* |
| 4. Styling comb | 10. Power adaptor | 17. Getting started guide* |
| 5. Blade guard | 11. 2 x sectioning hair clips | 18. Warranty card* |
| 6. Right & left ear guide combs | 12. Neck brush | 19. Instruction manual* |
| | 13. Oil | |

* Not pictured

AFTER SALES SUPPORT



customercare@winplus.com.au

MODEL: AP180320 PRODUCT CODE: 10714 08/2019

1

YEAR WARRANTY

AFTER SALES SUPPORT



customercare@winplus.com.au

MODEL: AP180320 PRODUCT CODE: 10714 08/2019

1

YEAR WARRANTY

Getting Started

Before Cutting Hair

Remove any packaging material and labels before using your Hair Clippers for the first time. Fully unwind the cord of the power adaptor and inspect it and the adaptor for damage. Do not use the appliance if any part has been damaged. In case of damage, contact our after-sales support line for advice on a replacement or return.

Charging the Battery

 
- Before using your Hair Clipper for the first time, charge it fully for 4 hours
- Plug the adaptor into your Hair Clipper and then plug the charging adaptor unit into a power outlet. Please ensure that the Hair Clippers ON/OFF switch is OFF. The charging indicator light will glow red to indicate that it is charging and turns to green once fully charged

Optimising the Lifetime of the Rechargeable Batteries

Discharge the rechargeable batteries completely twice a year by letting the motor run until it stops. Then fully recharge the batteries.

Changing the Combs

- Switch the clipper off before change the combs
- To attach the combs, hold the comb with the teeth facing up and snap it firmly to the bottom of the clipper blade (Fig 1)

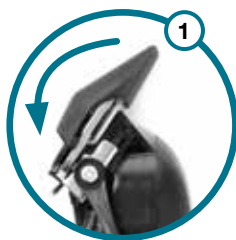

WARNING! INJURIES & MATERIAL DAMAGE DUE TO INCORRECT HANDLING. DO NOT USE THE APPLIANCE IF THE TEETH ARE DAMAGED OR MISSING FROM THE BLADE OR IF THE BLADES ARE MISALIGNED AS INJURY MAY OCCUR

Lubricating the Blades

 
It is highly recommended before each use to lubricate the blades with the oil provided. This ensures optimum cutting performance.

1. Plug the adaptor into a mains outlet and ensure the power outlet is switched ON
2. Use the oil supplied to lubricate the Hair Clipper. Unscrew the cap and cut off the tip of the oil tube with a pair of scissors
3. Switch on the Hair Clipper, then gently squeeze the oil tube, applying 2 drops onto the blades (Fig 2). Leave the Hair Clipper switched ON for a further few seconds to allow the oil spread thoroughly along the length of the blades. Then, switch OFF the unit and remove any excess oil using a cloth

NOTE: To lubricate the blades, ensure the unit is switched ON.



AFTER SALES SUPPORT



customercare@winplus.com.au

MODEL: AP180320 PRODUCT CODE: 10714 08/2019

Getting Started

Cutting Guide

Always inspect the appliance before use to ensure the clipper blades are free from hair, debris etc. For best performance, use on clean, dry hair that has been combed and tangle-free

1. Select the desired attachment guide comb (numbered from 3 as the shortest to 25 as the longest length) and place the groove of the cutting guide onto the blades' tip at the top of the Hair Clipper (Fig 3). Firmly press the rear of the Attachment Comb onto the end of the blade until it 'clicks' and locks into position (Fig 4)

NOTE: You can adjust the height of the blade by pushing down the Taper Lever

2. Place the cape around the neck of the person whose hair is being trimmed or cut

TIP: This person should be seated so that the top of their head is at your eye level

3. Comb the hair as it is normally styled, be sure to comb out all knots and tangles
4. Hold the Hair Clipper in the palm of one hand and with your thumb resting firmly on the top of the Hair Clipper. This grip provides comfortable cutting control

NOTE: Although the Hair Clipper may be used left or right handed, using it right handed allows you to access the taper lever more easily

TIP: Ensure the hair is dry. Hair Clippers perform best with dry hair, making it easier to see how much hair is being cut

5. To remove Attachment Comb, ensure the Hair Clipper is switched off. Pull the release tab on the rear of the Attachment Comb away from the blade and lift off

 
 
Taper Control

- The Taper Lever enables fine cut adjustment for precision clipping
- To increase the cutting length, push the lever down
- To reduce the cutting length, push the lever up


Tips for Cutting Hair:

Step 1 – Nape of the neck

- Allow the clipper to cut through the hair without forcing it at a faster rate
- Use short strokes when cutting and initially use a long attachment comb. You can always use a shorter attachment comb later if you want a closer cut.
- Use 3mm or 6mm guide comb
- Hold the Hair Clipper with the blade teeth pointing upwards. Begin starting at the centre of the head at the base of the neck
- Slowly lift the Hair Clipper, work your way up and outwards through the hair, trimming just a little at a time

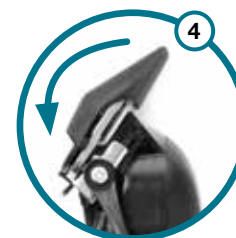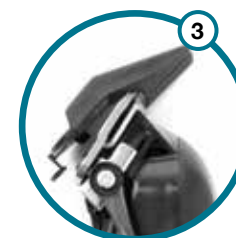

AFTER SALES SUPPORT

 

customercare@winplus.com.au

MODEL: AP180320 PRODUCT CODE: 10714 08/2019



Getting Started

Step 2 – Back & Side of the Head

- With the 10mm or 13mm guide comb, cut the hair at the back of the head

Step 3 – Side of the Head

- With the 10mm or 13mm guide comb, trim sideburns
- Then change to the longer 22mm guide comb and continue to cut the top of the head

Step 4 – Top of the Head

- Using the 25mm guide comb, cut the hair on the top of the head against the direction in which the hair normally grows
- For longer hair, use the scissors provided. Lift the hair on the top of the head with your fingers & cut to the desired length
- Always work from the back of the head

Step 5 – To Finish

- Use the Hair Clippers without any attachment comb for close trimming around the base and sides of the neck
- To produce a clean straight line at the sideburns, reverse the clipper. Place the Hair Clippers at right angles to the head, tips of the blade lightly touching the skin and work downwards
- Hold the Hair Clipper to the front of your hair with the blades pointing towards the back of your head and move the Hair Clipper towards your crown. Repeat as necessary, moving in rows from the front and the sides of your head to the back
- You should achieve an even length cut all over your head

Outlining

- To tidy up the edges around your cut e.g. neckline and sideburns, detach the attachment comb
- Hold the appliance upside down, so the front of the Hair Clipper is facing towards your head
- Hold the Hair Clipper straight on your sideburns or neckline and move the Hair Clipper downwards. This will give you a clean, smooth finish

Storage

- When not in use, unplug the appliance and store out of reach of children in a safe, dry location. Never wrap the cord around the appliance as this will cause the cord to wear prematurely and break. Handle the cord carefully, and avoid jerking, twisting or straining especially at plug connections

Disposal

At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

 
Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.

If you require another copy of this instruction manual, please contact customercare@winplus.com.au to obtain an electronic copy.

Cleaning & Maintenance

Before cleaning the Hair Clippers ensure it is turned off and unplugged from the power outlet.


CAUTION: KEEP THE APPLIANCE AND THE ADAPTOR DRY. ONLY CLEAN THE APPLIANCE AND THE ADAPTOR WITH THE CLEANING BRUSH SUPPLIED. NEVER USE COMPRESSED AIR, SCOURING PADS, ABRASIVE CLEANING AGENTS OR AGGRESSIVE LIQUIDS SUCH AS ALCOHOL, PETROL OR ACETONE TO CLEAN THE APPLIANCE. DO NOT USE ANY SHARP OBJECTS TO CLEAN THE APPLIANCE.

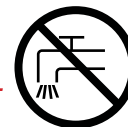

To maintain optimum performance, the appliance should be cleaned after each use:

- Remove the attachment comb - the attachment combs can be rinsed under water. Please ensure comb's surface are dried thoroughly before storage or further use.
- Using the cleaning brush, brush and blow away any remaining hair from the blades and from the neck
- Do not disassemble the blades or the Hair Clipper
- Clean the appliance after every use

 AFTER SALES SUPPORT




customercare@winplus.com.au

MODEL: AP180320 PRODUCT CODE: 10714 08/2019

1

YEAR WARRANTY

 AFTER SALES SUPPORT



customercare@winplus.com.au

MODEL: AP180320 PRODUCT CODE: 10714 08/2019

1

YEAR WARRANTY



ViSAGE®

CORDLESS HAIR CLIPPERS

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:



Winplus Australasia

PO Box 537 Bayswater Business Centre, Victoria, Australia

1300 663 907 - Hours: Mon-Fri 8:30am - 6:00pm AEST

customercare@winplus.com.au

AFTER SALES SUPPORT

  1300 663 907

 customercare@winplus.com.au

MODEL: AP180320 PRODUCT CODE: 10714 08/2019



ViSAGE[®]