

BAUHN®

CORDLESS HEADPHONES



Model Number: HE215029

INSTRUCTION MANUAL



Important

Getting the most out of your Cordless Headphones:



Read the manual carefully

It will help you set up with ease



Visit www.winplus.com.au

We have additional support guides



Call After Sales Support - 1300 663 907

Available Monday - Friday, 8:30am - 6:00pm AEST



Email customercare@winplus.com.au

We're always happy to help

Warranty Note

If you experience any issues with this product or its performance is not what you had expected, please contact us at Winplus.

It is likely that we can resolve any problems for you via phone or email.

We can be reached on:

Phone: 1300 663 907 (Mon - Fri; 8:30am - 6:00pm AEST)

Email: customercare@winplus.com.au

Web: www.winplus.com.au



BAUHN[®]
EFFORTLESS TECHNOLOGY

CORDLESS HEADPHONES



Warranty Details

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/ TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

  1300 663 907

 customercare@winplus.com.au

MODEL: HE215029 PRODUCT CODE: 49431 12/2018



Safety Instructions

Read this manual thoroughly before first use and keep it in a safe place for future reference, along with the warranty card, purchase receipt and carton. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Follow all instructions and take notice of all warnings to reduce the risk of fire or electric shock.

- Do not expose this product to water, rain, moisture or dust. Electronic products of this kind should never be subjected to moisture or extreme temperatures
- Do not attempt to open the product housing. There are no user-serviceable parts inside this product
- Do not repair the unit yourself. If your device is not functioning correctly, disconnect the product from power, and contact after sales support
- Supervise young children to ensure they do not play with the product
- Do not expose to chemicals, oils, or other liquids
- Do not expose to naked flames or other heat sources
- Do not drop or subject the device to undue shock
- Keep device away from magnets at all times
- Keep away from direct sunlight. Indoor use only
- Unplug this device during lightning storms or when unused for long periods of time
- The socket outlet shall be installed near the equipment and shall be easily accessible.

This product complies with AS/NZS 60065, AS/NZS CISPR 13:2012 and AS/NZS 4268:2012/A1:2013

After Sales Support



1300 663 907



customercare@winplus.com.au

Model Number HE215029

Contents

Warranty Details	4
Safety Instructions	5
Parts List	7
Technical Specifications	7
Product Features	7
Product Overview	8
Instructions	9
Power On/Off	9
Charging	9
Inserting Batteries	9
Connecting to your Audio Device	10
Wireless	10
Wired Connection	10
RCA Connection	11
Pairing the Headphones to the Base Unit	12
Selecting a Different Wireless Channel	12
Disposal	13
Maintain and Storage	13
FAQs	14
Repair and Refurbished Goods or Parts Notice	15

After Sales Support

 1300 663 907

 customercare@winplus.com.au

Model Number HE215029

Parts List

- 1 x Base Unit
- 1 x Cordless Headphones
- 1 x 3.5mm Audio Cable
- 1 x RCA Cable
- 1 x Power Adaptor
- 1 x Instruction Manual (Not Shown)
- 1 x Getting Started Guide (Not Shown)
- 1 x Warranty Card (Not Shown)



Technical Specifications

Driver Unit: 50mm

Input Rating: 5V DC 300mA

Adapter Input: 100-240V~50/60Hz 0.15A

Adapter Output: DC5V \equiv 0.3A

Impedance: $32\Omega \pm 15\%$

Frequency Range: 20Hz-20KHz

3 channel base unit

Transmission range up to 50 metres (open line of sight) via UHF (Ultra High Frequency)*

915.5MHz, 916.0MHz and 916.5MHz transmission

Product Features

- Premium quality audio driver
- Built-in rechargeable Li-ion battery
- Recharging base unit with power / charging indicator
- Ideal for use with TV, stereo etc. with RCA outputs
- Use as wired or wireless headphones
- Modern and lightweight ergonomic design
- Premium foam padding for extra comfort
- 50m range (open line of sight)
- Product weight (headphones and base): 400g
- Product dimensions (headphones and base): 180mm x 115mm x 210mm

* **NOTE:** *Wireless transmission is not via Bluetooth or Wi-Fi*

After Sales Support

 1300 663 907

 customercare@winplus.com.au


Model Number HE215029


Product Overview



- | | | |
|-----------------------|--------------------------|----------------------|
| 1. Power Button | 5. Audio Input Indicator | 8. Power Input |
| 2. Scan Button | 6. Power Indicator | 9. Audio Input |
| 3. Volume Up Button | 7. Charging LED | 10. Channel Selector |
| 4. Volume Down Button | | |

After Sales Support

 1300 663 907

 customercare@winplus.com.au

Model Number HE215029

Instructions

Power On/Off

To use your Bauhn Cordless Headphones wirelessly, the base unit will require power. You can power the base unit using the included power adaptor or by inserting batteries (not included). Refer to the "Inserting Batteries" section below.

1. Insert the jack of the power adaptor to the rear of the base unit.
2. Plug in the power adaptor to a mains outlet and switch the outlet ON.
3. Move the switch on the base unit to channel 1, 2 or 3.
4. The power indicator on the front of the base unit will turn red when connected to power.

Charging

The Bauhn Cordless Headphones have a built-in rechargeable battery.

The base unit will recharge the headphones when they are docked.

1. Insert the plug of the power adaptor to the rear of the base unit.
2. Plug in the power adaptor to a mains outlet. Turn the power ON at the mains outlet.
3. The power LED on the front of the base unit will turn red when connected to power.
4. Place the headphones on the cradle. Ensure the contacts on the base unit and the headphones line up.
5. The charging LED on the front of the base unit will change to yellow while the headphones are on the base station. The light will turn off when the headphones are charged.

NOTE: Charge for 3 hours before first use. You can only recharge your headphones while connected to mains power. It is recommended that the headphones are left on the base unit when not in use. It is not possible to over charge the headphones.

Inserting Batteries

You can insert 3 x AAA batteries (not included) into the base unit of the Bauhn Cordless Headphones to use them on the go. You cannot charge headphones with batteries however.

1. Open the battery cover on the bottom of the base unit.
2. Insert 3 x AAA batteries (not included) into the battery compartment. Take note of the polarity markings of the batteries.
3. Replace the battery cover on the base unit.

TIP: When you replace the batteries as required, replace all the batteries at the same time. Do not mix old and new batteries.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type

Instructions

Connecting to your Audio Device

You can connect any audio device to the Bauhn Cordless Headphones and listen in comfort from anywhere in the home. You can also connect the Cordless Headphones to your TV to listen without disturbing others, by connecting your device to your base unit using the 3.5mm cable or the RCA cable included in the pack.

Wireless

Your cordless headphones connect via Ultra High Frequency (UHF).

To connect your TV, phone, stereo or other audio device to your base unit using the included 3.5mm audio cable. The base unit will transmit the audio wirelessly to your headphones.

1. On your TV, phone, stereo or other audio device, locate the appropriate output plug. Generally this will have a picture of headphones or say "AUX-OUT", connect the included audio cable to this plug.
2. Connect the included audio cable to the rear of the base unit by plugging the cable into the jack marked audio in.
3. The audio LED on the front of the base unit will turn green when it detects audio input.



Example of appropriate port

TIP: If the green light on the base does not switch on, try increasing the volume on your TV, stereo or phone. The base requires a strong input signal to function.

NOTE:

- If your TV or stereo does not have an appropriate 3.5mm jack, please see the RCA connection section on page 11.
- Using the 3.5mm jack may mute your TV. If you wish to have audio through your TV, please use RCA connection or refer to your TV manual.
- Your cordless headphones do not connect via Bluetooth or Wi-Fi.

Wired Connection

The included 3.5mm audio cable is perfect for connecting your phone or other portable music player using a 3.5mm plug/jack directly to your headphones.

1. Connect the included 3.5mm audio cable to the jack marked AUX-IN on the left ear cup and the other end to your audio device.
2. Control audio play back on your device.

NOTE: Connecting the audio cable to the AUX-IN jack will override any wireless or radio transmission.

After Sales Support

Instructions

RCA Connection

The RCA cable is perfect for connecting to devices with a stereo RCA output such as a home audio system or your TV.

1. Connect the 3.5mm end of the RCA cable to the rear of the base unit marked audio in.
2. Connect the red/white RCA plugs into the device you wish to connect to. On your TV, the audio output plugs are generally found on the back or side and will be marked using red and white plugs.
3. Select the correct output on your device. The LED on the front of the base unit will turn green when it detects audio input.



Example of RCA port

TIP: Ensure the red and white ports on your TV are labelled 'audio out'. If they are labelled 'in' or 'input', they will not work.

TIPS FOR CONNECTING TO YOUR TV:

If the green LED is not lighting up when connecting to your TV, try the following:

- Refer to your TV manual for audio output settings. Some TVs will require you to switch on 'surround sound' settings or similar to activate the RCA output jacks. Call your TV manufacturer if you are unsure of these steps.
- Try turning up the volume on the TV to ensure a strong audio signal is being received by the base unit.
- If your audio source has neither the 3.5mm audio port or the left and right RCA 'audio out' it may require an adaptor. For example, many newer TVs use optical audio output which require adaptors.

If you are still not getting sound through the headphones via the TV, try the following;

- Using the provided 3.5mm audio cable, connect a phone or other portable device into the base unit.
- If the audio light turns green, then it has detected an audio input.
- If there is no green light, please contact After Sales Support.
- To check the audio source output, simply plug the headphones directly into the audio source using the 3.5mm audio cable provided.

After Sales Support

 1300 663 907

 customercare@winplus.com.au

Model Number HE215029

Instructions

Pairing the Headphones to the Base Unit

The Bauhn Cordless Headphones feature 3 different channels that allow you to operate 3 different Cordless Headphone units at the same time without interference.

1. When the base unit is powered by either batteries or directly connected to mains power, switch on the headphones by pressing the power symbol on the ear cup.
2. Connect the base unit to your audio device using the included cables.

NOTE: *The LED on the front of the base unit will turn green when it detects audio input.*

3. Select the channel you wish to use for your Cordless Headphones. The switch used to toggle between channels 1, 2 or 3 is found on the rear of the base unit.
4. Press the 'S' button on the side of the right ear cup to scan for the channel you selected. You may need to press scan a few times to tune to the correct channel.

Selecting a Different Wireless Channel

If you find the audio has interference on your Bauhn Cordless Headphones, you can switch to another wireless channel for clearer sound.

1. Slide the channel selector on the back of the base unit to either of the spare channels.
2. Press the scan button on the right ear cup. You may need to press this multiple times until the audio is clear.

After Sales Support



1300 663 907



customercare@winplus.com.au

Model Number HE215029

Disposal

At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Observe and local regulations regarding the disposal of waste products. Contact your local authorities for advice on recycling facilities in your area.

Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.

If you require another copy of this instruction manual, please contact customer care@winplus.com.au to obtain an electronic copy.

Maintain and Storage

The headphones do not require scheduled cleaning. Should cleaning be necessary, simply wipe the outside surface with a dry soft cloth. Be sure the earcup ports are kept clear, and that no moisture is allowed to get inside the earcup.

Always store your headphones in a protective case, store in a clean dry environment and avoid storage in extreme heat or cold.

After Sales Support



1300 663 907




customer care@winplus.com.au

Model Number HE215029

FAQs

Question	Solution
No audio is coming through the wireless connection	<ul style="list-style-type: none"> • Ensure that the 3.5mm audio cable is plugged in correctly and the volume is turned up. • Double check that the audio cable is plugged into an output on your device, not an input. • Try using a different audio device to narrow down what could be causing the issue.
No power on charging dock	<ul style="list-style-type: none"> • Ensure the power adaptor is plugged into the base unit and switched ON at the wall outlet. • If you have inserted batteries, try replacing the batteries in case they are flat. • If you have inserted batteries, check the polarity.
No power on headphones	<ul style="list-style-type: none"> • Try charging the headphones for 1hr to ensure sufficient charge for the built-in battery.
Excessive interference or noise	<ul style="list-style-type: none"> • Try switching wireless channels by selecting 1, 2 or 3 on the base station. • Press 'S' to select the new channel. • Move the base unit away from any cordless phones or wireless devices. • Remove any obstacles between the headphones and base unit.
Volume buttons do not work when the headphones are connected directly to my audio device.	<ul style="list-style-type: none"> • When the headphones are connected directly to your audio device, they act as passive wired headphones only. Change the volume levels on your audio device to adjust the volume.
How long do I need to recharge the headphones?	<ul style="list-style-type: none"> • On the first charge, it is recommended you charge for a full 3 hours. On subsequent charges, charge at least a few hours to achieve full charge. Over-charging your headphones is not possible when using them with the supplied charging cradle.
How far away from the base unit will the headphones work?	<ul style="list-style-type: none"> • With no obstructions and no devices nearby, the headphones will work up to 50m away. • Walls, doors and other electrical devices will limit the operating distance. Try positioning the charging dock in different locations for best results.
The green LED does not light up when I have my MP3 player or phone connected.	<ul style="list-style-type: none"> • Ensure the volume on your device is set to maximum.
I have connected my Cordless Headphones to the headphone output, but now the TV speakers are not functioning.	<ul style="list-style-type: none"> • Connecting to the headphone jack of most TVs will automatically disable the TV's speakers. To continue to enjoy the TV speakers, we recommend you use the included RCA cable. Refer to page 11 for further details. • Refer to your TV manual for further details.
RCA connection isn't working.	<ul style="list-style-type: none"> • Check that you have connected to an RCA Output. • Some TV's also require you to select the audio output. Consult your TV manual to select the desired audio output.
Why has the charging light turned off?	<ul style="list-style-type: none"> • This light indicates when the headphones are charging. If the light has turned off, the headphones are fully charged.

After Sales Support

 1300 663 907

 customercare@winplus.com.au

Model Number HE215029



BAUHN[®]
EFFORTLESS TECHNOLOGY

CORDLESS HEADPHONES

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:



Winplus Australasia

PO Box 537 Bayswater Business Centre, Victoria, Australia

1300 663 907 - Hours: Mon-Fri 8:30am - 6:00pm AEST

customercare@winplus.com.au

AFTER SALES SUPPORT

  1300 663 907

 customercare@winplus.com.au

MODEL: HE215029 PRODUCT CODE: 49431 12/2018



BAUHN®