

NOISE CANCELLING HEADPHONES WITH BLUETOOTH



SETUP GUIDE

HE190067  
03/20

**SAFETY WARNINGS**

- Headphones can deliver sounds at loud volumes and high-pitched tones. Exposure to such sounds can result in permanent hearing loss or damage. The volume level may vary based on conditions such as the phone you are using, its reception and volume settings and the environment. Please read the safety guidelines below prior to using these headphones.
- Prior to using this product follow these steps:
  - Before putting on the headphones, turn the volume control to its lowest level
  - Put the headphones on
  - Slowly adjust the volume control to a comfortable level
- During the use of this product:
  - Keep the volume at the lowest level possible and avoid using the headphones in noisy environments where you may be inclined to turn up the volume
  - If increased volume is necessary, adjust the volume control slowly
  - If you experience discomfort or ringing in your ears, immediately discontinue using the headphones and consult a physician
- With continued use at high volume, your ears may become accustomed to the sound level, which may result in permanent damage to your hearing without any noticeable discomfort.

**CAUTION**

- Using the headphones while operating a motor vehicle, motorcycle, watercraft or bicycle may be dangerous, and is illegal in some jurisdictions. Check your local laws. Use caution while using your headphones when you are engaging in any activity that requires your full attention. While engaging in any such activity, removing the headphones from your ear area or turning off your headphones will keep you from being distracted, to avoid accident or injury.
- If you have a pacemaker or other electrical medical devices, you should consult your physician before using the product
- This package contains small parts that may be hazardous to children. Always store the product out of reach of children. The bags themselves or the many small parts they contain may cause choking if ingested
- Never try to dismantle the product yourself, or push objects of any kind into the product, as this may cause short circuits which could result in a fire or electric shock
- None of the components can be replaced or repaired by users. Only authorized dealers or service centres may open the product. If any parts of your product require replacement for any reason, including normal wear and tear or breakage, contact your dealer
- Avoid exposing your product to rain, moisture, or other liquids
- If the product overheats, has been dropped or damaged or has been dropped in a liquid, discontinue use
- Dispose of the product according to local standards and regulations
- When you disconnect the power cord or any enhancement, grasp and pull the plug, not the cord. Never use a charger that is damaged
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like
- Attention should be drawn to the environmental aspects of battery disposal
- The use of apparatus in moderate climates



BAUHN®

NOISE CANCELLING HEADPHONES WITH BLUETOOTH

Warranty Details

REGISTER YOUR PURCHASE AT [www.aldi.com.au/en/about-aldi/product-registration/](http://www.aldi.com.au/en/about-aldi/product-registration/) TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

**AFTER SALES SUPPORT**

1300 663 907

customercare@balcobrands.com

 
MODEL: HE190067 PRODUCT CODE: 701255 03/2020



IN THE BOX


- Premium Noise Cancelling Headphones with Bluetooth
- USB-C Charging Cable
- 3.5mm AUX cable
- Airline Adaptor
- Carry Case
- Getting Started Guide\*
- Warranty Card\*

\*Not pictured

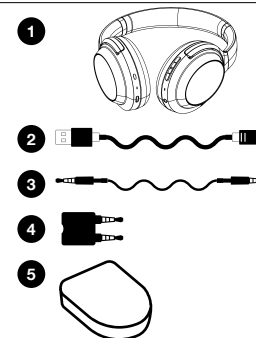

FUNCTIONS

- |                                      |                            |
|--------------------------------------|----------------------------|
| 1. ANC button                        | 7. Bluetooth LED indicator |
| 2. ANC/charging indicator            | 8. AUX-in port             |
| 3. USB-C charging port               | 9. Microphone              |
| 4. Volume up/Next                    |                            |
| 5. On/Off/MFB (Multifunction button) |                            |
| 6. Volume down/Previous              |                            |

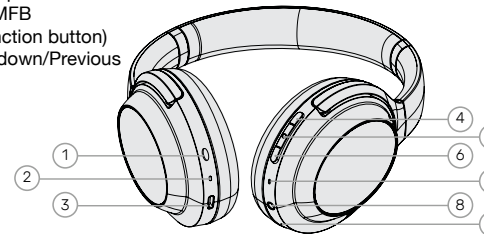 

CHARGING THE BATTERY

Before first use, it is recommended you charge your headphones for a minimum of 1 hour

- Connect the USB-C end of the charging cable to the USB-C input on the headphones and the standard USB end to a USB power supply (not included)
- The LED indicator will display a solid red colour whilst charging
- The indicator will turn green when fully charged\*

\*A full charge will take approximately 3 hours

BATTERY CARE

- Make sure that your headphones are switched off after use
- Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime
- Before storing the headphones for long periods of time, be sure to fully charge the battery
- When the battery is low and the indicator light is flashing red you must charge the headphones
- If the battery is completely discharged, the headphones cannot be turned on immediately once the charger is connected. Allow a depleted battery to charge for a few minutes before turning on the headphones
- Always try to keep the battery between 15°C and 30°C. A product with a hot or cold battery may not work temporarily, even when the battery is fully charged


## TURNING THE HEADPHONES ON/OFF

 1. Press and hold the MFB button on the right earcup to turn the headphones ON/OFF
2. When the headphones are turned on, you will hear a prompt “Power on”

## PAIRING

1. To pair the headphones with a Bluetooth device for the first time, press and hold the MFB button until you hear a prompt “Power on” and the LED indicator is flashing blue. Keep holding the MFB button until you hear a tone prompt “Pairing” and the LED indicator is flashing red and blue
2. Enable Bluetooth on your device, search for and select “HE190067” from the list to connect
3. When the headphones are successfully paired with your device, you will hear a prompt “your headset is connected” and the LED indicator will flash blue every 12 seconds (approximately)
4. The next time the headphones are switched on, they will automatically search for and attempt to connect with the last paired device

*\*When re-pairing or pairing new devices, make sure Bluetooth is turned off on any previously paired devices*

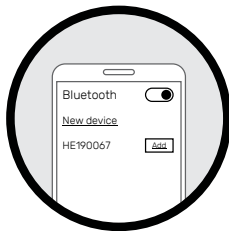

## PLAYING MUSIC

Once you have successfully paired to a device, you can play, pause, track forward, track backward and change the volume using the headphone controls/device controls

Refer to **Functions** section for headphone controls

 
## TURNING ON/OFF NOISE CANCELLATION

1. Use the ANC button on the left earcup to activate or deactivate the noise cancellation function
2. When the ANC is activated, the LED indicator remains blue

*\*ANC function will not work if the battery has been drained*

## VOICE ASSISTANT

You can activate your voice assistant ON/OFF while using the headphones by double tapping the MFB button quickly

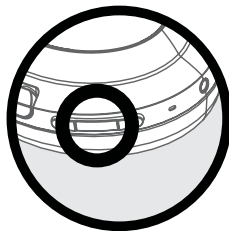

## USING THE AUDIO CABLE

The included audio cable can be used to connect to a non-wireless device or for listening to music when the headphone batteries have been drained

1. Connect the included 3.5mm audio cable to the aux-in jack located on the right earcup
2. Connect the other end of the audio cable to the audio jack

*NOTE: When connected via audio cable, the Bluetooth function and controls are disabled. You cannot control playback using the headphone controls when connected via aux-in. The headphones will not be discoverable on Bluetooth*

## HANDLING A CALL

- To answer or end a call, tap the MFB button
- To reject a call, press and hold the MFB button

## TECH SPECS

|                     |                        |
|---------------------|------------------------|
| Driver Unit:        | 40mm                   |
| Impedance:          | 32Ω                    |
| Frequency Range:    | 20Hz-20kHz             |
| Bluetooth Version:  | 5.0                    |
| Rated Power:        | 10mW                   |
| Transmission Range: | Up to 10 metres        |
| Playback time:      | Up to 15 hours         |
| Battery:            | 550mAh Lithium Battery |
| Power Input:        | DC 5V, 500mA           |

## AFTER SALES SUPPORT

If you experience any issues with this product or its performance is not what you had expected, please contact us at Balco Brands

It is likely that we can resolve any problems for you via phone or email

We can be reached on:

Phone: 1300 663 907 (Mon - Fri; 8:30am - 6:00pm AEST)  
Email: [customercare@balcobrands.com](mailto:customercare@balcobrands.com)  
Web: [www.balcobrands.com/au/](http://www.balcobrands.com/au/)



**BAUHN®**

**NOISE CANCELLING HEADPHONES WITH BLUETOOTH**

## Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

**We recommend you save this data elsewhere prior to sending the product for repair.**

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

**Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.**

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:

Balco Brands Pty Ltd

PO Box 537 Bayswater Business Centre, Victoria, Australia

1300 663 907 - Hours: Mon-Fri 8:30am - 6:00pm AEST

[customercare@balcobrands.com](mailto:customercare@balcobrands.com)

**AFTER SALES SUPPORT**

1300 663 907

[customercare@balcobrands.com](mailto:customercare@balcobrands.com)

MODEL: HE190067 PRODUCT CODE: 701255 03/2020

**1**

YEAR WARRANTY