 
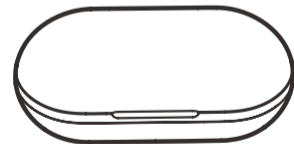 


BAUHN®

TRUE WIRELESS EARBUDS

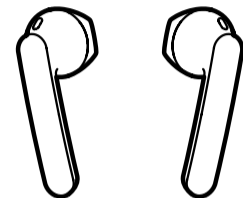

SETUP GUIDE

HE200224
02/21

 
 
SAFETY WARNINGS

- Only use attachments/accessories specified by the manufacturer
- To avoid accidental ingestion, keep the earbuds away from children and pets
- The earbuds contain a lithium-ion battery, and may be hazardous if swallowed
- If ingested, seek immediate medical attention
- When not in use, store the earbuds in the charging case with the lid closed, and keep out of reach of children and pets
- Do NOT use the earbuds at a high volume for any extended period
- To avoid hearing damage, use your earbuds at a comfortable, moderate volume level
- Turn the volume down on your device before placing the earbuds in/on your ears, then turn the volume up gradually until you reach a comfortable listening level
- Use caution and follow applicable laws regarding mobile phone and headphone use if using the earbuds for phone calls while driving
- Some jurisdictions impose specific limitations, such as single earpiece configuration, on the use of such products while driving
- DON'T use the earbuds for any other purpose while driving
- Focus on your safety and that of others if you use the earbuds while engaging in any activity requiring your attention, e.g., while riding a bicycle or walking in or near traffic, a construction site or railroad and follow applicable laws regarding headphone use, etc.
- Remove the earbuds or adjust your volume to ensure you can hear surrounding sounds, including alarms and warning signals
- Do NOT allow children to use the earbuds
- Do NOT submerge or expose the earbuds for extended period to water, or wear while participating in water sports, e.g., swimming, water-skiing, surfing, etc
- To reduce the risk of injury, close supervision is necessary when the charging case is used near children
- Do not expose charging case to water, rain, liquids or snow
- Do not use the charging case in excess of its output rating
- Do not use a charging case that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury to persons
- Do not disassemble the charging case. Incorrect reassembly may result in risk of fire or injury to persons
- Do not open, crush, or expose a charging case to fire, or excessive temperature. Exposure to fire or temperature above 45°C may cause explosion
- Have servicing performed by a qualified repair person using only identical replacement parts
- Do NOT make unauthorized alterations to this product
- Use this product only with an agency approved power supply which meets local regulatory requirements (e.g., RCM)
- Wipe off sweat from the earbuds and the charging case before charging
- This product contains magnetic material. Consult your physician on whether this might affect your implantable medical device
- CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like
- No naked flame sources such as lighted candles should be placed on the apparatus
- Excessive sound pressure from earphones and headphone can cause hearing loss
- Attention should be drawn to the environmental aspects of battery disposal
- Use only with charger base provided with the earbuds
- Use of apparatus in moderate climates

IN THE BOX





1. 1 x True Wireless Earbuds
2. 1 x Earbud Charging Case
3. 1 x USB C Charging Cable
4. 1 x Setup Guide*
5. 1 x Warranty Certificate *

*Not pictured

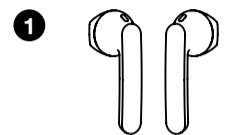

FUNCTIONS

    - Earbuds charging point
- Microphone
- LED indicator light
- Smart control area
- Multi function button
- Charging case charging port

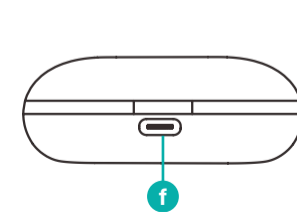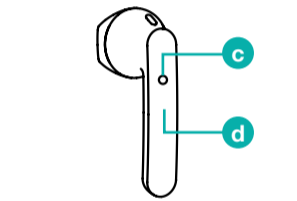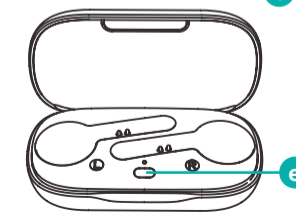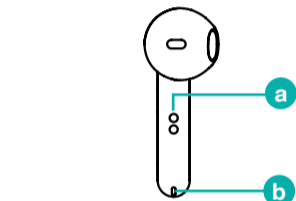

CHARGING

Charging case

1. Connect the USB C end of the supplied USB C charging cable into the charging case charging port
2. Connect the USB end of the charging cable into PC or AC/DC wall adaptor (not provided)

When the earbuds are out of the charging case, the LED light will display the battery status of the charging case when the lid is open

 
- Battery is over 50%, LED light will be green for 10 seconds
- Battery is between 10% - 50%, LED light will be orange for 10 seconds
- Battery is under 10%, LED light will flicker orange

Earbuds

The earbuds will start charging when put back into the charging case. You can check whether or not the earbuds are fully charged or not by opening up the charging case while the earbuds are placed inside. The LED light beside the multi function button will be green if fully charged & orange if the battery is not full

Note: The LED light will turn off after 10 seconds

Certain mobile devices will also display an on-screen headset battery indicator while the headphones are connected



TURNING ON/OFF

Turning on

Open the charging case, the earbuds will power on automatically. Take both earbuds out from the charging case, they will turn on and connect with each other automatically

Turning off

Put the earbuds back into the charging case and close completely, they will turn off automatically

PAIRING

Method 1

1. Take both earbuds out from the charging case, they will power on and connect with each other automatically
2. Enable Bluetooth on your device and select "HE200224" from the list to connect
3. Your device will show if it is connected successfully

Method 2

1. When the earbuds are in the charging case, long press the multi function button of the charging case for 3 seconds until the indicator light flashes white slowly
2. Enable Bluetooth on your device and select "HE200224" from the list to connect
3. Your device will show if it is connected successfully

After the earbuds are connected via Bluetooth when you open the charging case the earbuds will connect to the last device it has been connected to. Only one device can be linked at any time, you must forget the earbuds from the first device to connect to a new device. If the connected Bluetooth device is not in range, the earbuds will go into searching mode which will last around 10 minutes. Sound quality and connectivity may vary depending on the device being used


SMART CONTROL AREA

You can control a variety of different functions on your mobile device using the smart control area on your earbuds

Play/Pause Music	Double tap on the smart control area on either earbud
Next Track	Press and hold the smart control area on the right earbud for 2 seconds
Previous Track	Press and hold the smart control area on the left earbud for 2 seconds
Answer/End Call	Double tap the smart control area
Reject Incoming Call	Press and hold the smart control area for 2 seconds when a call is incoming
Activate Voice Assistant	Triple tap the smart control area on either earbud and exit with the same operation
Factory reset	Put the earbuds into the charging case and keep the case open. Press and hold the multi function button on the charging case for 10 seconds until the indicator light flashes green 5 times. All the pairing history will be cleared off

LED INDICATOR GUIDE

Indicator Light	Function
Orange light on	Earbuds charging
Orange light flickering slowly	Earbuds in Bluetooth searching mode
Orange light off	Earbuds successfully paired to device
Orange light flickering quickly	Earbuds in pairing mode

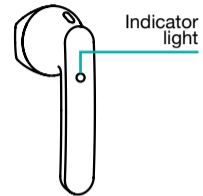 

TECH SPECS

Bluetooth version: V5.0
Music playtime: 3-4 hours
Earbud battery: 35mAh
Wireless distance: 10m
Charging case battery: 500mAh
Charge time: 2 hours
Charging voltage: 5V

AFTER SALES SUPPORT

Phone number: 1300 663 907
customer@balcobrands.com



BAUHN

TRUE WIRELESS EARBUDS

Warranty Details

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/ TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

1300 663 907

customer@balcobrands.com

MODEL: HE200224 PRODUCT CODE: 704769 02/2021



BAUHN

TRUE WIRELESS EARBUDS

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:

Balco Brands Pty Ltd
PO Box 537 Bayswater Business Centre, Victoria, Australia
1300 663 907 - Hours: Mon-Fri 8:30am - 6:00pm AEST
customer@balcobrands.com

AFTER SALES SUPPORT

1300 663 907

customer@balcobrands.com

MODEL: HE200224 PRODUCT CODE: 704769 02/2021

