 


BAUHN®

6000mAh Powerbank

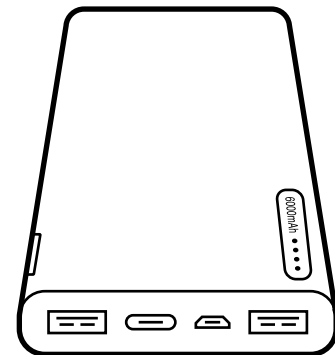

SETUP GUIDE

HE210167
04/21

SAFETY WARNINGS

- Do not use this Powerbank for anything other than its intended use or purpose. Doing so may damage it and void warranty.
- Handle with care. Avoid dropping this device, especially on a hard surface. Do not crush, bend, deform, puncture, shred or submerge this device in liquid.
- Do not squeeze or puncture the Powerbank to avoid electrolyte leakage of lithium-ion battery.
- Only use the Powerbank in moderate climates.
- Do not charge this Powerbank whilst in use.
- Do not use a damaged cable or power charger to charge the Powerbank.
- Never use the Powerbank if any part of it is damaged.
- Do not attempt to open or disassemble this device.
- Do not get the Powerbank wet or immerse it in water. If it has become wet, do not attempt to dry it with an appliance such as a hair dryer or in a microwave oven.
- Do not wash the Powerbank with corrosive cleaner.
- Do not use this Powerbank in areas where paint, petrol etc. is stored and there is a risk of explosion or fire from flammable gases.
- Children should be supervised to ensure they do not play with this appliance. Close supervision is necessary when any appliance is used by or near children.
- To avoid a fire hazard, keep the Powerbank away from open fires, stoves or any other sources of high heat.
- At the end of its working life, observe local regulations when disposing of this product.
- Attention should be drawn to the environmental aspects of battery disposal.
- The battery should be charged at least every three months to avoid shortening the battery life.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- When charging this device, do not power your phone at the same time.
- CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.

IN THE BOX

1. 1 x 6,000mAh Powerbank
2. 1 x Micro USB charging cable
3. 1 x Setup guide*
4. 1 x Warranty card*

*Not pictured

 
AFTER SALES SUPPORT

Phone number: 1300 663 907

customercare@balcobrands.com

FUNCTIONS

- a. Indicator light button
- b. USB-A Output 1
- c. USB-C input/output
- d. Micro USB input
- e. USB-A Output 2
- f. Power indicators

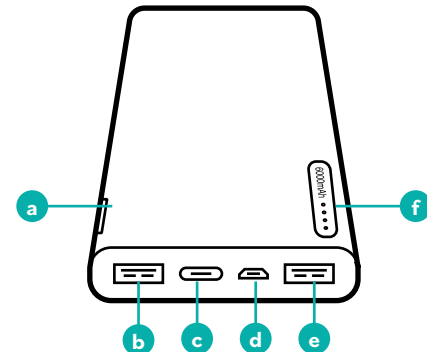

TURNING ON/OFF

The Powerbank will automatically start charging your device once the device has been connected. If the power indicator lights have been turned on, they will automatically turn off after approximately 5 seconds if the powerbank is not in use.

Note: Before first use, we recommend charging the Powerbank until 100% charged.

TECH SPECS

Battery capacity:	6000mAh at 3.7V, 22.2Wh
Micro USB input:	5V \equiv 2A
USB-C input:	5V \equiv 2A
USB-A Output 1:	5V \equiv 2A
USB-A Output 2:	5V \equiv 2A
USB-C Output:	5V \equiv 2A
Total Output:	5V \equiv 2A Max

CHARGING THE POWERBANK

 
1. Plug the small connector of the supplied micro USB charging cable into the charging input port on the Powerbank. Alternatively, you can use the USB-C port (USB-C cable not included).
2. Plug the large connector into the USB port on a computer or a 5V DC USB adapter (not included) and plug into a wall socket.
3. As the Powerbank charges, the LED power indicator on the front will blink, displaying the current charge level of the Powerbank.
4. Once all 4 indicator lights have lit up on the Powerbank, it is fully charged.

Note: Remember to turn off the power supply before removing the charging cable.



CHARGING A USB DEVICE

1. Plug the large connector of the supplied micro USB charging cable into either USB-A output port on the top of the Powerbank. Alternatively, you can use the USB-C port (USB-C cable not included).
2. Plug the small connector into the micro USB charging port on your device.

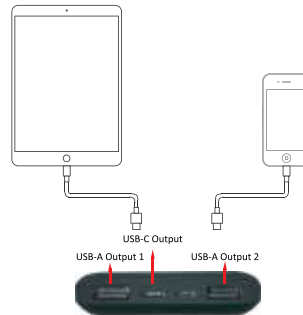

Note: Not all devices will use the same micro USB port for charging. Please check your device to see if this cable is suitable. If not, you will need to use the charging cable that came with your device (not supplied).

3. Press the indicator light button, the LED power indicator will light up, showing the charge level of the Powerbank.
4. As the Powerbank charges your device, the LED indicator will display the current battery charge level of the powerbank:

LED indicator display	Charge level
○ ○ ○ ○	0%
● ○ ○ ○	0-25%
● ● ○ ○	25-50%
● ● ● ○	50-75%
● ● ● ●	75-100%
● ● ● ●	100%

5. Once your device is charged remove the charging cable from the charging port on your device. The Powerbank will hold its charge until you use it again.



BAUHN®

6000MAH POWERBANK

Warranty Details

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/ TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

1300 663 907

customercare@balcobrands.com

MODEL: HE210167 PRODUCT CODE: 705282 04/2021



BAUHN®

6000MAH POWERBANK

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:

Balco Brands Pty Ltd
PO Box 537 Bayswater Business Centre, Victoria, Australia
1300 663 907 - Hours: Mon-Fri 8:30am - 6:00pm AEST
customercare@balcobrands.com

AFTER SALES SUPPORT

1300 663 907

customercare@balcobrands.com

MODEL: HE210167 PRODUCT CODE: 705282 04/2021

