

PRINCE[®]
3 IN 1
GROOMING SET

Model: AP200017
Version 1.1

User Guide





3 IN 1 GROOMING SET

Warranty Details

**REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/
TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION**

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

  1300 663 907

 customercare@balcobrands.com

MODEL: AP200017 PRODUCT CODE: 707138 08/2021



Warranty Note

3 in 1 Grooming Set

Getting the most out of your 3 in 1 Grooming Set:



Read the entire user guide

It will help you set up with ease



Visit www.balcobrands.com

We have additional support guides



Call After Sales Support - 1300 663 907

Or email customer@balcobrands.com - we're always happy to help

If you experience any issues with this product or its performance is not what you had expected, please contact our friendly customer service team

It is likely that we can resolve problems for you via phone or email

We can be reached on:

Phone: 1300 663 907

Email: customer@balcobrands.com

Web: www.balcobrands.com



Contents

3 in 1 Grooming Set

Warranty Details	2
Safety Instructions	6
Parts List	8
Technical Specifications	8
Product Overview	9
Getting Started	10
Inserting the battery	10
Switching trimmer on and off:	10
Using the nose/ear hair trimmer attachment	10
Using the beard/sideburn trimmer	10
Using the eyebrow trimmer attachment	10
Cleaning & Storage	12
Cleaning the nose/ear hair trimmer attachment	12
Cleaning the beard/sideburn attachment	12
Cleaning the eyebrow trimmer attachment	12
Storage	12
Disposal	13
Troubleshooting	13
Repair and Refurbished Goods or Parts Notice	14



Safety Instructions 3 in 1 Grooming Set

Before using the device for the first time, read through the operating manual carefully and ensure you comply with the safety instructions!

- The supplier is not responsible for the end use of this product including any improper use or when used for purposes that are not specified.
- The device should only be used as described in these instructions.
- Keep these instructions for reference.
- If you pass the device on to someone else, please include these instructions.
- The intended purpose of the device is to cut human nose and ear hair, and for trimming beards, sideburns and eyebrows.
- The device is designed for private home use and must not be used for commercial purposes.
- The device is not intended for to cut artificial or animal hair.
- The following warnings will be used in these operating instructions:



DANGER! High risk: Failure to observe this warning may result in injury to life and limb.



WARNING! Moderate risk: Failure to observe this warning may result in injury or serious material damage.



CAUTION: Low risk: Failure to observe this warning may result in minor injury or material damage.

- NOTE: Circumstances and specifics that must be observed when handling the device.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children must be supervised to ensure that they do not play with the device.
- Cleaning and user maintenance shall not be carried out by children
- Keep the device and accessories out of children's reach.



DANGER for children

- Children must not play with packaging material. Do not allow children to play with plastic bags. Danger of suffocation!



WARNING! Handling of batteries

- Improper use can result in injuries and damages to property!
- Batteries are dangerous and can cause death if swallowed. For this reason, store batteries out of the reach of small children. If a battery has been swallowed, a doctor must be consulted immediately.
- When inserting the battery to the device observe the correct polarity
- If the device will not be used for an extended period of time, remove the battery. The battery could leak and damage the device.
- Do not expose the batteries to extreme conditions, leaving them near heaters, or exposed to direct sunlight increases the danger of the



Safety Instructions **3 in 1 Grooming Set**

batteries leaking.

- Never short-circuit the supply terminals of batteries.
- Batteries must not be charged or reactivated in any other way. Do not disassemble, dispose of in a fire, or short circuit the battery.
- If a battery does leak avoid contact with skin, eyes and nose. In the event of contact with the acid, rinse the affected areas liberally with clean water and consult a doctor immediately.
- Please remove the exhausted batteries from the appliance and safely dispose.



• **WARNING!** Risk of injury

- Do not insert the nose/ear hair trimmer attachment too far into your nostril or ear.
- Do not use the device on injured skin (e.g. open wounds or swollen skin, rash, sunburn).
- Before using the device, ensure the attachments are in a proper condition.
- Do not use defective attachments.
- Do not operate the device if the device shows visible signs of damage or if the device has been dropped.
- Switch off the device before changing the attachments and each time before cleaning.
- Keep the device away from your eyes.
- Do not make any changes to the device or accessories.
- Repairs should only be carried out by a specialist or our Service Centre.



• **WARNING:** Keep the appliance dry.

• **CAUTION!** Material damage

- The device is not water proof, avoid excessive moisture and water splashes
- The device must not be immersed in water or any other fluids.
- Use the original accessories only.
- Do not use any harsh or abrasive cleaning agents.



Parts List

3 in 1 Grooming Set

- 1 x Men's Groomer
- 1 x Nose/ear trimmer with protective cap
- 1 x Beard/sideburn trimmer
- 1 x Eyebrow trimmer with comb attachment
- 1 x Cleaning brush
- 1 x Storage stand
- 1 x AA Activ Energy battery
- 1 x User guide
- 1 x Warranty card

Features

- 3 interchangeable heads
- Completely cordless operation
- Easy to clean stainless steel blades
- Up to 90 minute run time
- Storage stand



- | | |
|-------------------------------------|---|
| 1. Protective cap | 6. Beard/sideburn attachment |
| 2. Cutting head | 7. Eyebrow trimmer attachment |
| 3. Nose/ear hair trimmer attachment | 8. Slide switch for opening and closing the blade housing |
| 4. Integrated light | 9. Storage stand |
| 5. On / Off switch with travel lock | 10. Battery compartment cover |

Ensure that the appliance is in good condition.

Your nose / ear hair trimmer can only be operated with an alkaline battery type 1.5 V, type LR6.

Inserting the battery

To insert or replace the battery, hold the appliance with the cutting head (2) facing downwards. Then remove the battery compartment cover (9) - by turning the cover counter-clockwise. Ensure the protective film has been removed from the battery, then insert the battery.

When inserting the battery, always ensure that its (+/-) polarity is correct. Replace the battery compartment cover and twist it clockwise until it stops.

Switching trimmer on and off:

Before use, remove the protective cap. Push in the safety button while sliding up to turn ON or push down to switch off the appliance.

Using the nose/ear hair trimmer attachment

Remove the protective cap of the nose / ear hair trimmer attachment (1); press the switch-on safety button while sliding the On / Off switch (5) up. The trimmer is now rotating and you can start trimming your nose or ear hair. The integrated light will help you see where you are trimming.

Using the beard/sideburn trimmer

Switch off the appliance. Remove the nose/ear hair trimmer attachment from the appliance by twisting it counter clockwise. Attach the beard/sideburn trimmer by twisting it clockwise while pressing it onto the housing. Pull the beard/sideburn attachment across your skin top to bottom on a flat angle without using pressure.

WARNING! Risk of injury



Do not pull the appliance from the bottom to the top and or sideways along your skin, this might lead to cutting injuries.

Using the eyebrow trimmer attachment

Switch off the appliance. Remove the nose/ear hair trimmer attachment from the appliance by twisting it counter clockwise.

Attach the eyebrow trimmer by twisting it clockwise while pressing it onto the housing.

CAUTION! Do not touch the opening of the blade housing (8) when attaching and detaching the attachment. Unintentional opening could cause the blades to fall out. When you have opened the blade housing, the drive shaft and shaft opening of the lower, longer blade must interlock.

Place the eyebrow trimmer close to the skin and carefully move across the excess tiny hair. In order to prevent unpleasant results, do not remove too much hair at once.

NOTE: Clean your skin before shaving, in the case of any nicks or small cuts keep the area clean to avoid infection or inflammation.

CAUTION! Material Damage!



- *When cleaning the appliance, ensure that the lid of the battery compartment / bottom of the appliance is tightly closed.*
- *Never immerse the appliance in water or any other liquid.*



Cleaning & Storage 3 in 1 Grooming Set

Cleaning the nose/ear hair trimmer attachment

When the appliance is switched off hold it with the cutting head pointing up. To clean the nose / ear hair trimmer attachment (3), remove it upwards by twisting it counter-clockwise; then rinse it thoroughly under running water. When completely dry, replace it by twisting it on clockwise.

Cleaning the beard/sideburn attachment

If the beard/sideburn attachment is attached, remove it and place the nose / ear hair trimmer attachment on. Then put on protective cap. Clean the appliance only by using a dry cloth. You can clean the beard/sideburn attachment by using the cleaning brush.

Give a drop of oil on the blade and switch on the device for a short time, afterwards switch it off again. Using a soft cloth, wipe off the surplus oil, if necessary. Only use acid-free oil, such as e.g. sewing machine oil.

NOTE: If you think the beard/sideburn attachment is running slowly, you can open it in order to clean it. Using the cleaning brush, remove any hair remnants from the blade. Clean the blade under running water and let it dry completely. Afterwards, apply some oil to protect the blade.

Cleaning the eyebrow trimmer attachment

If the eyebrow trimmer attachment is attached, remove it and place the nose / ear hair trimmer attachment on. Then put on protective cap. Clean the appliance only by using a dry cloth. You can clean the eyebrow trimmer attachment by using the cleaning brush enclosed in the scope of delivery.

NOTE: If you think the eyebrow trimmer attachment is running slowly, you can open it in order to clean it. Using the cleaning brush, remove any hair remnants from the blade, but do not take the blade from its holder.

Storage

After use and cleaning, place appliance and attachments into the supplied storage stand (10).

NOTE: Remove the battery if you do not intend to use the appliance for a month or more. This will protect your appliance from damage caused by leaking batteries.



Fault	Solution
No function	Check that the battery is installed correctly and has sufficient charge
The contour attachment runs slowly	Make sure the attachment has been cleaned and oiled properly
The eyebrow trimmer attachment runs slowly	Make sure the attachment has been cleaned and oiled properly

If you are experiencing a fault which is not listed here, please do not hesitate to contact our Customer Care team.

Disposal

At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Observe any local regulations regarding the disposal of waste products. Contact your local authorities for advise on recycling facilities in your area.



3 IN 1 GROOMING SET

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:

Balco Brands Pty Ltd

PO Box 537 Bayswater Business Centre, Victoria, Australia

1300 663 907 - Hours: Mon-Fri 8:30am - 6:00pm AEST

customercare@balcobrands.com

AFTER SALES SUPPORT

1300 663 907

customercare@balcobrands.com

MODEL: AP200017 PRODUCT CODE: 707138 08/2021



After Sales
Support

Ph. 1300 663 907
customercare@balcobrands.com