 


BAUHN®

SELFIE GIMBAL

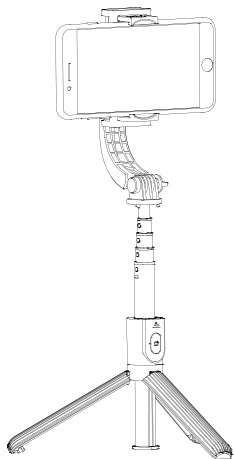

USER GUIDE

HE210254
12/21


Safety Instructions

- CAUTION: No parts of the Selfie Gimbal are user serviceable. Do not disassemble any part of the remote
- CAUTION: Risk of explosion
- If the battery is replaced by an incorrect type.
- If the battery is subjected to high or low extreme temperatures during use, storage or transportation.
- If the battery is subjected to low air pressure at high altitude.
- Replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types).
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- CAUTION: Do not ingest battery, chemical burn hazard
This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death
- Keep new and used batteries away from children
- If the battery compartment does not close securely, stop using the product and keep it away from children
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention
- Keep away from liquids, oils, petrol, and all chemicals
- Do not exposure to heat sources
- Never add any attachments and/or equipment without the approval of the manufacturer
- Keep away from children
- Supervise young children to ensure they do not play with the product



Product Overview

1. Phone cradle
2. Wing nut
3. Extension pole
4. Bluetooth remote
5. Tripod
6. LED indicator light
7. Micro USB charging port
8. Power button
9. Gimbal motor
10. Cradle lock

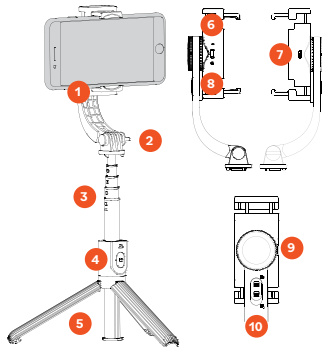

Technical information


- Bluetooth 4.2
- Transmission distance: Up to 10m
- 450mAh lithium battery
- Input Rating: 5V d.c. 1A

Usage

Charging the gimbal

When battery in the gimbal is low the LED indicator light will start flashing red. We recommend that you charge your gimbal fully before your first use (approximately 3 hours for a full charge).

1. Connect the micro USB end of the cable to the micro USB port and the other end of the cable to a computer or a USB adaptor (computer and USB adaptor not included)

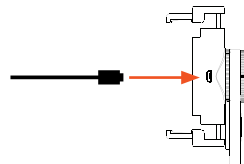

2. The indicator light will stay red to show that the gimbal is charging
3. Once the gimbal is fully charged the indicator light will turn off, unplug the charging cable and your gimbal is ready for use

Unfold the gimbal

1. Unscrew the wing nut
2. Unfold the gimbal and then tighten the wing nut

Usage

Pairing your mobile device with the Bluetooth remote

1. Press the remote button for 4 seconds to turn the power on. A small LED light will flash on the remote to indicate pairing
2. Turn on Bluetooth on your mobile phone, search and pair with "Gimbal Selfie"

NOTE: Make sure your mobile is visible to other devices for the first pairing

3. The LED indicator will stop flashing after pairing has been successful

NOTE:

- The remote control will automatically shut down after 5 minutes if not paired
- The remote control will automatically sleep after 10 mins without any operation and auto shut down after another 10 mins if not used
- Long press the remote button to power off. The LED indicator will flash 3 times then the remote control will shut down
- Taking a photo: When the Bluetooth remote is connected to the mobile phone, short press of the camera button and the blue light will flash

Usage

How to use the gimbal


1. Ensure that the phone cradle is not locked, open clasp and place your phone in the cradle and make sure that your phone is in the centre
2. After clamping the phone and keeping the phone in a neutral position, press and hold the gimbal power button for 5 seconds to start up
 - a. The stabiliser will activate and configure itself
3. The gimbal can be used with the extension pole either retracted or extended (Best used with up to 3 telescopic rods extended (within 50cm))
4. Press and hold for 3 seconds to shut down

Changing the orientation of the phone in gimbal mode

1. Click the gimbal power button once to rotate the phone cradle clockwise or double click to rotate counter-clockwise

NOTE:

- Ensure the cradle is not in the lock position before using the gimbal.
- Do not force the gimbal into into position. It will automatically rotate for you when you press the power button.

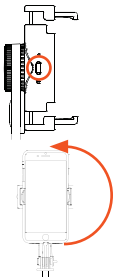


Usage

How to open the tripod

When the gimbal mode is turned off:

1. Unscrew the wing nut
2. Unfold the gimbal and then tighten the wing nut
3. Lock the cradle
4. At the handle, open the legs outwards to their maximum for stability

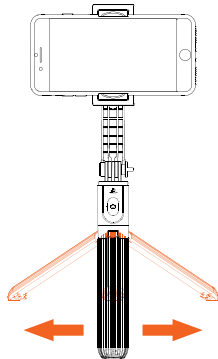

NOTE:

- Please ensure that the middle pole is touching the ground to help with stabilisation.
- We do not recommend extending the pole height past the warning label as this could cause the tripod to become unstable.

Usage

How to use as a selfie stick

When the gimbal mode is turned off:

1. Unscrew the wing nut
2. Unfold the gimbal and then tighten the wing nut
3. Lock the cradle
4. Extend pole

NOTE:

- You can change the direction of the phone cradle if needed by unlocking the phone cradle and manually moving it.
- DO NOT move the phone cradle when it is locked as this can damage or break the lock.

Reminder

- The selfie gimbal is compatible with Android 4.2.2, Android devices and iOS 5.0 or above on iPhone
- When using the phone clamp please ensure that the phone is pressed against the back of the phone clamp
- Gimbal mode: best used with up to 3 telescopic rods extended (within 50cm)
- Selfie stick mode: best used with up to 5 telescopic rods extended (within 70cm)
- CAUTION: No parts of the Selfie Gimbal are user serviceable. Do not disassemble any part of the remote



BAUHN[®]
SELFIE GIMBAL

Warranty Details

REGISTER YOUR PURCHASE AT

www.aldi.com.au/en/about-aldi/product-registration/ TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



BAUHN[®]
SELFIE GIMBAL

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:

Balco Brands Pty Ltd
PO Box 537 Bayswater Business Centre, Victoria, Australia
1300 663 907 - Hours: Mon-Fri 8:30am - 6:00pm AEST
customercare@balcobrands.com

AFTER SALES SUPPORT

 1300 663 907

 customercare@balcobrands.com

MODEL: HE210254

PRODUCT CODE: XXX 12/2021

1
YEAR WARRANTY