

**MAXIMUS**  
BY  
ViSAGE™

**ELECTRIC  
SHAVER**

WITH  
ROTATING HEAD  
TECHNOLOGY



# Electric Shaver

Model Number: AP160365

Product Number: 709533

**INSTRUCTION MANUAL**

Version 1.0 - Issued 22/02/22



# Welcome

Congratulations on choosing to buy a Visage® product. All products brought to you by Visage® are manufactured to the highest standards of performance and safety, and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty.

We hope you will enjoy using your purchase for many years to come.

---

## AFTER SALES SUPPORT



 [customercare@balcobrands.com](mailto:customercare@balcobrands.com)

MODEL: AP160365 PRODUCT CODE: 709533 08/2022



# Contents

<b>Welcome</b>	2
<b>Warranty Details</b>	4
<b>General Information &amp; Safety Instructions</b>	6
<b>Features</b>	8
<b>Technical Specifications</b>	8
<b>Assembly &amp; Parts List</b>	9
<b>Getting Started</b>	10
Before First Use	10
Charging	10
To Charge (Using Charging Base)	10
Direct Charging	10
<b>Instructions</b>	11
Shaving	11
Shaving Tips	11
Operation	11
<b>Cleaning &amp; Storage</b>	12
Daily Cleaning	12
Storage	12
<b>FAQ</b>	13
<b>Disposal</b>	13
<b>Repair and Refurbished Goods or Parts Notice</b>	14
<b>Notes</b>	15





**ViSAGE®**

**ELECTRIC SHAVER**

# Warranty Details

---

REGISTER YOUR PURCHASE AT [www.aldi.com.au/en/about-aldi/product-registration/](http://www.aldi.com.au/en/about-aldi/product-registration/) TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION



---

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

---

**AFTER SALES SUPPORT**

  1300 663 907

 [customercare@balcobrands.com](mailto:customercare@balcobrands.com)

MODEL: AP160365 PRODUCT CODE: 709533 08/2022



# Warranty Note

**If you experience any issues with this product, or its performance is not what you had expected, please contact us at Balco Brands**

**It is likely that we can resolve any problems for you via phone or email.**

**We can be reached on:**

**Phone: 1300 663 907 (Mon - Fri; 8:30am - 6:00pm EST)**

**Email: [customercare@balcobrands.com](mailto:customercare@balcobrands.com)**

**Web: [www.balcobrands.com](http://www.balcobrands.com)**

# General Information & Safety Instructions

Read this manual thoroughly before first use and keep it in a safe place for future reference, along with warranty card, purchase receipt and packaging. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

Follow all instructions and take notice of all warnings to reduce risk of fire or electric shock.

- Do not use in dusty conditions
- Do not drop the Electric Shaver. Dropping or rough use of the unit may cause damage
- Do not place near strong magnets or strong electric currents
- If the Electric Shaver is not in use, turn off and unplug from any power source
- Do not attempt to repair, open or alter any components of the Electric Shaver. In the case of improper usage or if you have opened, altered and repaired the product yourself, all guarantees are void
- The supplier does not accept responsibility for additional or consequential damage other than covered by legal product responsibility
- The supplier is not responsible for the end use of this product including any improper use or when used for purposes that are not specified
- The water resistance rating of the shaver is IPX7, which means it is suitable for cleaning under an open water tap



Suitable for cleaning under an open water tap

This product complies with AS/NZS CISPR 14.1:2013, AS/NZS 60335.1 and AS/NZS 60335.2.8

---

#### AFTER SALES SUPPORT



 [customercare@balcobrands.com](mailto:customercare@balcobrands.com)

MODEL: AP160365 PRODUCT CODE: 709533 08/2022



## General Safety Warnings

1. Read all instructions before operating the Electric Shaver for the first time.
2. This product is intended for indoor domestic use and is not intended for commercial, trade or industrial applications.
3. Do not use the appliance for other than intended or specified purposes.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Always read all instructions before using the appliance.
5. Do not place or store the appliance where it can fall or be pulled into a sink or bath.
6. Unless charging, always unplug this appliance from the power point immediately after use and after charging.
7. Unplug the appliance before cleaning.
8. Keep the Electric Shaver and USB charging cable away from heat sources and hot surfaces.
9. Always protect the USB charging cable from undue flexing and wearing – do not allow the cable to hang off edge of the counter or table.
10. Do not use this appliance with an external timer or separate remote-control system of any kind.
11. Charge, use and store the appliance between a temperature of 0°C and 35°C.
12. Do not operate with aerosol spray products or where oxygen is being administered.
13. Only for use on facial hair.
14. Do not use if there is any damage to the blades or tracks as it may cause injury.
15. Do not insert any object into any opening in the appliance.
16. Do **NOT** use the shaver in the shower if it is plugged in
17. **WARNING:** Detach the hand-held part from the supply cord before cleaning it in water
18. The appliance contains battery that are only replaceable by skilled person

---

### AFTER SALES SUPPORT



 [customercare@balcobrands.com](mailto:customercare@balcobrands.com)

MODEL: AP160365 PRODUCT CODE: 709533 08/2022

1

YEAR WARRANTY





# Assembly & Parts List



1. Protective Cap
2. Shaving Heads
3. ON/OFF Button
4. Charging Displays
5. USB Charging Cord Slot (Base)

6. Charging Base
7. USB Charging Cord Slot (Shaver)
8. Travel Bag
9. Cleaning Brush
10. USB Charging Cord\*

11. Instruction Manual\*
12. Quick Start Guide\*
13. Warranty Card\*

\* Not pictured

## AFTER SALES SUPPORT



 [customercare@balcobrands.com](mailto:customercare@balcobrands.com)

MODEL: AP160365 PRODUCT CODE: 709533 08/2022



# Getting Started

## Before First Use

Remove any packaging material and promotional labels before using your shaver for the first time. Fully unwind the USB power cord and inspect it for damage. Do not use the appliance if any part has been damaged. In case of damage, contact our after sales support line for advice on replacement or return.

## Charging

Before first use of your Electric Shaver it is recommended to fully charge the unit. The shaver has an approximate charge time of 1 hour and running time of 1 hour.

Charge Display	Status
Green Power Symbol	Fully Charged
Flashing Red Power Symbol	Charge Required
Red Charge Symbol	Charging



## To Charge (Using Charging Base)

1. Unfold the charging base so it is able to stand on its own.
2. Insert the USB charging cord into the charging base, then insert the USB end into a USB power source (not included) and turn ON.
3. Place your shaver onto the charging base, ensuring it slots into the charging pins.

**NOTE:** Ensure the shaver is safely located away from any water or any other liquids.

4. The charge icon on the shaver will turn red indicating the shaver is charging.
5. Once charging is complete, the power indicator illuminates green.
6. Turn OFF the power point.

**NOTE:** Unit may become warm during charging, this is normal.

## Direct Charging

1. Insert the USB charging cord into the base of the shaver body.
2. Insert the USB end into a USB power source (not included) and turn ON.
3. The charge icon on the shaver will turn red indicating the shaver is charging.
4. Once charging is complete, the power indicator illuminates green.
5. Turn OFF the power point.

## AFTER SALES SUPPORT



 [customercare@balcobrands.com](mailto:customercare@balcobrands.com)

MODEL: AP160365 PRODUCT CODE: 709533 08/2022



# Instructions

## Shaving

Initial use of the Electric Shaver may involve an adjustment period for your face as it gets used to an electric shaver. If changing from manual shaving this may be more noticeable as the technique and cutting style is different. Allow 2-4 weeks to adjust to this method.

## Shaving Tips

Read the following tips before use:

- Hold the shaver at a 90° angle to your face to ensure the three heads' foils have equal contact.
- Stretch the skin when shaving to provide a consistent surface to ensure the hairs enter the cutting tracks.
- Avoid pressing the shaver hard against your skin to prevent irritation and potential damage to rotary foil heads.
- Use a slow circular motion whilst shaving.

**WARNING: DO NOT USE THE SHAVER IN THE SHOWER IF YOU HAVE IT PLUGGED IN.**

- If dry shaving, ensure your skin is dry and free from oils.
- If shaving with gel or foam;
  - Do not use the shaver in a wet environment while it is plugged in.
  - Follow the application instructions mentioned on your gel or foam.
  - Regularly rinse shaver head under water whilst shaving to avoid residue build up.
  - Thoroughly clean the shaver head of all gel or foam after shaving, following the cleaning and care instructions.

## Operation

1. Remove the protective cap.
2. Turn the shaver on by sliding the ON/OFF button upwards.
3. The ON display will illuminate.

**NOTE:** If your shaver does not turn on, the battery may be discharged. Follow instructions on page 10 to recharge the battery.

4. With the shaver at a 90° angle to your face, stretch the skin and using a circular motion proceed to shave the desired area.

**WARNING:** Do not open head unit when shaver is turned on.

5. Slide the ON/OFF button down to turn the shaver OFF when finished.

---

### AFTER SALES SUPPORT



 [customercare@balcobrands.com](mailto:customercare@balcobrands.com)

MODEL: AP160365 PRODUCT CODE: 709533 08/2022



# Cleaning & Storage

Regular cleaning of the Electric Shaver is very important to continue optimal performance of the appliance. Take care when cleaning the internal parts of the shaver, they have been precision made and any rough handling could easily result in damage and affect performance. Ensure before performing any cleaning the shaver is turned OFF and unplugged from any power point.

## Daily Cleaning

Perform the following after every use.

1. Ensure the unit is turned OFF and is unplugged from any power point.
2. Gently pull up the three shaver heads one by one.
3. Shake or blow out any hairs. Use the included cleaning brush to remove any stubborn hairs.
4. Lightly rinse the shaver head under running water.
5. Allow to air dry as using a towel may damage the blades.
6. Replace the shaving head when dry.

**NOTE:** Be careful not to shake too vigorously. Do not bend the shaving head backwards as this may damage the hinge.



## Storage

If storing your shaver for an extended period of time (>1 week), it is recommended to ensure the shaver is charged to approximately 40%. Follow the steps in 'Charging' and keep the shaver in a cool, dry place.

---

### AFTER SALES SUPPORT



 [customercare@balcobrands.com](mailto:customercare@balcobrands.com)

MODEL: AP160365 PRODUCT CODE: 709533 08/2022

1

YEAR WARRANTY

# FAQ

Problem	Solution
Why isn't my shaver turning ON?	<ul style="list-style-type: none"><li>• Ensure the battery is fully charged, follow instructions listed on page 10.</li><li>• Slide the ON/OFF button upwards.</li></ul>
The shaver head won't close.	<ul style="list-style-type: none"><li>• Please check that all parts are assembled correctly. Refer to cleaning instructions for details on page 12.</li></ul>
The shaver isn't removing any hair.	<ul style="list-style-type: none"><li>• The blades may be affected by hair or other particles. Ensure you regularly clean the shaver according to the instructions listed on page 12.</li></ul>

# Disposal

At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.

If you require another copy of this instruction manual, please contact [customer-care@balcobrands.com](mailto:customer-care@balcobrands.com) to obtain an electronic copy.

---

#### AFTER SALES SUPPORT



 [customer-care@balcobrands.com](mailto:customer-care@balcobrands.com)

MODEL: AP160365 PRODUCT CODE: 709533 08/2022





ViSAGE®

ELECTRIC SHAVER

# Repair and Refurbished Goods or Parts Notice

---

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

**We recommend you save this data elsewhere prior to sending the product for repair.**

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

**Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.**

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:

Balco Brands Pty Ltd



PO Box 537 Bayswater Business Centre, Victoria, Australia

1300 663 907 - Hours: Mon-Fri 8:30am - 6:00pm AEST

customercare@balcobrands.com

---

AFTER SALES SUPPORT

  1300 663 907

 customercare@balcobrands.com

MODEL: AP160365 PRODUCT CODE: 709533 08/2022





**MAXIMUS**

BY

**ViSAGE®**