User manual

5-in-1 Alarm Clock Speaker

BAUHN

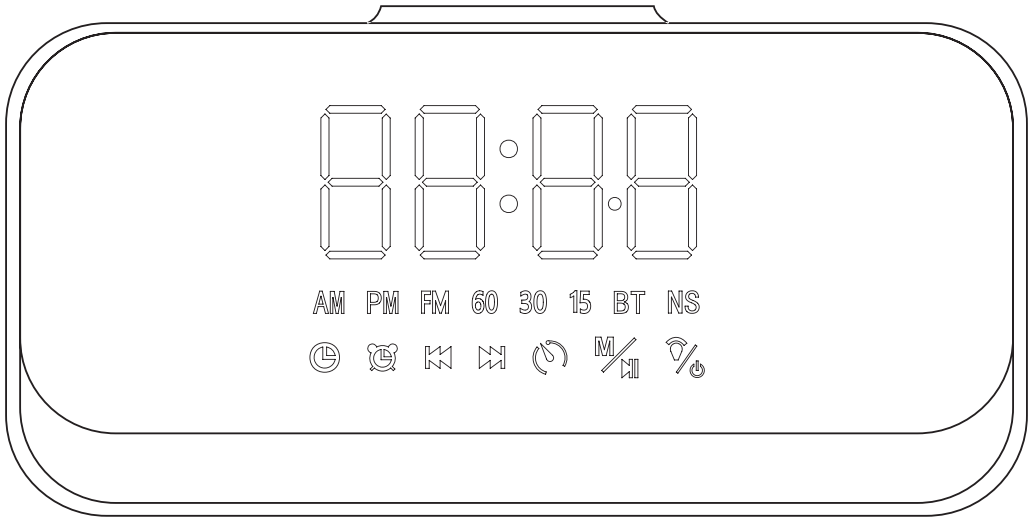

AFTER SALES SUPPORT

W1

AU 1300 663 907

customercare@balcobrands.com

MODEL: CE260033
Sellable ID: 770112

01/2027

1 YEAR WARRANTY

Contents

1 Safety Warnings 4

2 In the Box 5

3 Product Overview 6

4 Charging 7

5 Power On/Off 7

6 Pairing 7

6.1 Bluetooth Pairing 7

7 Function 8

7.1 Light Function 8
7.2 Music Playback Controls 8
7.3 Clock Settings 8
7.4 Alarm Settings 9
7.5 Sleep Timer 9
7.6 White Noise Mode 10
7.7 FM Radio 10
7.8 Wireless Charging 10
7.9 Answering Calls 10

8 microSD Card / USB Drive / AUX Playback 11

8.1 microSD Card Playback 11
8.2 USB Drive Playback 11
8.3 AUX Playback 11
8.4 Playback Controls 11

9 Specifications 11

10 Storage, Cleaning and Maintenance 12

11 After Sale Support 12

1 Safety Warnings

- Use only a certified adapter.
- Do not use higher voltage adapters as this may cause damage or risk of fire.
- Do not use a damaged cable or power adapter.
- Do not modify or disassemble the power supply.
- Do not short-circuit the power terminals.
- Do not insert metal objects into the DC port.
- Do not disassemble or modify the product.
- Do not expose to fire or excessive heat.
- Do not place near heat sources such as radiators or direct sunlight.
- Do not expose to water or moisture.
- Keep the product out of reach of young children when connected to power.
- Do not stare directly into the LED light for long periods.
- Do not use high volume for extended periods to avoid potential hearing damage.
- Place the product on a stable surface to avoid falling.
- Do not dispose of this product in household waste.
- Dispose according to local electronic waste regulations.
- This product contains a non-replaceable battery.

⚠ CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

» Do not dispose of a battery into fire or a hot oven, or mechanically crush or cut a battery, that can result in an explosion.
» Do not leave a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
» Do not expose the battery to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
» Do not used in low air pressure at high altitude condition.
» Do not used in low extreme temperatures.

2 In the Box

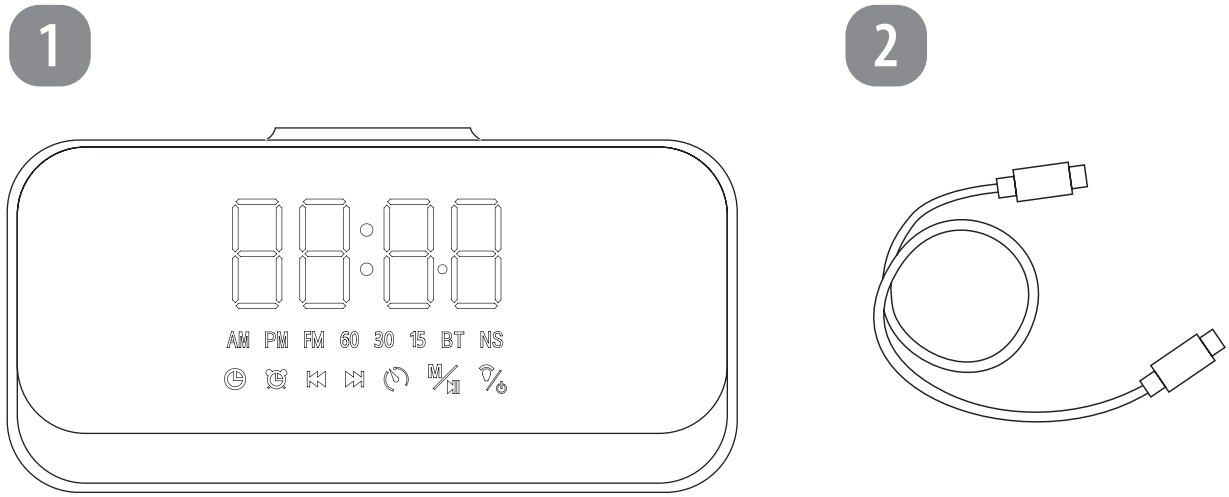

1. 5-in-1 Alarm Clock Speaker
2. USB Type-C Charging Cable
3. User Guide*
4. Warranty Card*

*Not pictured

3 Product Overview

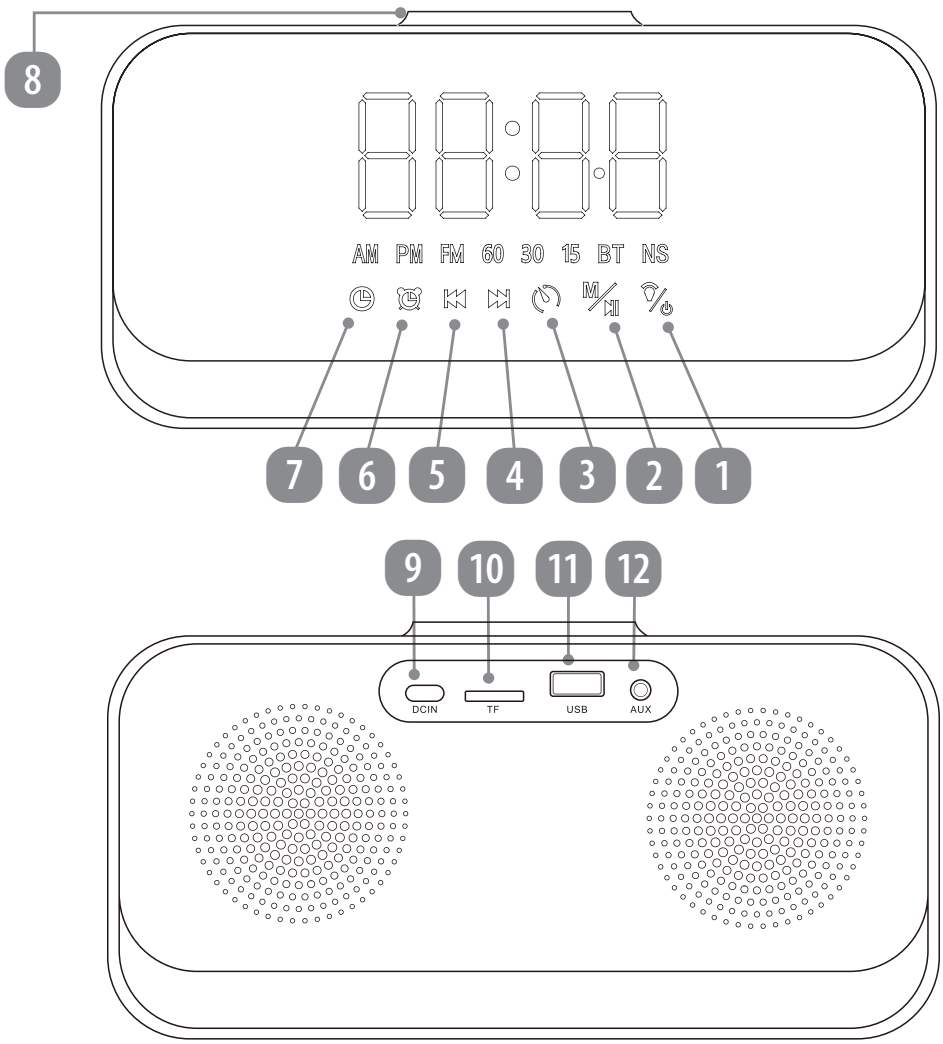

1. Power/Light Button
2. Mode/Play-Pause Button
3. Sleep Timer Button (15 / 30 / 60 min)
4. Next Track Button
5. Previous Track Button
6. Alarm Button
7. Clock Button
8. Wireless Charging Panel
9. DC Input Port
10. microSD Card Slot
11. USB-A Port
12. AUX IN Port

4 Charging

Charge the clock using the supplied USB Type-C cable.

1. Connect one end of the USB Type-C charging cable to the DC Input Port on the back of the clock.
2. Connect the other end of the USB Type-C charging cable to a suitable USB power source to begin charging.

NOTE

» Charge the device with a DC 9V/3A (Max.) power supply.
» Use only the original USB-C charging cable to avoid any damage.
» Fully charge the clock before first use.

5 Power On/Off

- Connect one end of the USB Type-C charging cable to the DC Input Port, then connect the other end to a suitable power source.
- Press and hold the Power Button for approximately 2 seconds to turn the clock on.
- The light function turns on by default after startup.
- Press and hold the Power Button again to turn the clock off.

6 Pairing

6.1 Bluetooth Pairing

1. Turn on the clock. It automatically enters Bluetooth mode.
2. Enable Bluetooth on your device.
3. Select **"CE260033"** from the device list.
4. After successful pairing, a voice prompt will confirm the connection.

7 Function

7.1 Light Function

The clock features three lighting effects.

- The warm light mode is activated by default when powered on.
- Short press the Light Button to switch between lighting effects.
- Double press the Light Button to quickly turn the lights off.

7.2 Music Playback Controls

Play/Pause Music	Short press Play/Pause Button M
Next Track	Short press Next Track Button ▶▶I
Previous Track	Short press Previous Track Button I◀◀
Volume Up	Long press Next Track Button ▶▶I
Volume Down	Long press Previous Track Button I◀◀

7.3 Clock Settings

1. Press the Clock Button to enter the clock setting mode.
2. Adjust the hour using the Previous I◀◀ or Next Track Button ▶▶I.
3. Press the Clock Button again to adjust the minutes.
4. Use the Previous I◀◀ or Next Track Button ▶▶I to set the minutes.
5. Press the Clock Button to confirm.

12-HOUR FORMAT

» Press and hold the Clock Button to switch the display to AM/PM format.

7.4 Alarm Settings

7.4.1 Setting the Alarm

1. Press the Alarm Button to enter alarm setting mode.
2. Adjust the alarm hour using the Previous ⏮ or Next Track Button ⏭.
3. Press the Alarm Button again to adjust the minutes, then use the Previous ⏮ or Next Track Button ⏭ to set the desired time.
4. Press the Alarm Button once more to select your preferred alarm tone.
5. Seven alarm tones are available. Use the Previous ⏮ or Next Track Button ⏭ to browse and select the desired tone.
6. Press the Alarm Button to save and activate the alarm.

NOTE

» The alarm indicator will appear on the display after successful activation.

7.4.2 Turning Off the Alarm

- **When the alarm sounds:** Press any button to stop the alarm.
- **Snooze mode:** When the alarm sounds, if no action is taken, it will continue sounding for 1 minute and then automatically enter snooze mode. After 10 minutes, the alarm will sound again. Snooze mode will activate only once.

NOTE

» The alarm will still sound even when the clock is powered off.

7.4.3 Cancelling the Alarm

Press and hold the Alarm Button until the alarm indicator disappears from the display.

7.5 Sleep Timer

Short press the Sleep Timer Button to select the auto-off timer:

- 15 minutes
- 30 minutes
- 60 minutes
- Off

The clock will automatically switch off after the selected time.

7.6 White Noise Mode

1. Press and hold the Mode Button M/⏯ to switch to White Noise mode.
2. Short press the Previous ⏮ or Next Track Button ⏭ to select your preferred sleep sound.
3. Short press the Mode Button M/⏯ to pause the white noise.
4. Press and hold the Mode Button M/⏯ to exit White Noise Mode and switch to another mode.

7.7 FM Radio

1. Connect the USB Type-C charging cable to the clock to serve as the FM antenna. The other end does not need to be connected to any device.
2. Press and hold the Mode Button M/⏯ to switch to FM mode.
3. Press the Play/Pause Button M/⏯ to automatically search and save radio stations.
4. Short press the Previous ⏮ or Next Track Button ⏭ to select saved stations.
5. Press and hold the Mode Button M/⏯ again to switch off FM mode.

7.8 Wireless Charging

1. Connect the USB Type-C end of the charging cable to the DC Input Port on the clock, then connect the other end to a suitable power source.
2. Place your wireless charging-compatible device on the Wireless Charging Panel located on the top of the clock. Charging will start automatically once the device is properly aligned.

NOTE

» Remove your device from the charging panel once it is fully charged. Do not overcharge the device.

» To stop charging at any time, simply remove the device from the charging panel.

» The wireless charging function supports only mobile phones and wireless earbuds with wireless charging capability. Other devices cannot be charged.

7.9 Answering Calls

Incoming Calls	When receiving a call, briefly press the Mode Button M/⏯ to answer the call. Press and hold the Mode Button M/⏯ to reject the call.
Outgoing Calls	While making a call, briefly press the Mode Button M/⏯ once to cancel the call.
During a Call	Briefly press the Mode Button M/⏯ once to end the call. Double-press the Mode Button M/⏯ to call the last dialed number.

8 microSD Card / USB Drive / AUX Playback

8.1 microSD Card Playback

Insert a microSD card into the microSD Card Slot. The clock will automatically detect the card and begin playing the stored audio files.

8.2 USB Drive Playback

Insert a USB drive into the USB-A Port. The clock will automatically detect the drive and begin playing the stored audio files.

8.3 AUX Playback

Connect one end of the AUX cable to the AUX IN Port on the clock and the other end to your laptop, PC, or other audio source. Start playback on the connected device to play audio through the speaker.

8.4 Playback Controls

Use the playback control buttons shown below to control music playback in microSD Card and USB Drive modes.

Play/Pause Music	Short press Play/Pause Button M/⏯
Next Track	Short press Next Track Button ⏭
Previous Track	Short press Previous Track Button ⏮
Volume Up	Long press Next Track Button ⏭
Volume Down	Long press Previous Track Button ⏮

9 Specifications

- Bluetooth Version: 6.0
- Bluetooth Distance: 10m
- Operating ambient temperature: 0°C to 40°C.

10 Storage, Cleaning and Maintenance

Storage:

- Store the product in a cool, dry place away from direct sunlight and excessive heat.
- If the product will not be used for an extended period, recharge the product every 3–6 months to help maintain battery performance.

Cleaning:

- Wipe the exterior of the product with a soft, dry cloth.

Maintenance:

- No routine maintenance is required other than keeping the product clean. Do not disassemble or modify the product.

11 After Sale Support

If you experience any issues with this product or its performance is not what you had expected, please contact us at Balco Brands.

It is likely that we can resolve any problems for you via phone or email.

We can be reached on:

– **Phone:** 1300 663 907 (Mon - Fri; 8:30am - 6:00pm AEST)

– **Email:** customercare@balcobrands.com

– **Web:** www.balcobrands.com

ALDI

BAUHN®

5-IN-1 ALARM CLOCK SPEAKER

Warranty Details

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/ TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

☎ (AU) 1300 663 907

customercare@balcobrands.com

MODEL: CE260033 | SELLABLE ID: 770112 | 01/2027

1 YEAR WARRANTY

ALDI

BAUHN®

5-IN-1 ALARM CLOCK SPEAKER

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.
We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:

Balco Brands Pty Ltd

PO Box 537 Bayswater Business Centre, Victoria, Australia

1300 663 907 - Hours: Mon-Fri 8:30am - 6:00pm AEST

customercare@balcobrands.com

AFTER SALES SUPPORT

☎ (AU) 1300 663 907

customercare@balcobrands.com

MODEL: CE260033 | SELLABLE ID: 770112 | 01/2027

1 YEAR WARRANTY

ALDI guarantees that our products are developed to our stringent quality specifications. If you are not entirely satisfied with this product, please return it to your nearest ALDI store, within 60 days from the date of purchase, for a full refund or replacement, or take advantage of our after sales support by calling the supplier's Customer Service Hotline.

Bauhn® is a registered trademark of Hands (IP) Holdings Pty Ltd.

Distributed By

ALDI Stores
1 Sargents Road,
Minchinbury NSW 2770
www.aldi.com.au

Made in China

V1.2
01/2027